



# Bella 4-Slice Toaster Oven Outer Shell Replacement

This guide will help users remove the black shell of the toaster oven.

Written By: Pierce Hampton



## INTRODUCTION

Removing the black metal outer shell of the toaster is an important first step in replacing most major toaster components. This easy-to-follow guide makes it easy to remove and replace.

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Outer Shell



- Remove five 11.6 mm Phillips #2 screws from the rear of the device.

## Step 2



- Open the front glass door of the toaster oven.

## Step 3



- Locate retaining screw on the upper-middle portion of the door frame.

## Step 4



- Remove one 21.9 mm Phillips #2 retaining screw from upper-middle portion of door frame.

## Step 5



- Flip toaster onto back panel with feet facing forward.

## Step 6



- Use spudger to pry the grey rubber inserts from the black plastic feet.

## Step 7



- Remove four 13.7mm Phillips #2 screws from black plastic feet to separate the cover from the device.

## Step 8



- Lift the black outer cover off of the toaster

To reassemble your device, follow these instructions in reverse order.