



# Bella 4-Slice Toaster Oven Temperature Dial Replacement

This guide will enable users to replace the temperature dial on the Bella 4-Slice Toaster Oven.

Written By: Pierce Hampton



## INTRODUCTION

If the temperature dial fails, just follow this simple guide to replace it and fix your toaster.

### TOOLS:

- **Phillips #2 Screwdriver** (1)
- **Spudger** (1)

## Step 1 — Outer Shell



- Remove five 11.6 mm Phillips #2 screws from the rear of the device.

## Step 2



- Open the front glass door of the toaster oven.

## Step 3



- Locate retaining screw on the upper-middle portion of the door frame.

## Step 4



- Remove one 21.9 mm Phillips #2 retaining screw from upper-middle portion of door frame.

## Step 5



- Flip toaster onto back panel with feet facing forward.

## Step 6



- Use spudger to pry the grey rubber inserts from the black plastic feet.

## Step 7



- Remove four 13.7mm Phillips #2 screws from black plastic feet to separate the cover from the device.

## Step 8



- Lift the black outer cover off of the toaster

## Step 9 — Temperature Dial




- Using a plastic spudger, gently pry the black plastic temperature dial away from the face of the toaster.

## Step 10



- Remove two 5.91 mm #2 Phillips screws which secure the inner component to the toaster.

## Step 11

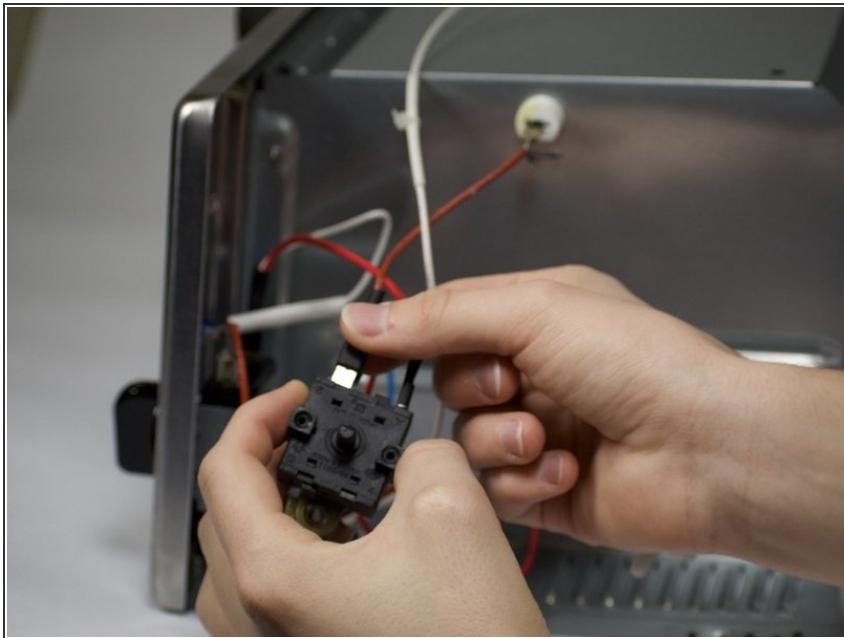


- Inside the device, unplug the red wire connecting the black plastic part of the dial to the heating element.

## Step 12




- Now unplug the other red wire from the black plastic part of the dial.

## Step 13

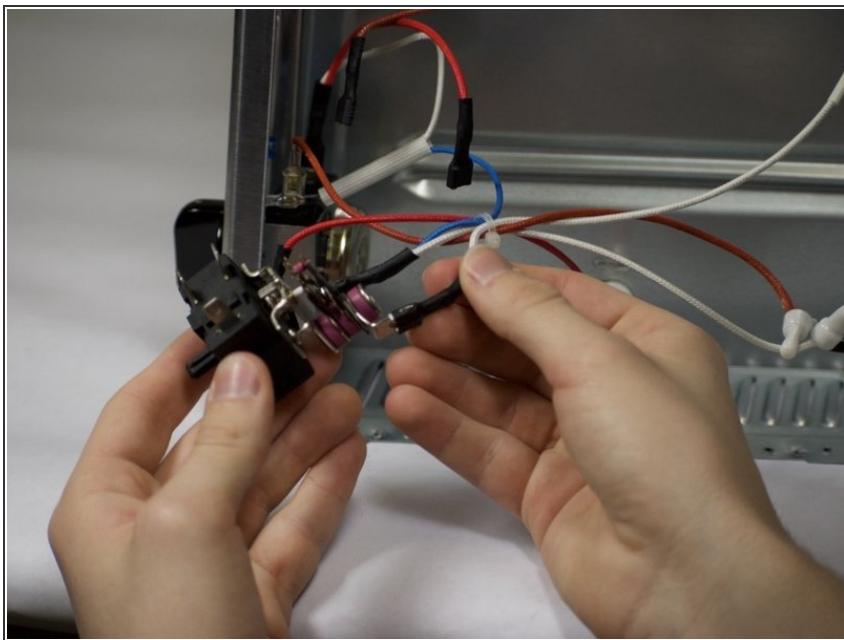

- Unplug the two white wires from the metal part of the dial.

## Step 14

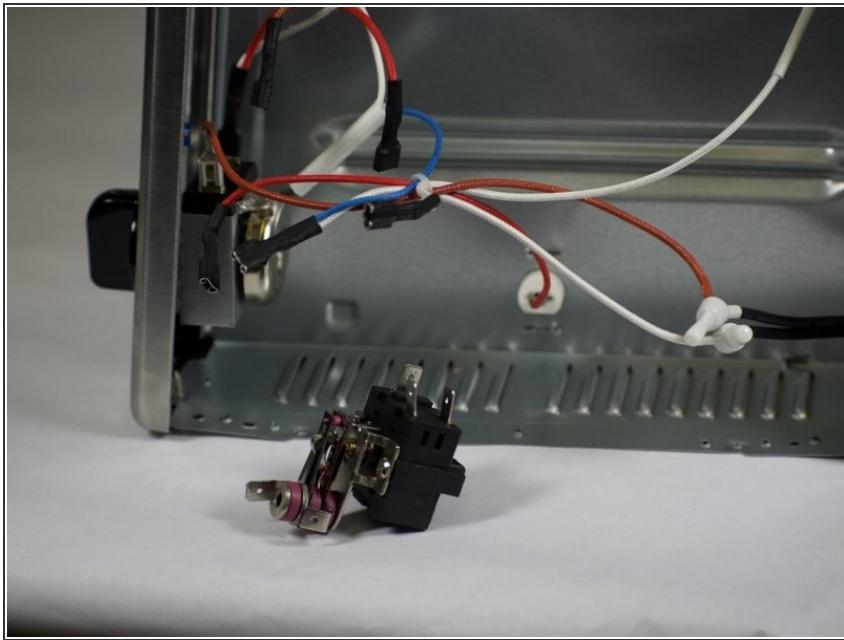

- Remove the dial from device interior.

To reassemble your device, follow these instructions in reverse order.