




Bendix Magneto Gear Replacement

Steps for replacing the gear in the Bendix Magneto.

Written By: Kelsi English

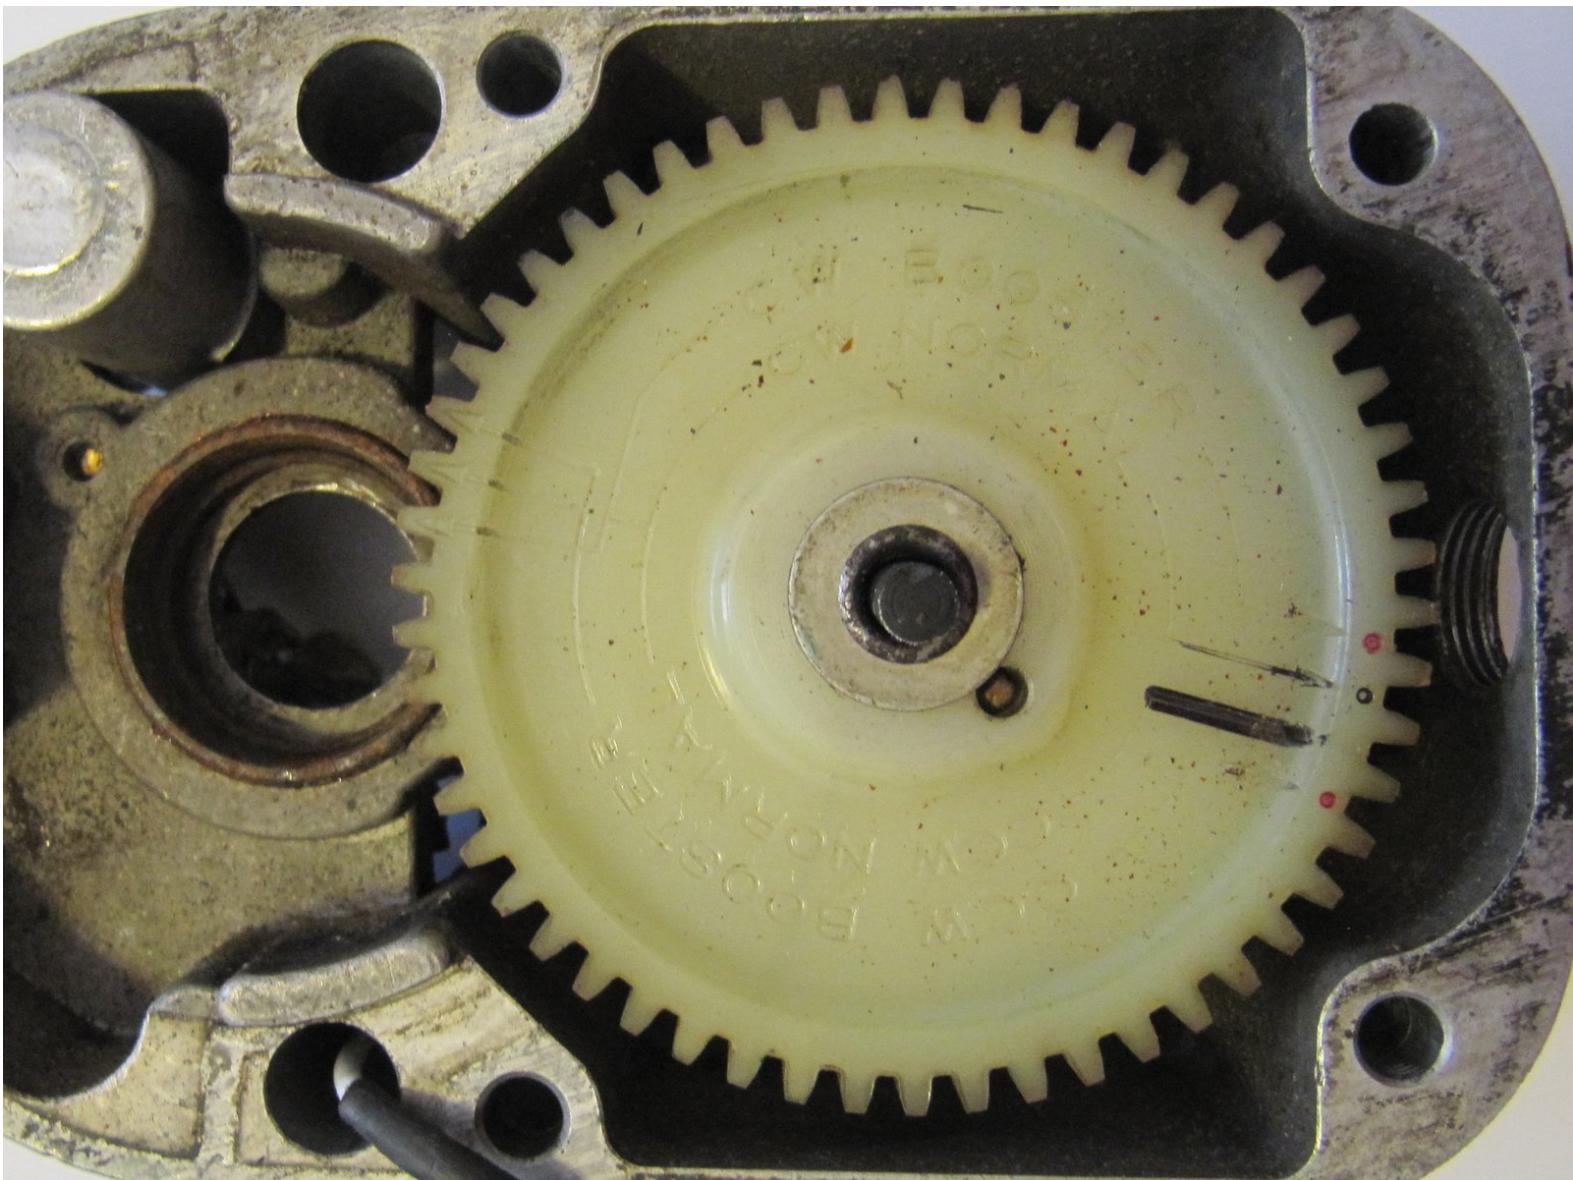


INTRODUCTION

This guide will show you how to remove the gear in the magneto. A broken gear can cause the magneto not to rotate and therefore, you cannot get the correct timing.

TOOLS:


- [Flathead Screwdriver](#) (1)
Size #2
- [Milbar snap ring plier](#) (1)

Step 1 — Gear

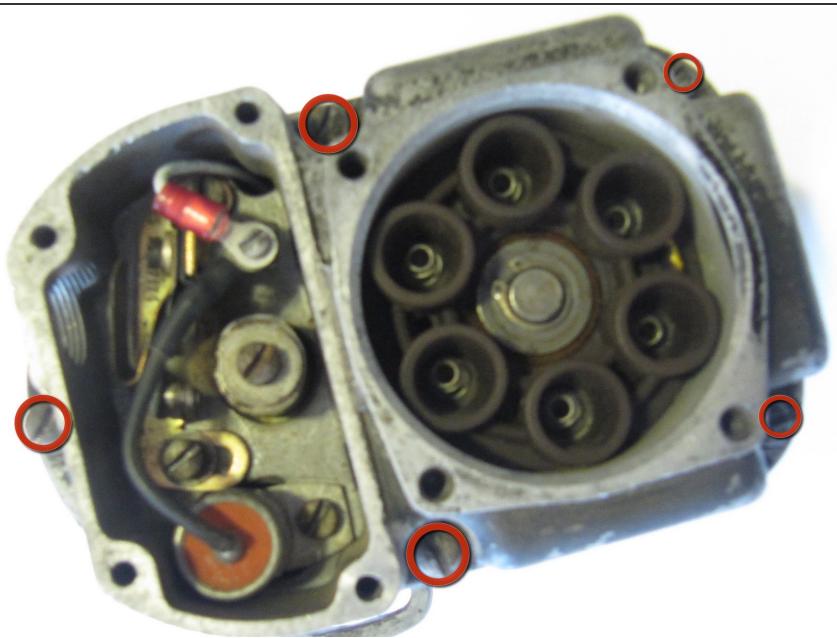


- Use a #2 Flathead screw driver to remove the five screws on the body of the magneto

Step 2

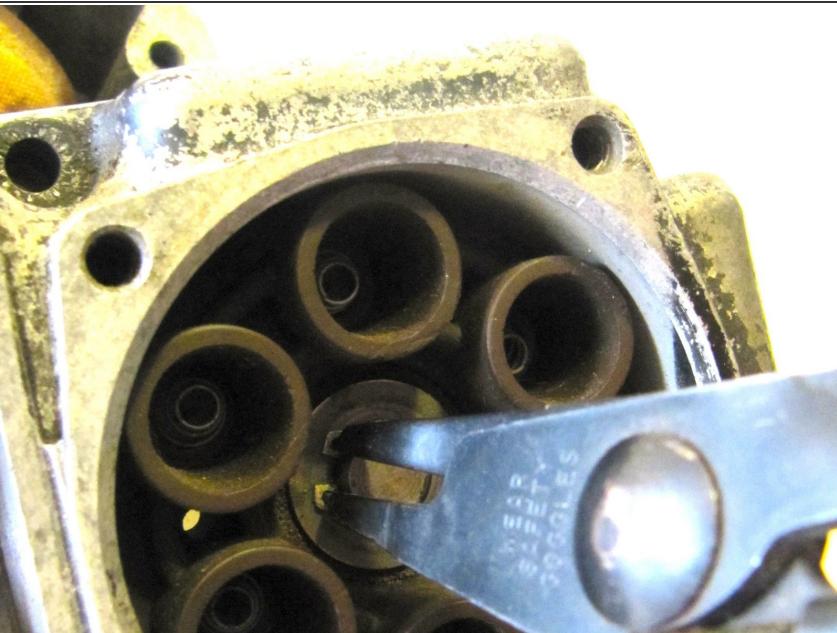

- Locate the spark plug lead.
 - Use a Milbar snap ring plier to remove the snap ring.
- i*** The snap ring can be difficult to remove. Make sure the pliers needles go into the holes of the snap ring.
- ⚠** Wear safety goggles when removing the snap ring. The snap ring can shoot out on accident.

Step 3

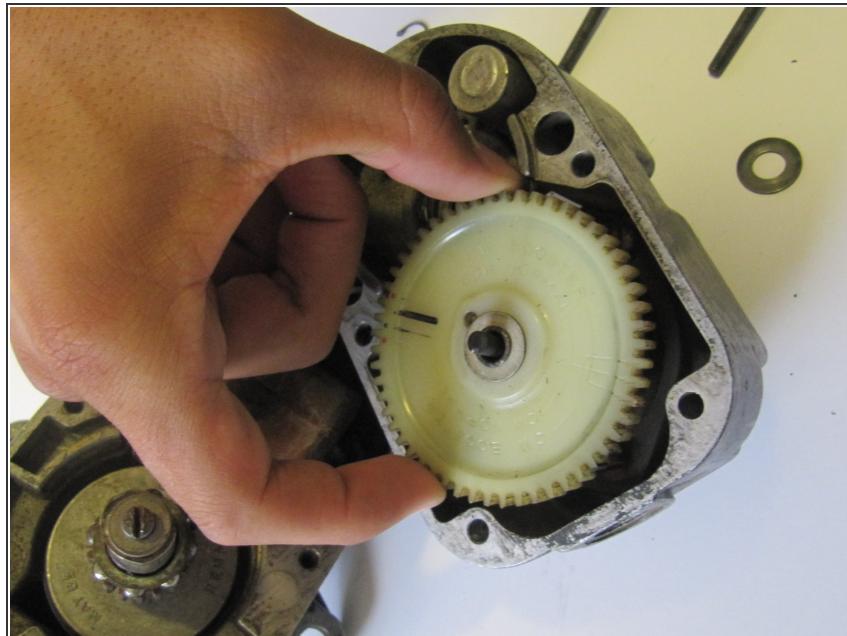

- Remove the gear to replace it.

To reassemble your device, follow these instructions in reverse order.