



Benq FP71G+ LCD Monitor Disassembly

This guide will allow you to access the Benq FP71G screen's logic board, in case you need to replace a failed capacitor, etc.

Written By: Michael Konečný



 **TOOLS:**


- Pro Tech Toolkit (1)

Step 1 — Remove the screws holding the base



- Remove the screws holding the base.

Step 2 — Slide out the base

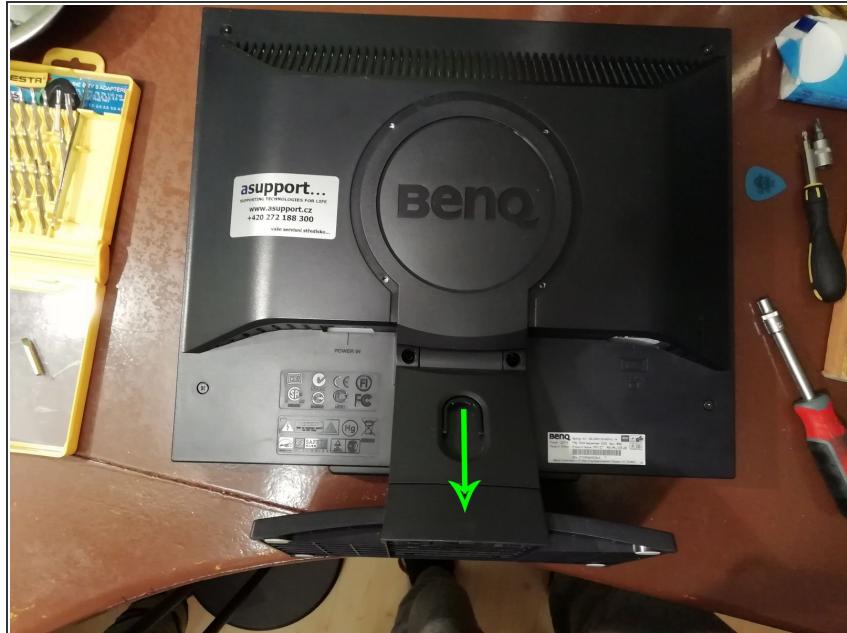

- Slide out the base

Step 3 — Remove the screws holding the back cover of the screen



- Remove the screws holding the back cover of the screen.

Step 4 — Remove the back cover



- Start by prying out the back cover using a screwdriver in the holes at the bottom.
- Continue along the bottom edge
- Then follow by the side edges all the way to the top

Step 5 — Disconnect control panel and remove VGA connector screws



- The VGA connector screws shouldn't be too hard to unscrew, if you don't have the appropriate 5 mm wrench, you can use a set of pliers.

Step 6 — Slide back the logic board cover



- Just slide it down. No need to remove the tinfoil sticker.

Step 7 — Proceed as you wish with the logic board



- If the screen is not working, you may want to look for and replace any blown capacitors.
- In my case, the two 1000 uF, 16 V electrolytes at the top right were faulty.

To reassemble your device, follow these instructions in reverse order.