



Best Budget Sandwich Maker Disassembly

This guide will give insight into the composition of the parts of a sandwich maker, and how it can be disassembled step by step.

Written By: Bas



 **TOOLS:**

- Screwdriver set (1)

Step 1 — Best Budget Sandwich Maker Disassembly




- Remove screws from cable housing and remove housing.

Step 2




- Remove screws from aesthetic handle cover and remove cover.

Step 3

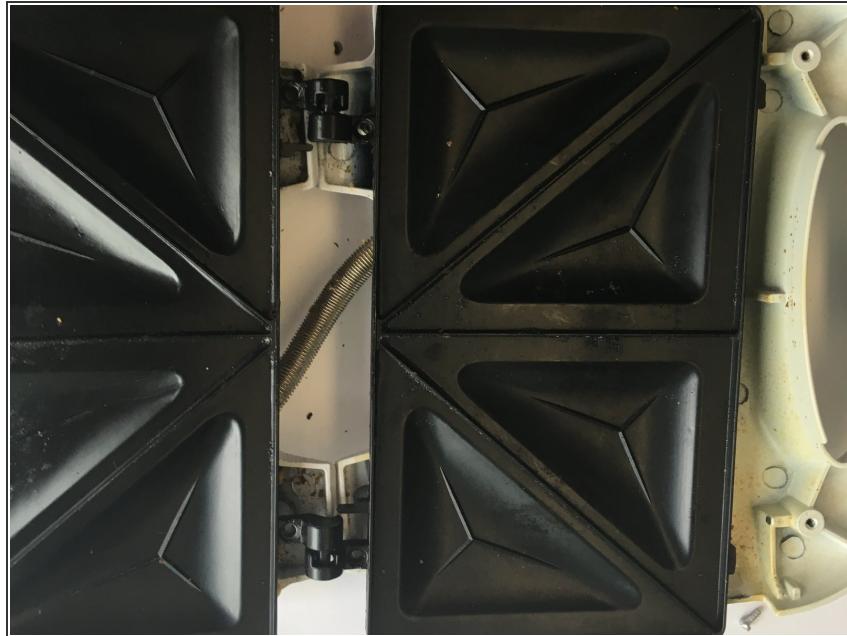

- Unscrew toasting iron from its hinges.

Step 4

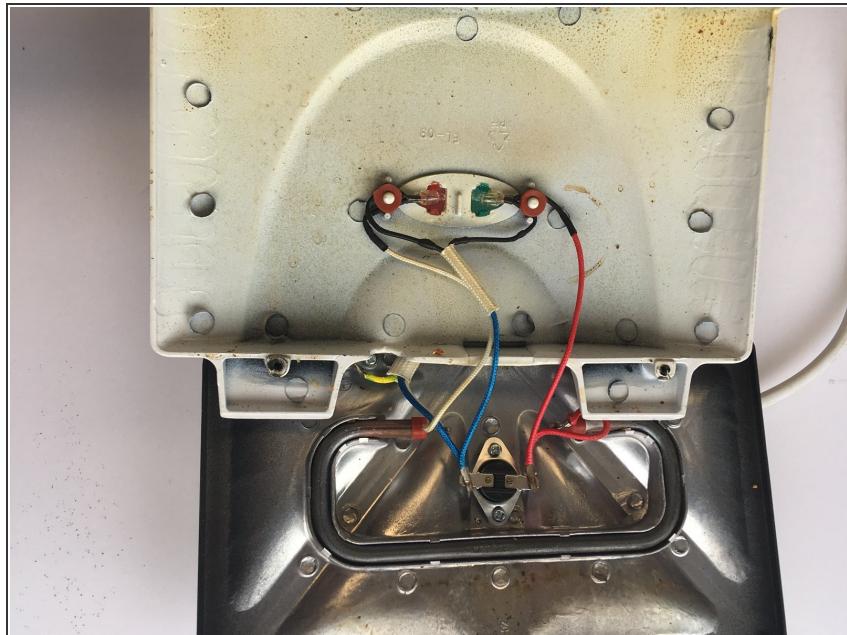


- Remove red rubber insulation rings.

Step 5




- Remove top casing.

Step 6

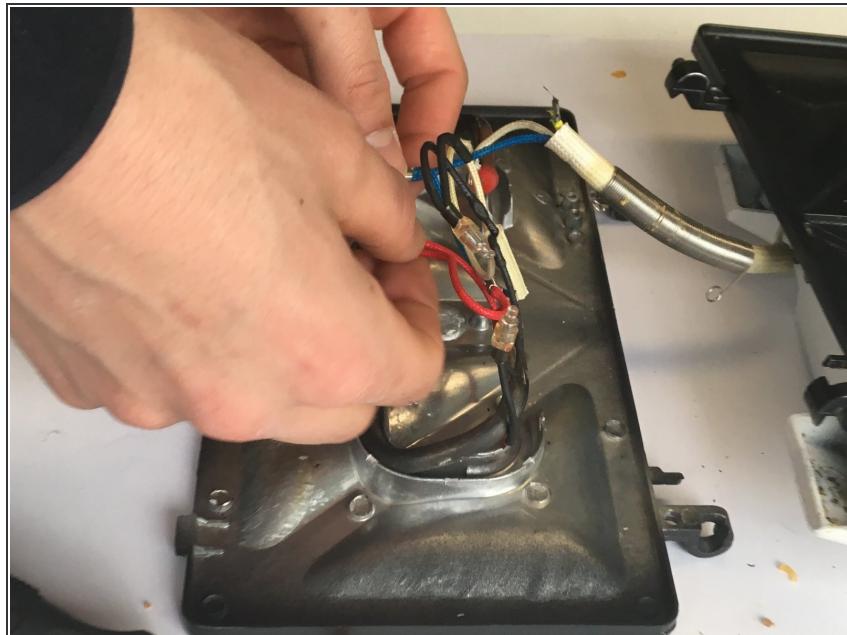

- Unscrew and remove the cable harness.

Step 7

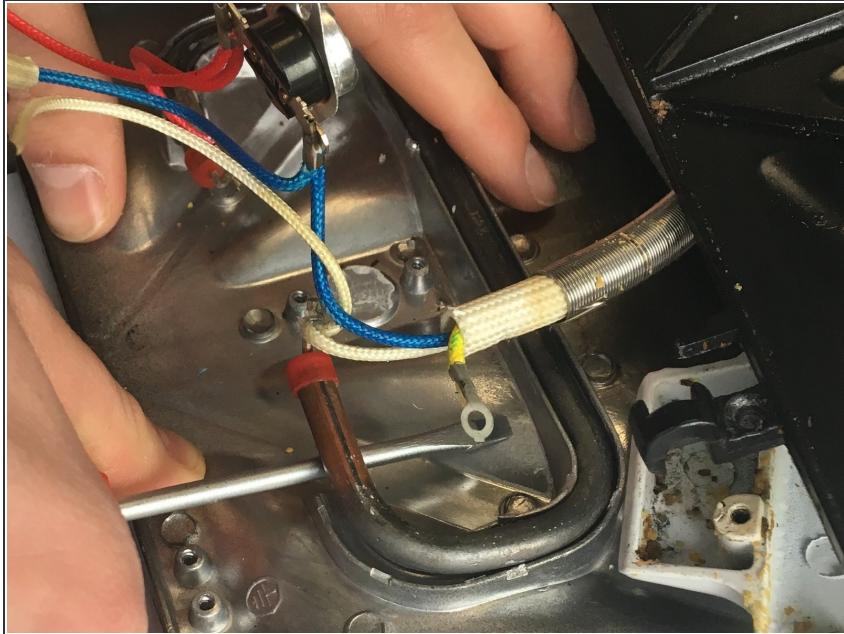

- Unscrew and remove the heat sensor.

Step 8



- Separate the snap fits of the coloured light caps and remove them.

Take great care in disassembling if you wish to reassemble all parts into a functioning product.