



Besta Super 5000 Battery Replacement

Remove and replace the battery on a Besta Super 5000.

Written By: Jessie



Step 1 — Battery




- Flip the device on its back.

Step 2



- Slide off the battery panel with your fingers.

Step 3

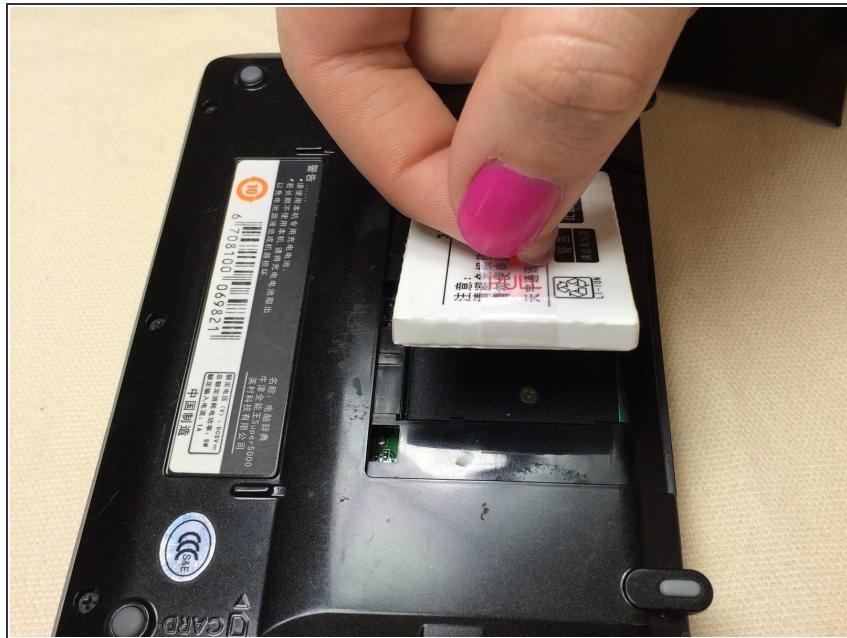

- Pull the plastic tab on the battery to remove it from the device.

To reassemble your device, follow these instructions in reverse order.