



Bissell Powerglide Cordless Battery Replacement

Brief instructions for Bissell Powerglide Cordless Battery Replacement.

Written By: Joseph Adam Johnson



 **TOOLS:**

- Fingers (1)

 **PARTS:**


- Bissell Powerglide Cordless Battery Pack (1)
- Bissell Cordless Vacuum Charger (1)

Step 1 — Battery



- Open the battery bay door by depressing the gray switch and pulling out.

Step 2

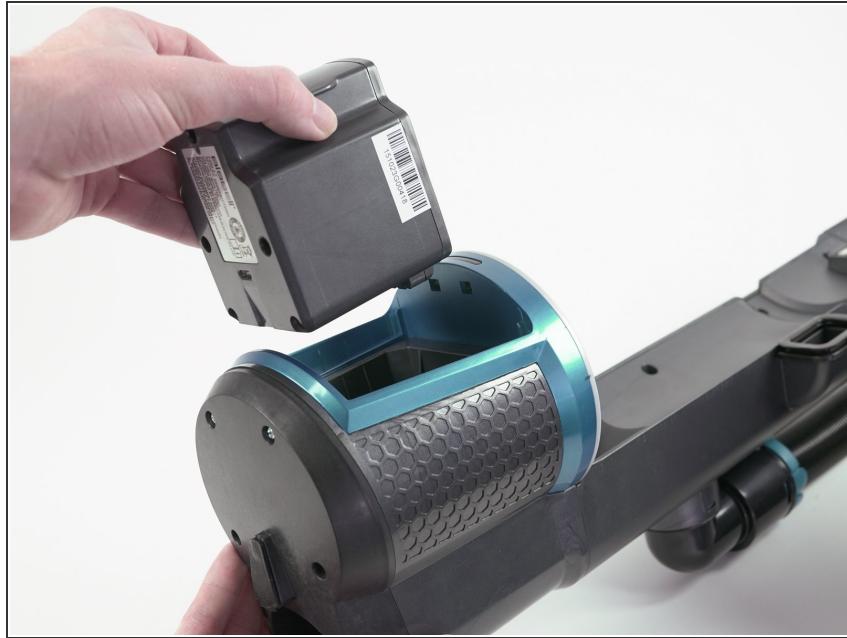

- Remove the battery with a strong pull.

To reassemble your device, follow these instructions in reverse order.