



# Bissell Powerglide Cordless Release Button Replacement

This guide explains how to replace the release button if it is broken or not working.

Written By: Khanh Fleshman



## INTRODUCTION

This guide explains how to replace the release button if it is broken or not working.

### TOOLS:

- Phillips #2 Screwdriver (1)

## Step 1 — Release Button




- Press the release button while pulling up on the head of the vacuum to remove the head.

## Step 2



- Using a Phillips head screwdriver, unscrew the four screws holding the panel to the shaft of the vacuum.

## Step 3

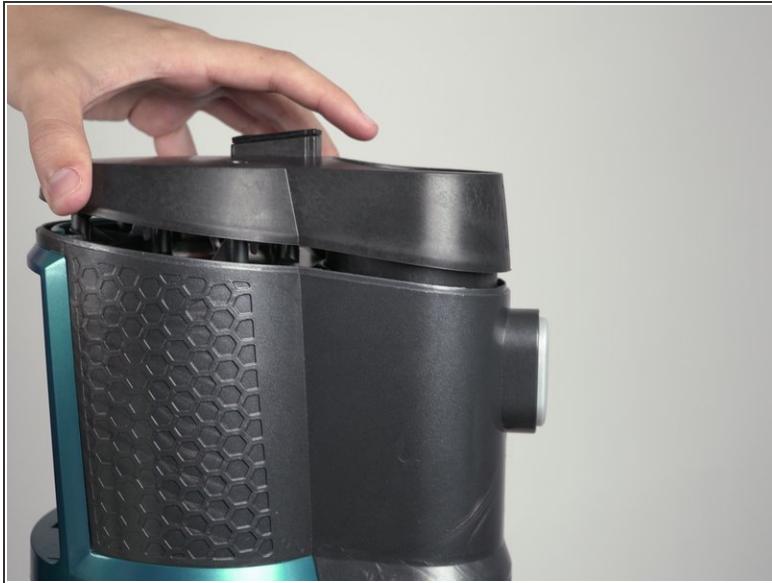

- Pry the panel up using a spudger and pull up firmly just enough to see the clips of wire on the sides.

## Step 4



- Remove the wire clips on both sides of the shaft.

## Step 5



- Pull the top piece out of the shaft.

## Step 6



- Pinch the two pairs of plastic catches (circled in the picture) to release the button.

To reassemble your device, follow these instructions in reverse order.