



# Black and Decker DustBuster 15.6V Nozzle Brush Replacement

Replacing a Nozzle brush for the Black and Decker Dustbuster 15.6v

Written By: Jacob



## INTRODUCTION

The nozzle brush located on the end of shaft may break off during the cleaning process. Replacing the brush is as easy as breaking it off.



### PARTS:


- Replacement Nozzle Brush (1)

## Step 1 — Nozzle Brush



- Lift Nozzle Brush until it clicks into fully erect position.

## Step 2

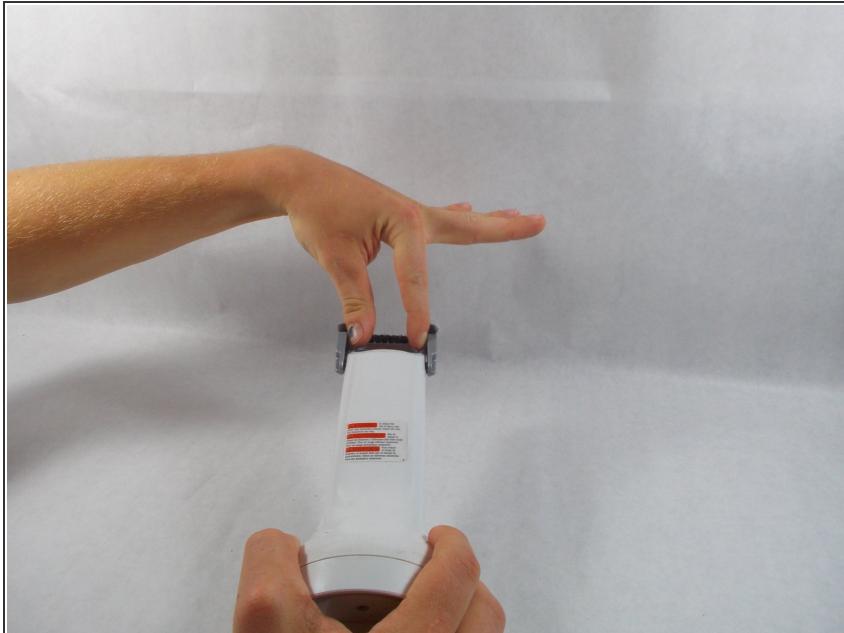


- Apply a gentle, equal pressure outward, to the inside of both brush legs.

## Step 3



- Remove one of the leg prongs from the hole it is inserted into.

## Step 4

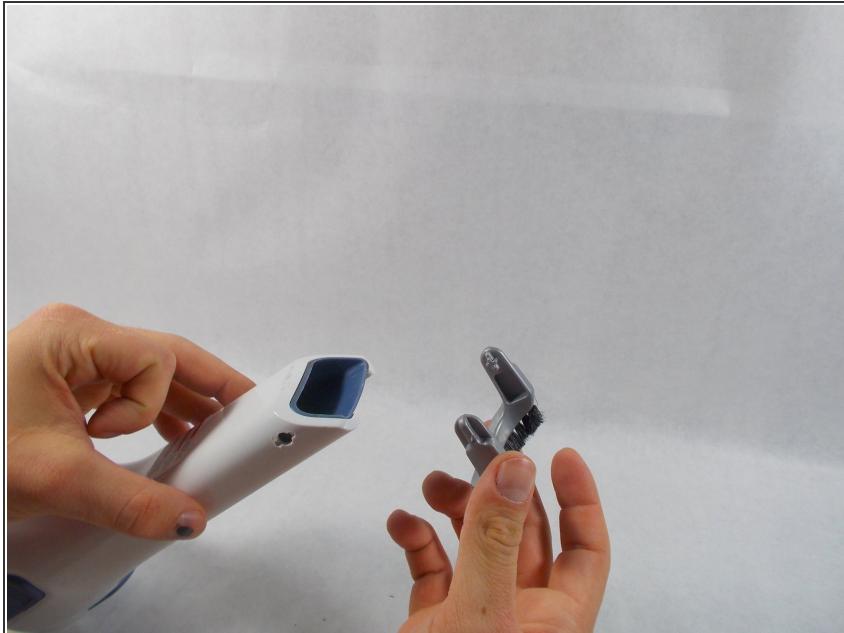

- Rotate the free leg forwards or backwards from the hole.
- This relieves the pressure from the inside of the legs allowing you to freely remove the last leg from its hole.

## Step 5



- Check each leg hole for debris and clear what's needed.
- Insert a leg of the new brush into the correct hole, so the brush will click into its erect position.
- Slide the other leg into its respective hole.

To reassemble your device, follow these instructions in reverse order.