




Black and Decker Dustbuster CHV1510 Battery Pack Replacement

This guide will allow you to replace the battery pack in your Black and Decker Dustbuster CHV1510.

Written By: Miguel Vilao

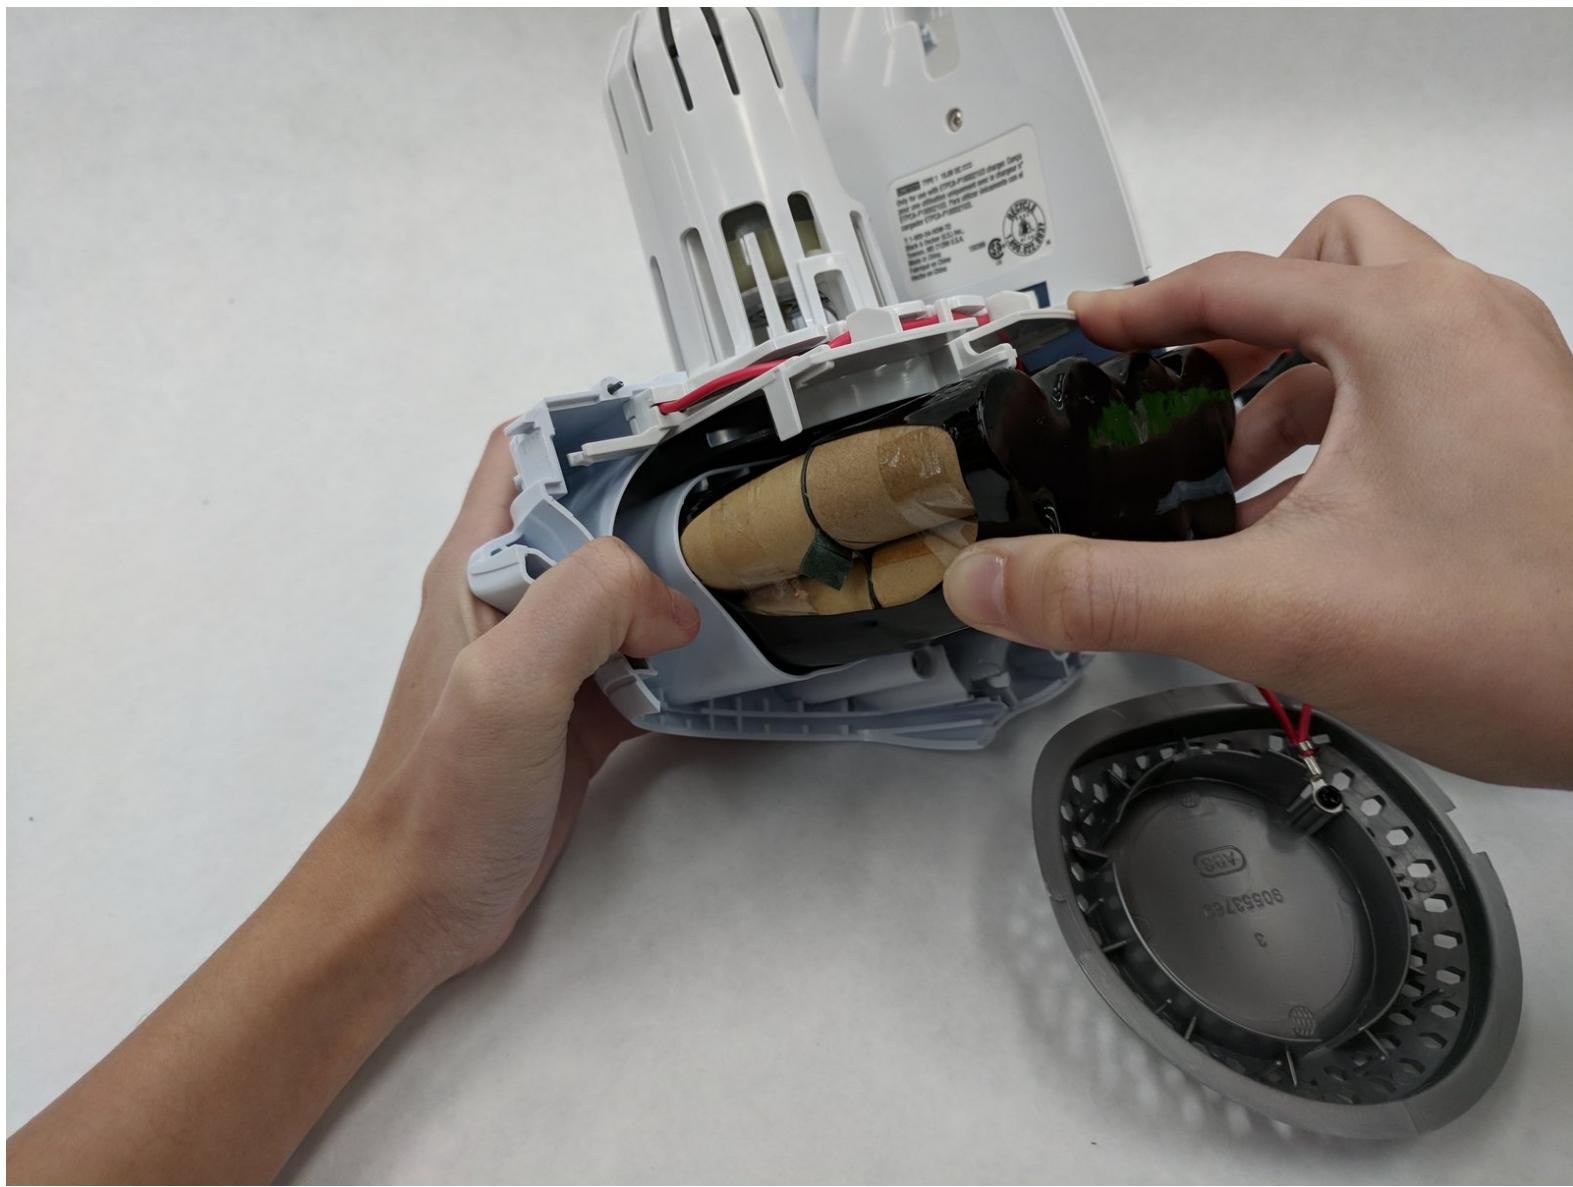

This document was generated on 2019-11-06 04:06:54 PM (MST).

INTRODUCTION

In the Black and Decker CHV1510, the battery is often the first component to fail. This guide will show you how to replace the battery in your vacuum.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Prerequisite Only Guide



- Press the buttons with unlock symbols on both sides of the nozzle.
- Pull the nozzle upward.
- *(i)* The other button cannot be seen on the image.

Step 2



- Press the button with the "filter" indicator.
- Pull the filter cover upward.

Step 3





- Holding the vacuum base firmly, remove all six exterior 20 mm Phillips #0 screws.

Step 4




- Carefully and gently pull the two halves of the vacuum apart.

Step 5 — Battery Pack

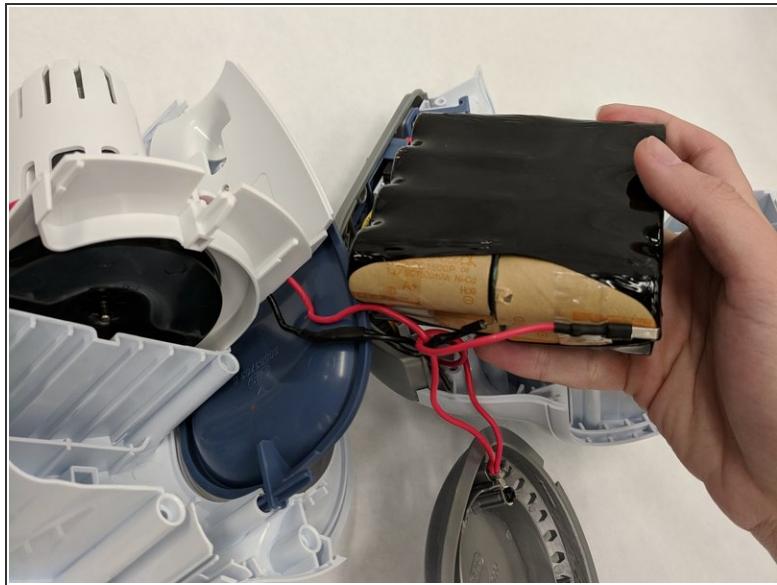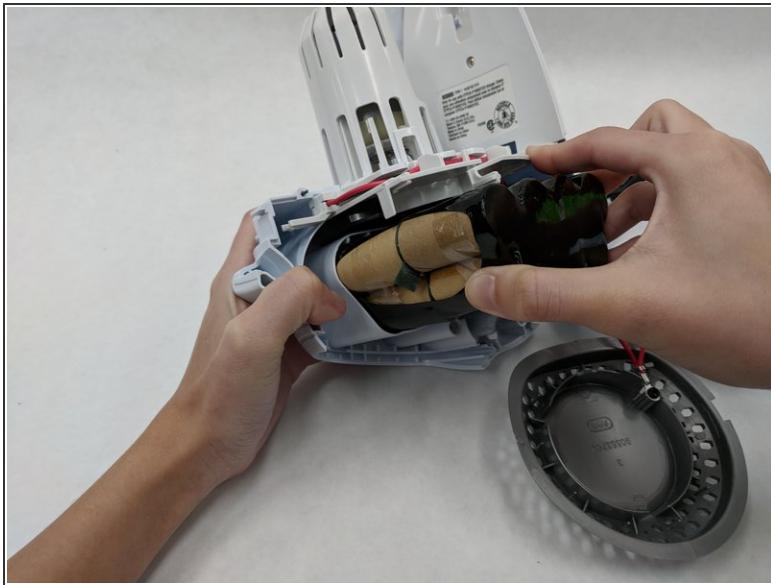

- Gently pull the battery pack out of the vacuum frame.

Step 6

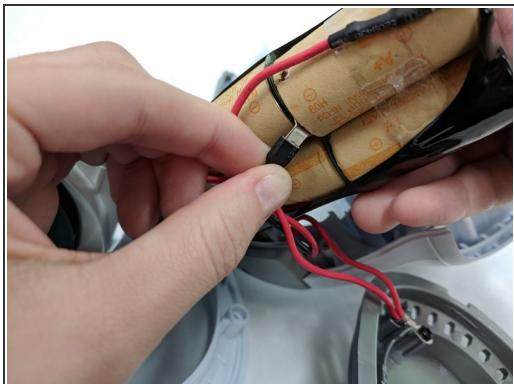

- Holding the battery pack firmly, disconnect the red and black wires from the battery pack by pulling them gently.

To reassemble your device, follow these instructions in reverse order.