




Black and Decker JS660 Angle Knob Replacement

The angle is set to a certain degree but not cutting at the selected angle. It needs to be replaced.

Written By: Andrew Khouri

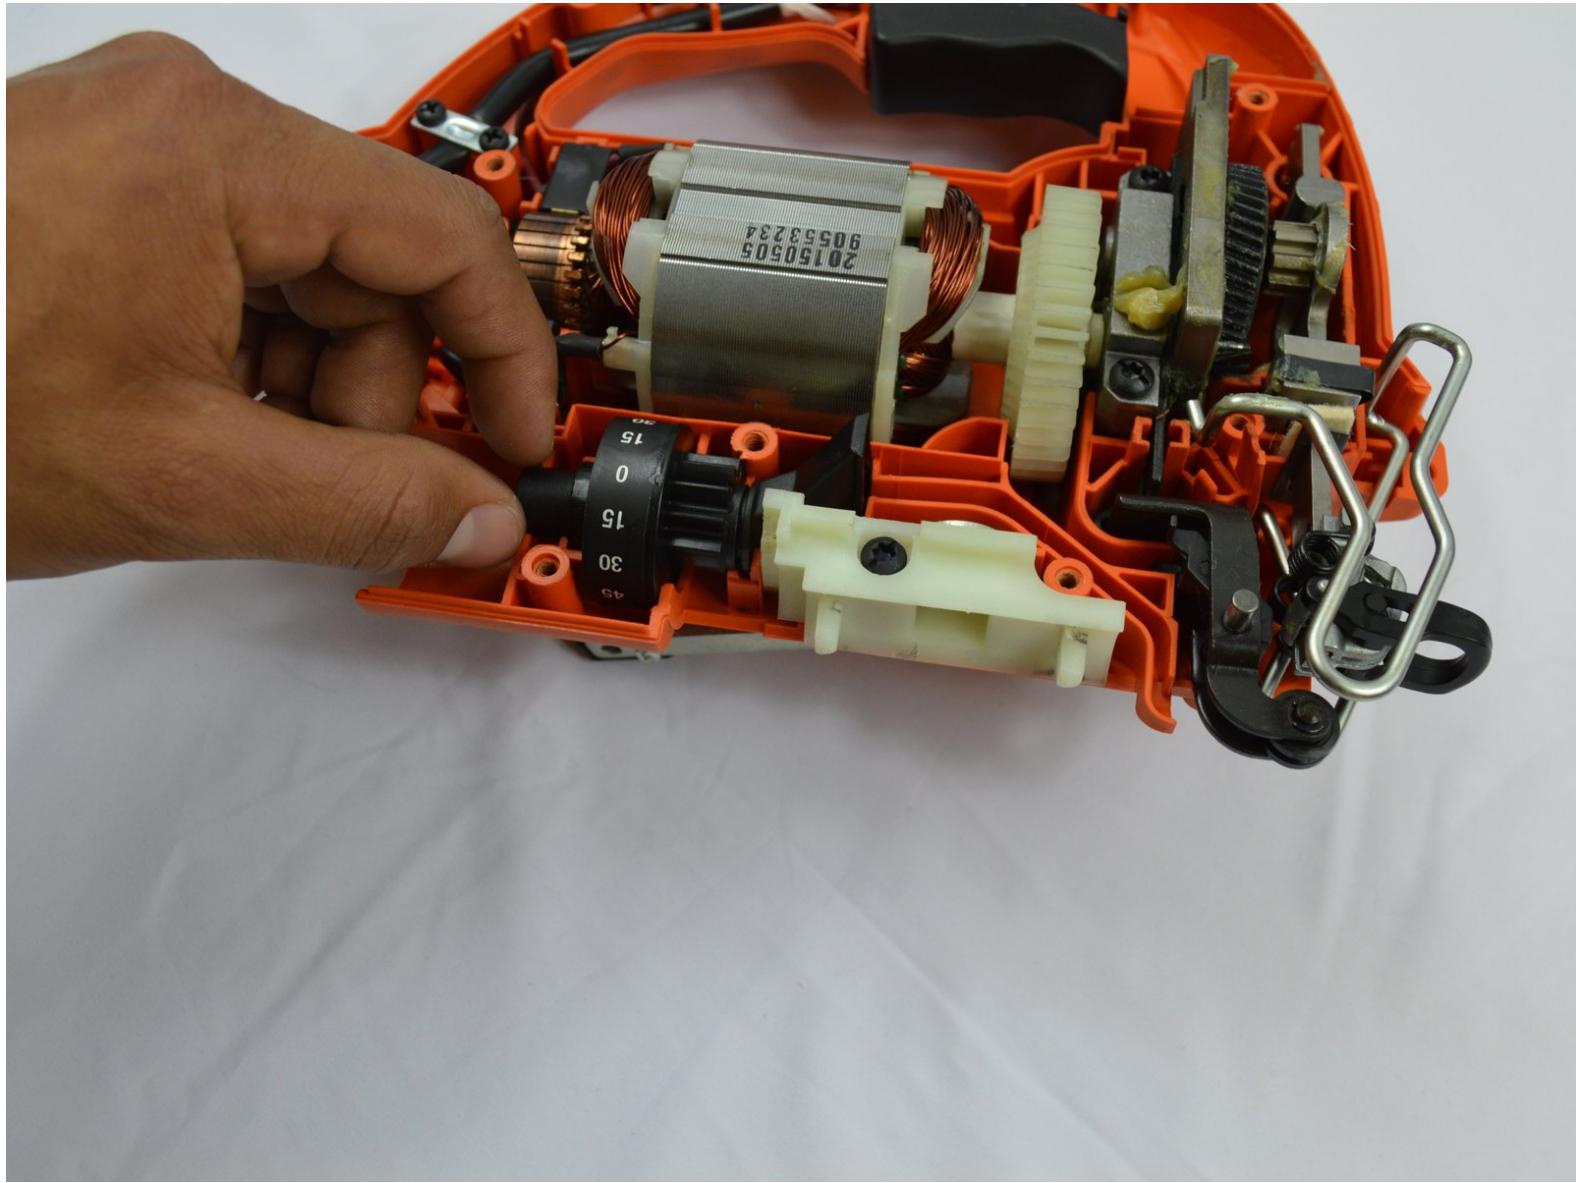

INTRODUCTION

This guide will give users a step by step on how to replace the angle indication knob on the jigsaw. You will need to buy the replacement parts from the link given in the details.

TOOLS:


- [Screwdriver \(1\)](#)

Step 1 — Base




- Unscrew the nine screws to open up the jigsaw

Step 2

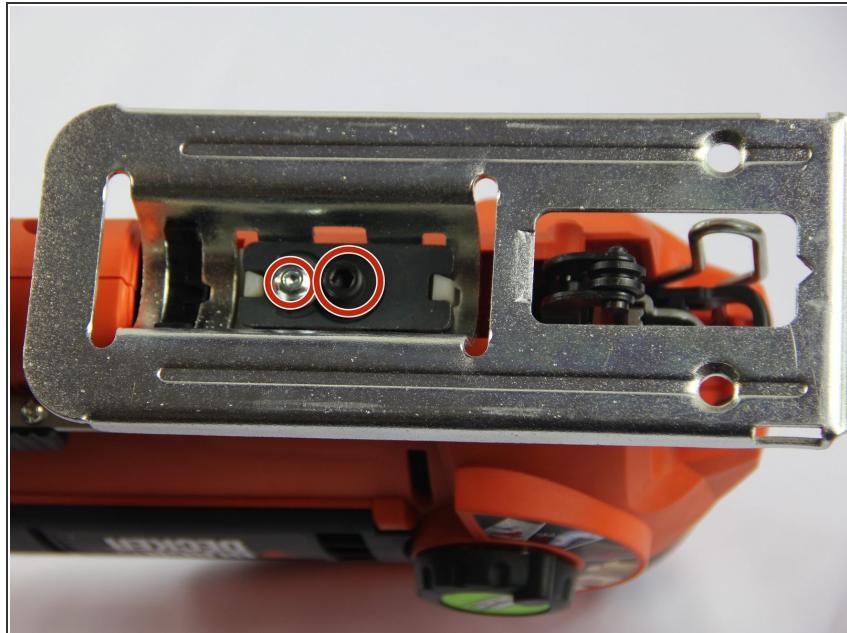


- Unscrew the base by unscrewing the two shown in the picture.

Step 3

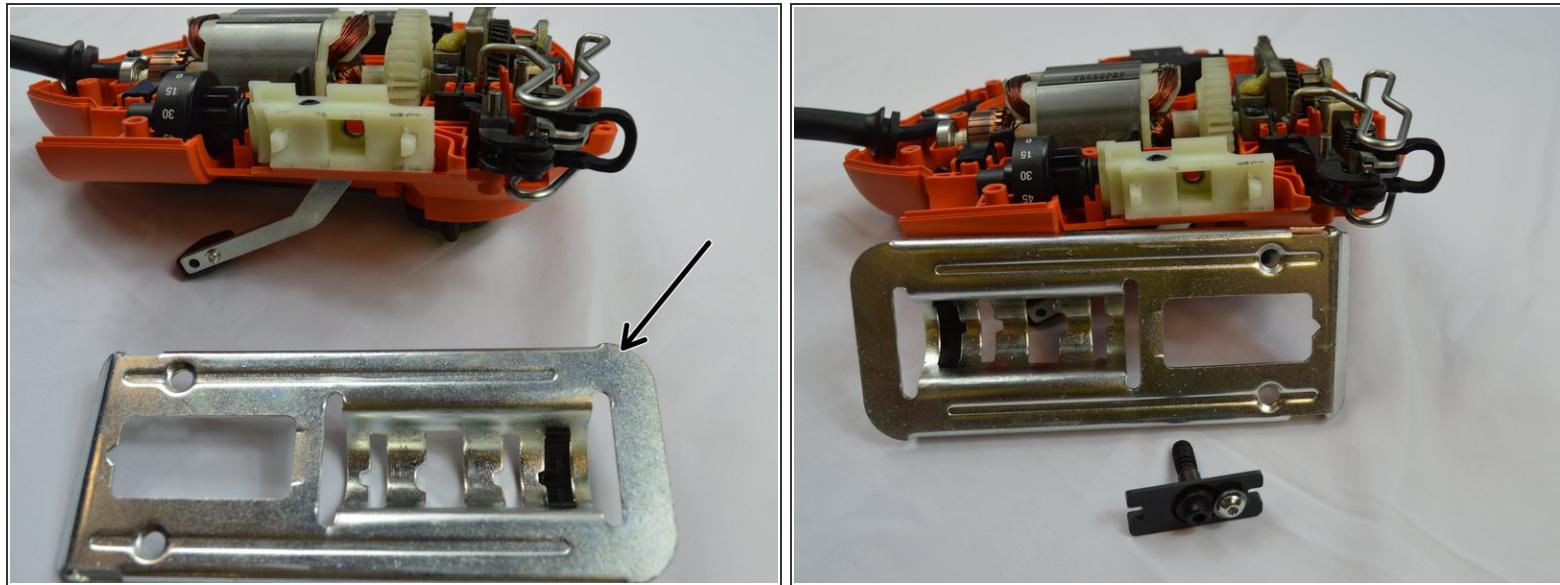

- The Jigsaw base will now be off. With the new base simply do the reverse order of steps.
- *(i)* Assemble the base on a steady surface.

Step 4 — Angle Knob

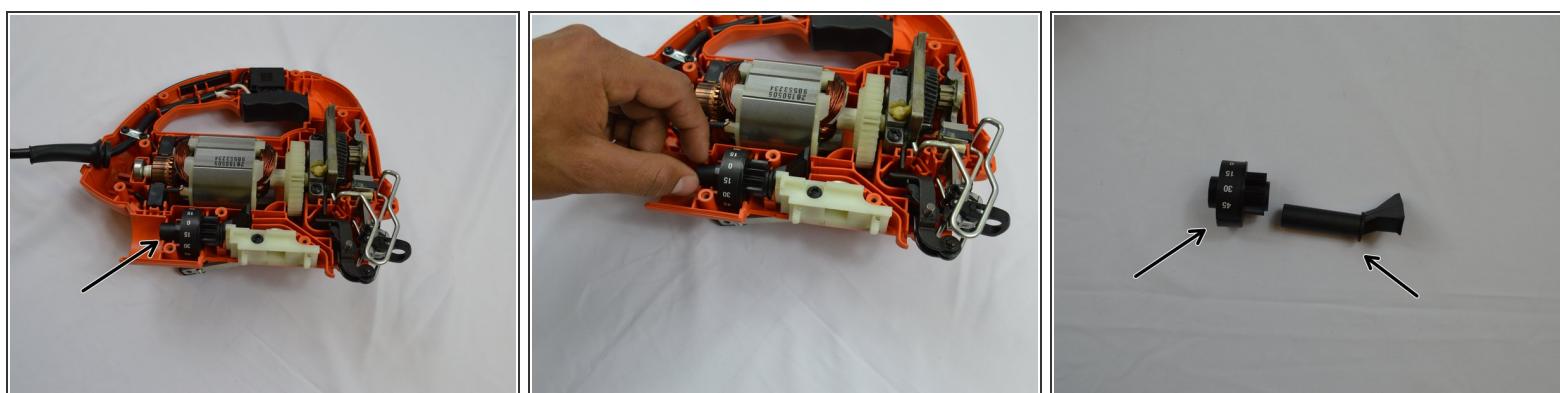

- As soon you disassemble the device, you can see the angel knob is not attached to any screws.
- You can easily pick it up and replace it.

(i) [replacement](#)

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-02 03:11:12 PM (MST).

