



Black and Decker JS660 Angle Lock Replacement

The lever used to lock the jigsaw at a certain cutting angle is not locking.

Written By: Andrew Khouri



INTRODUCTION

This guide will give instructions on how to change out the lever that locks the jigsaw to the cutting angle desired.

TOOLS:

- Screwdriver (1)

PARTS:


- Handle to change the cutting angle (1)

Step 1 — Base




- Unscrew the nine screws to open up the jigsaw

Step 2

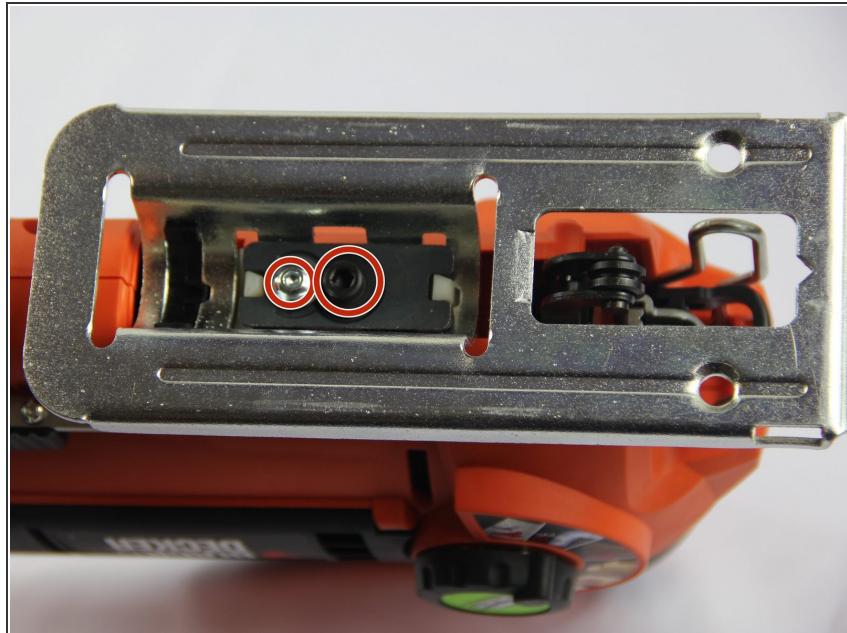

- Unscrew the base by unscrewing the two shown in the picture.

Step 3

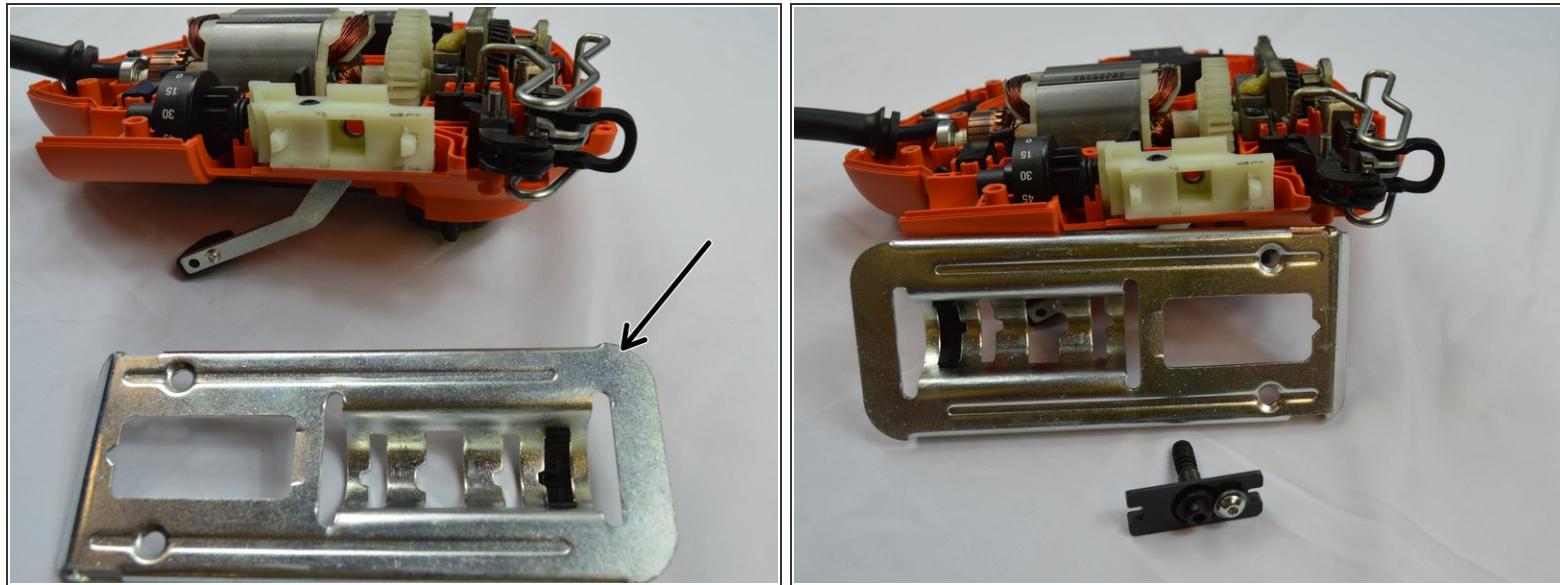

- The Jigsaw base will now be off. With the new base simply do the reverse order of steps.
- *i* Assemble the base on a steady surface.

Step 4 — Angle Lock



- Remove the screw marked and the lever will slide out easily
- The black screw must next be removed.
- After removing the screw the lever will slide out of the jigsaw.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-02 03:11:08 PM (MST).

