


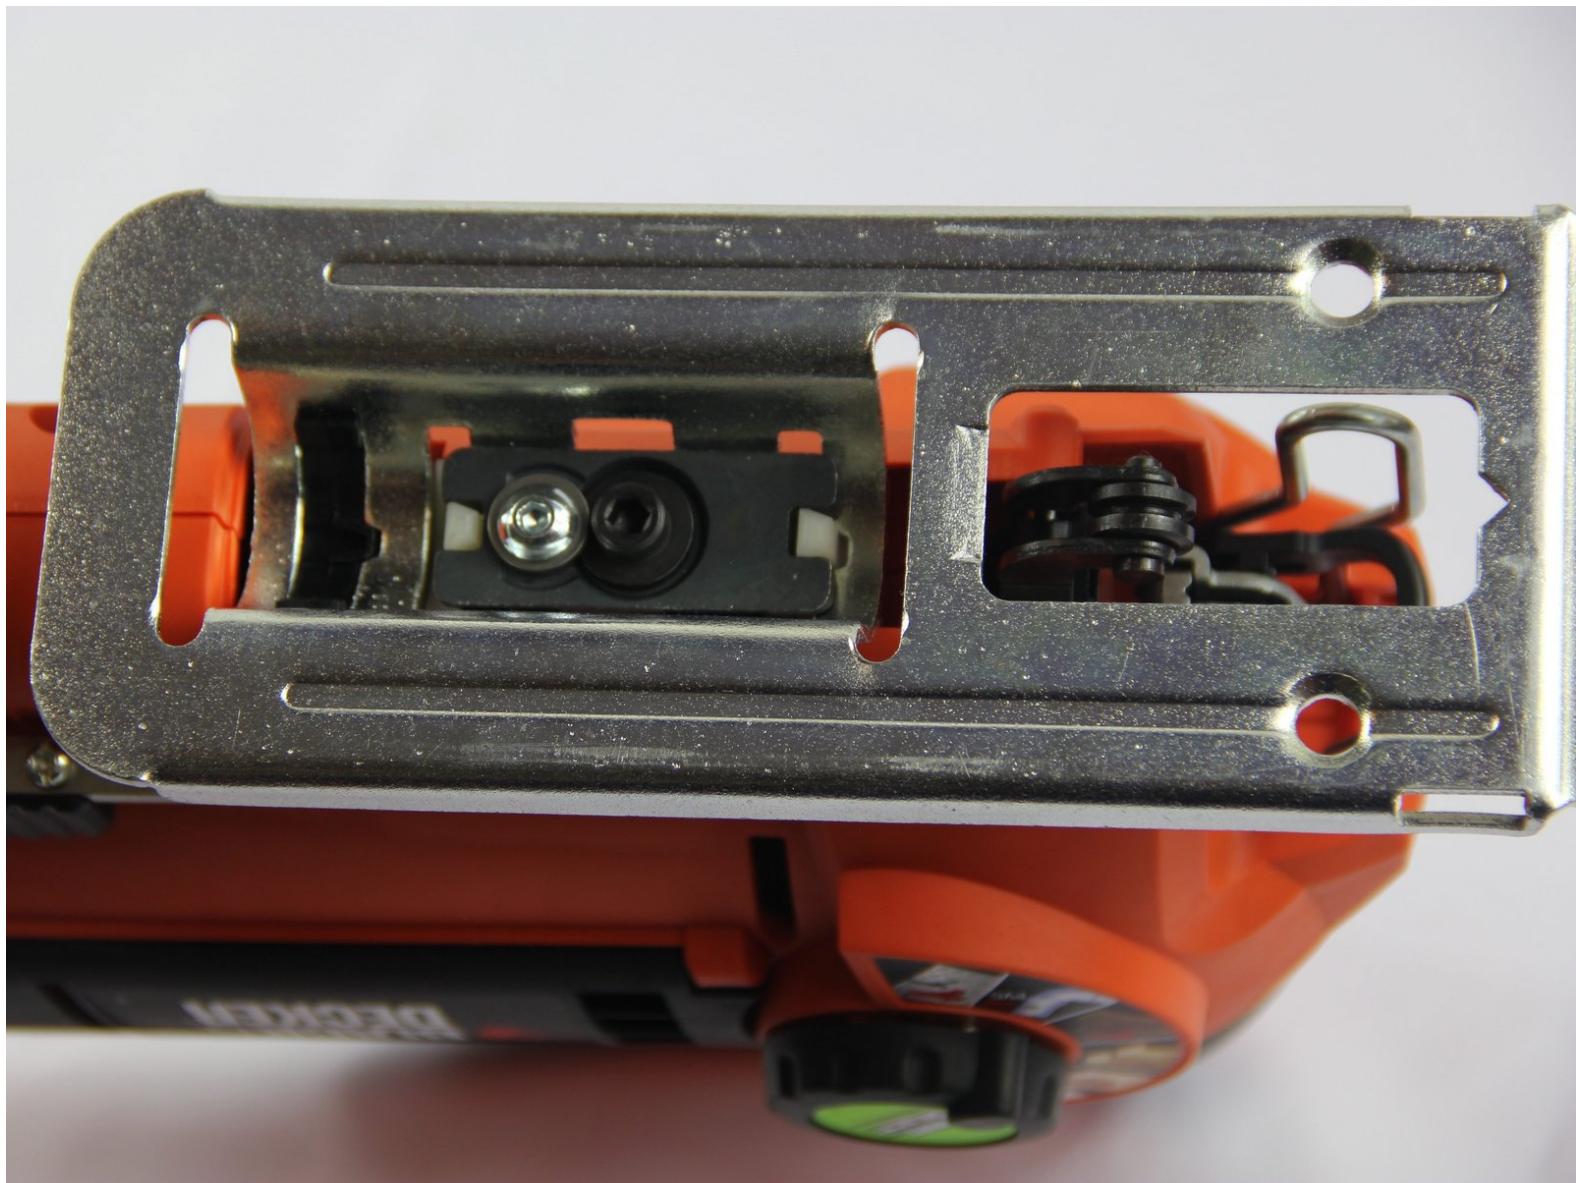

Black and Decker JS660 Base Replacement

The silver base will be replaced by simply switching out the old base with a new one.

Written By: Andrew Khouri



INTRODUCTION

In the unfortunate case of where your black and decker jigsaw base is broken this guide is here to show you how to replace the base. This will require you to remove the existing plate and replace it. Following the guides will show you how to replace the base without damaging any other parts of the jigsaw.

TOOLS:

- [Screwdriver](#) (1)

PARTS:


- [Base of Black and Decker Jigsaw](#) (1)

Step 1 — Base




- Unscrew the nine screws to open up the jigsaw

Step 2

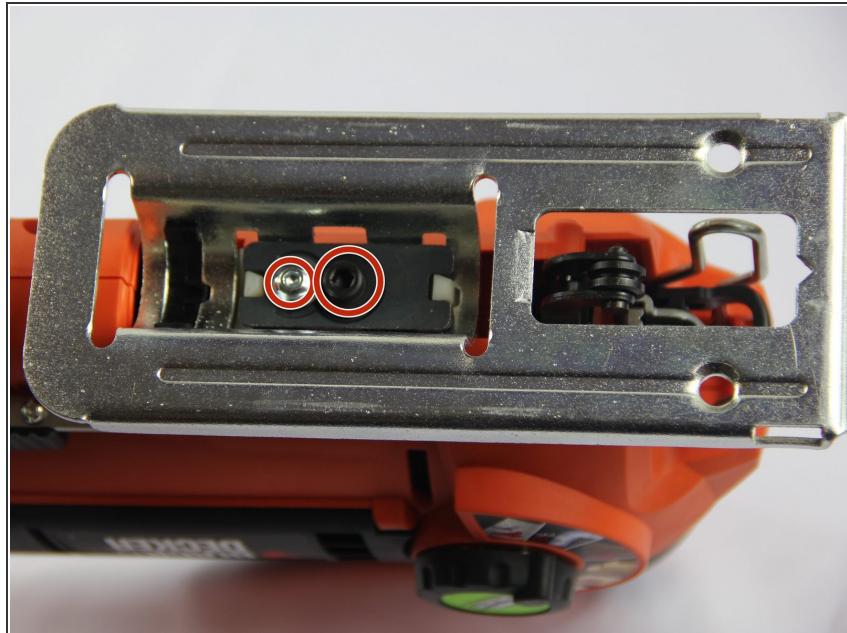

- Unscrew the base by unscrewing the two shown in the picture.

Step 3

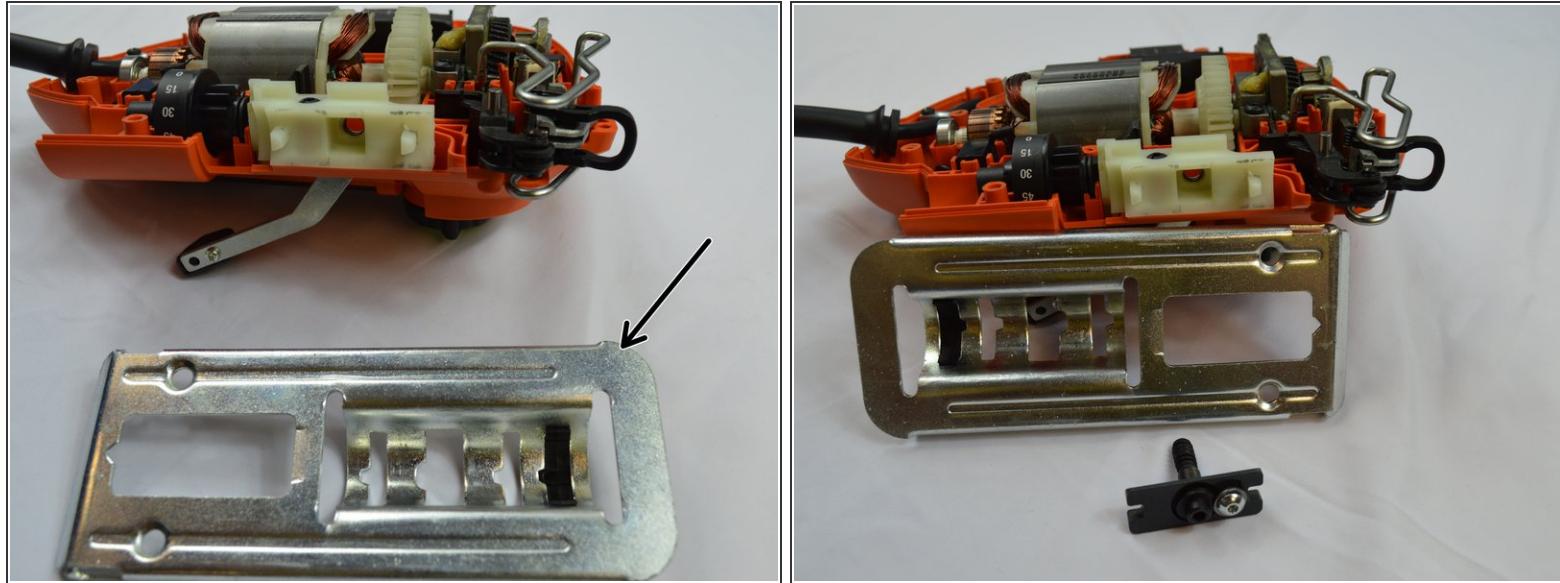

- The Jigsaw base will now be off. With the new base simply do the reverse order of steps.
- *i* Assemble the base on a steady surface.

To reassemble your device, follow these instructions in reverse order.