




Black and Decker JS660 Blade Holder Replacement

Written By: matt murray

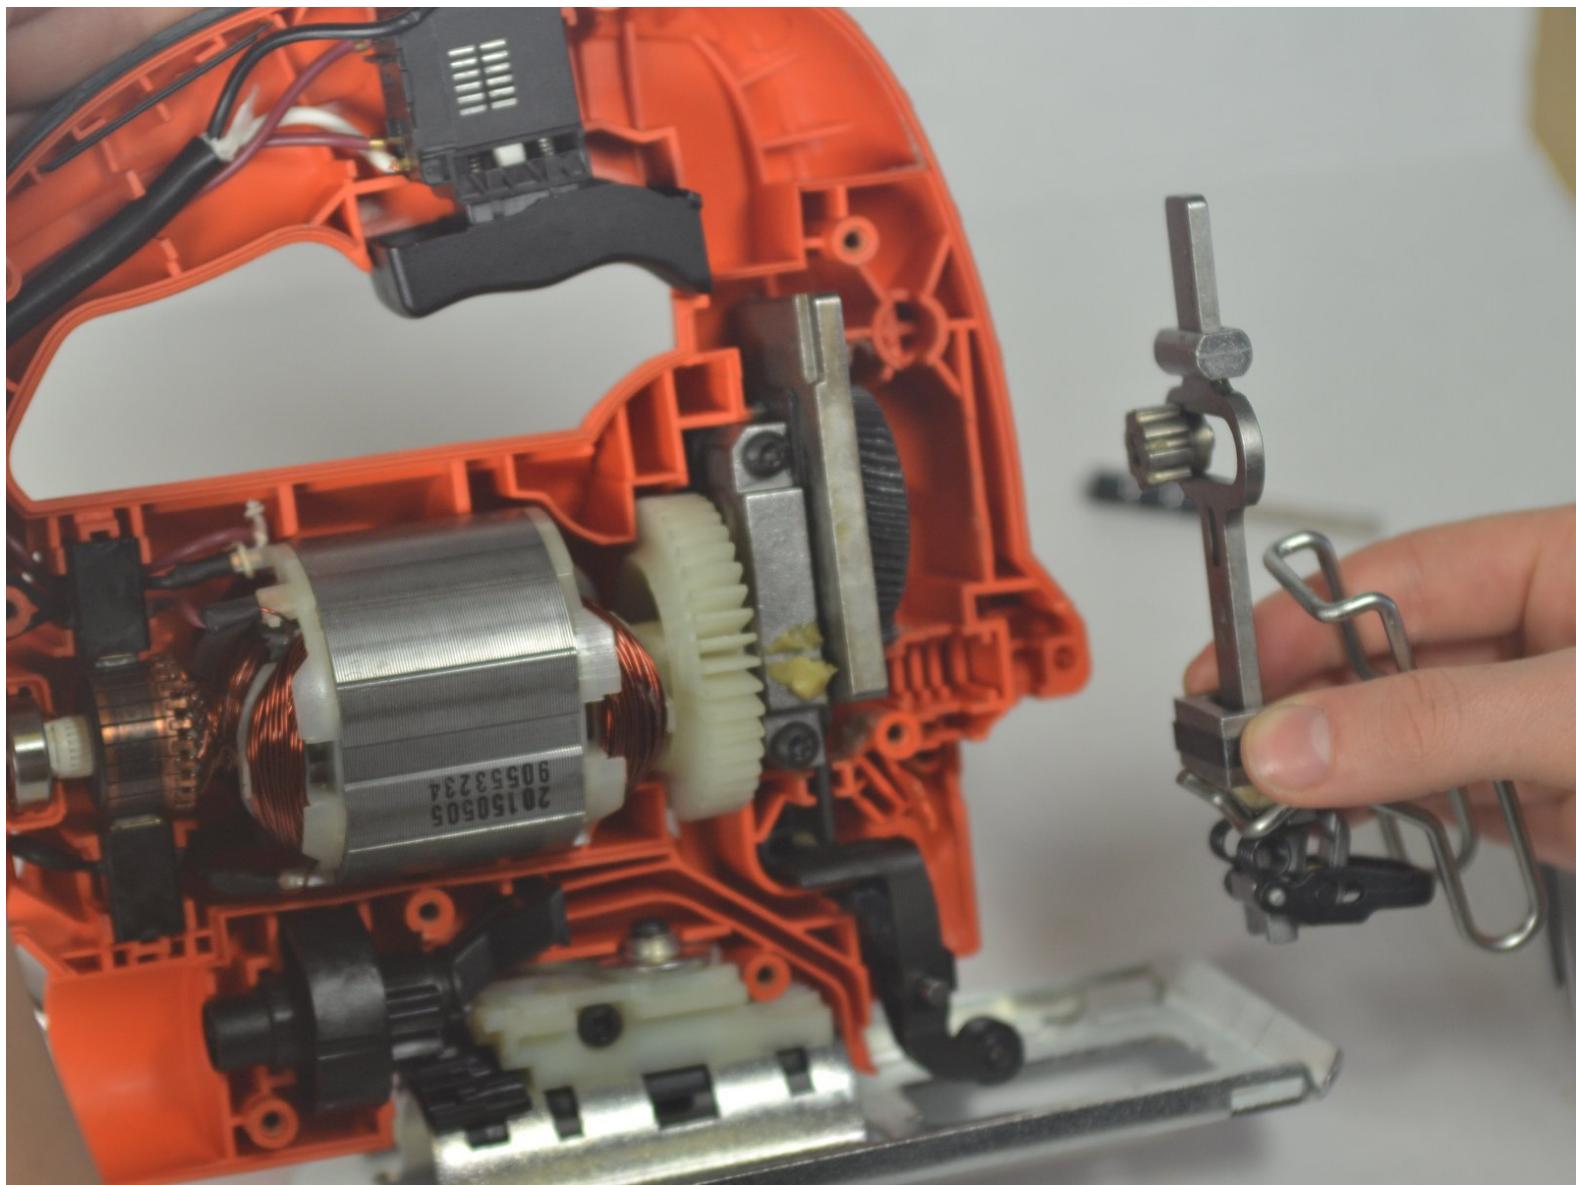

INTRODUCTION

This guide will show you how to remove the entire blade holder assembly if it were to ever get broken.


TOOLS:

- T15 Torx Screwdriver (1)

PARTS:


- Blade Holder (1)

Step 1 — Housing Disassembly

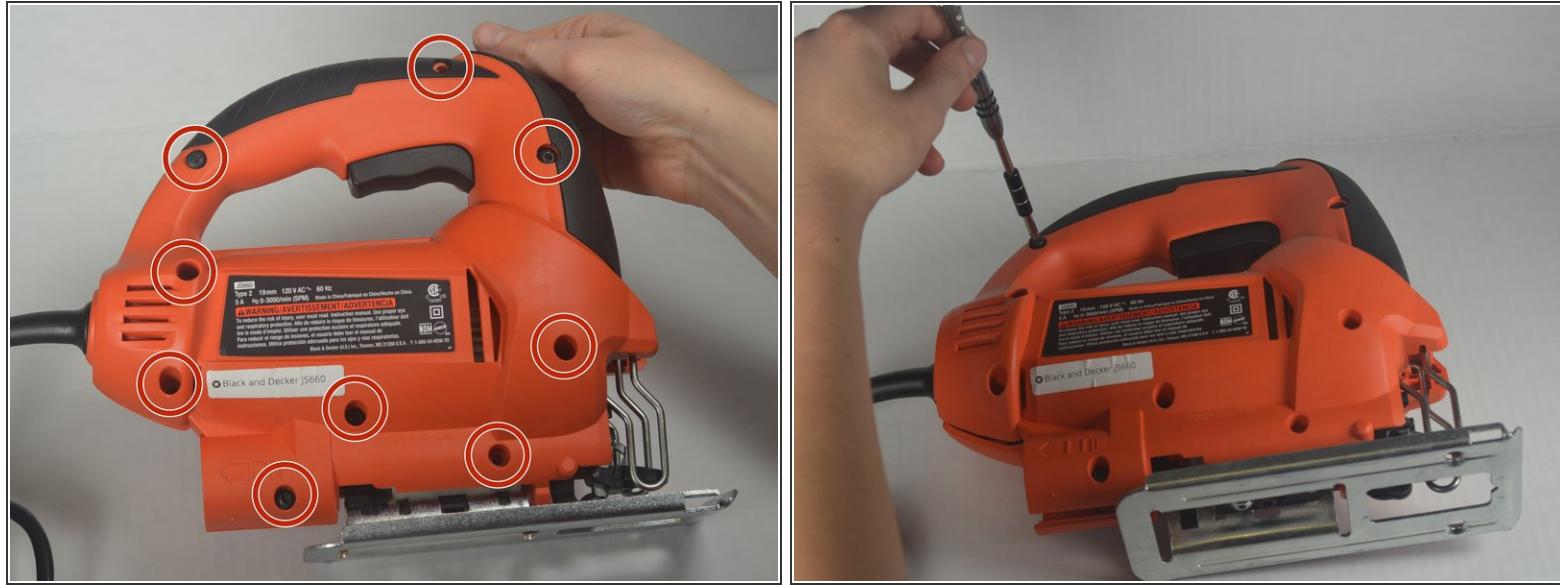


- Remove the nine torx 15.875mm screws on the front of the jigsaw using a T-15 torx screwdriver.

Step 2

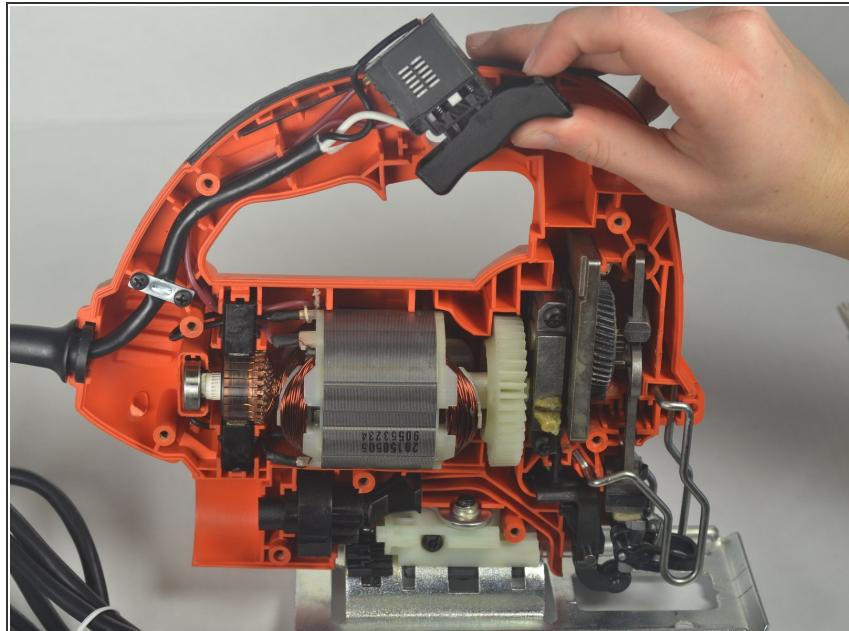

- By separating the two housing halves, carefully remove the top plate.

Step 3 — Blade Holder

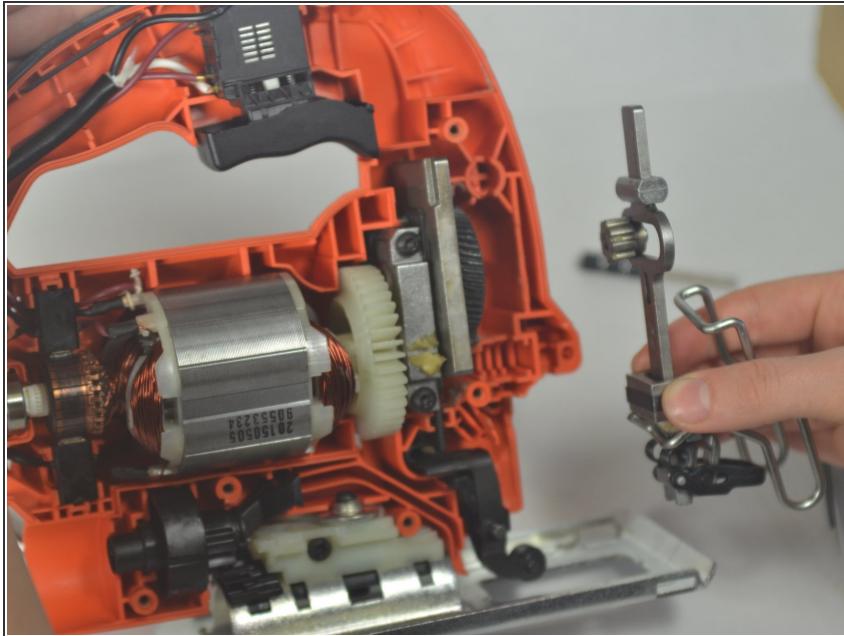

- Being careful to keep all parts together, grab the entire assembly and pull it directly out of the saw.

To reassemble your device, follow these instructions in reverse order.