




Black and Decker JS660 Blade Holder Replacement

The blade is not holding in place when using the jigsaw.

Written By: Andrew Khouri

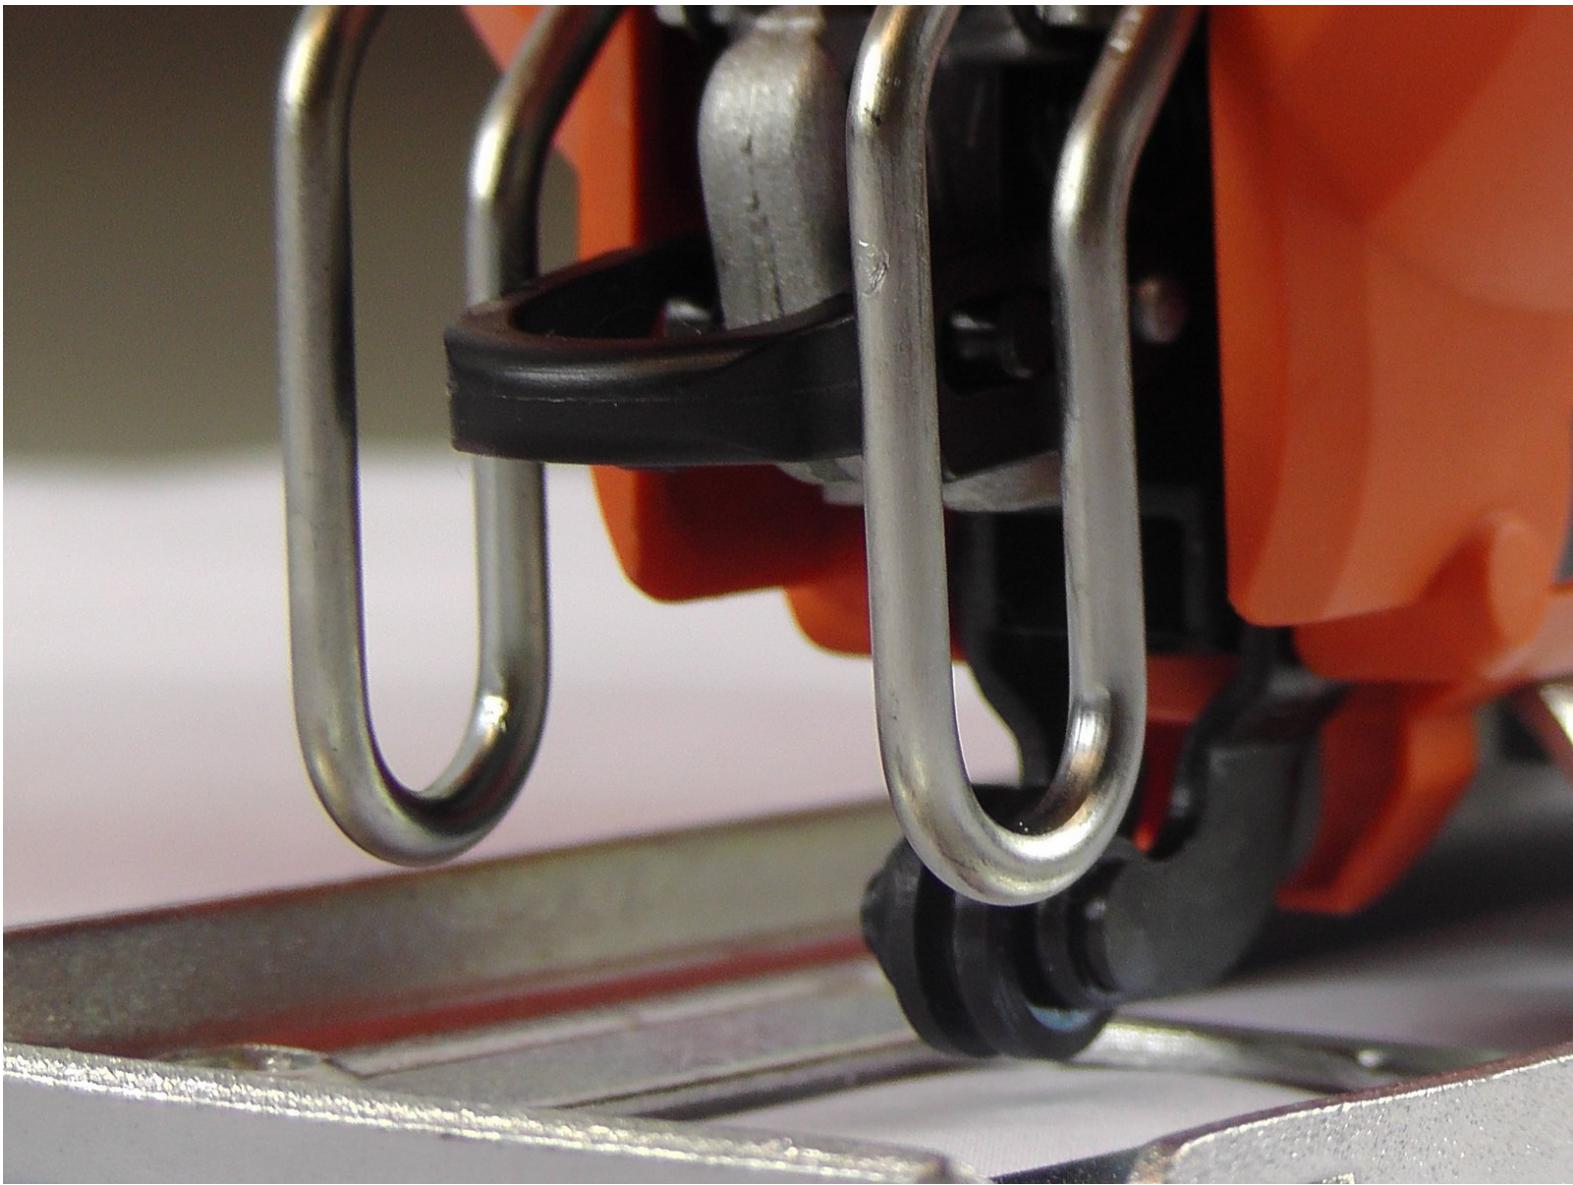

INTRODUCTION

The jigsaw blade may become loose or is not fastening correctly when using the blade. This guide will identify the problem and show the user how to fix and interchange the holder.

TOOLS:

- [Screwdriver \(1\)](#)

PARTS:


- [JS660 Blade Holder \(1\)](#)

Step 1 — Base




- Unscrew the nine screws to open up the jigsaw

Step 2

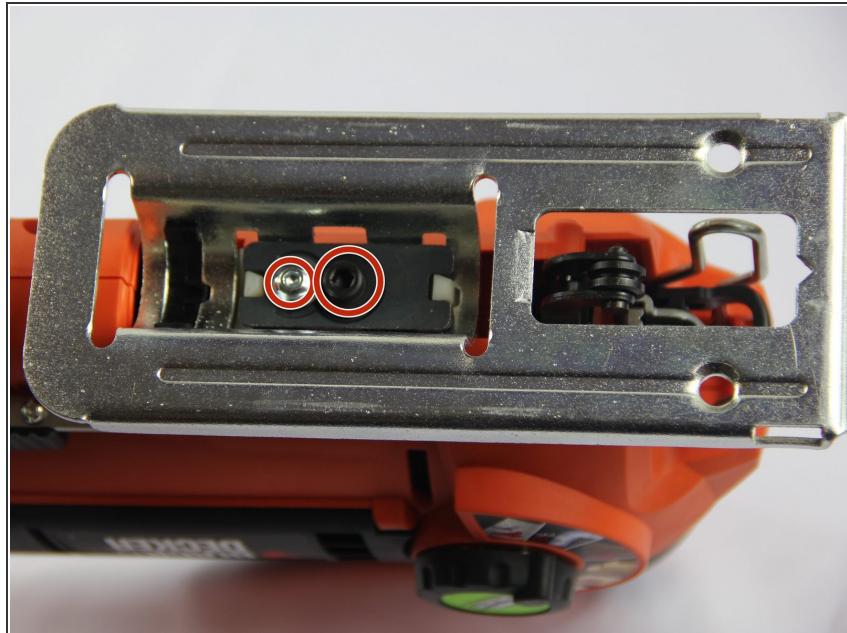


- Unscrew the base by unscrewing the two shown in the picture.

Step 3

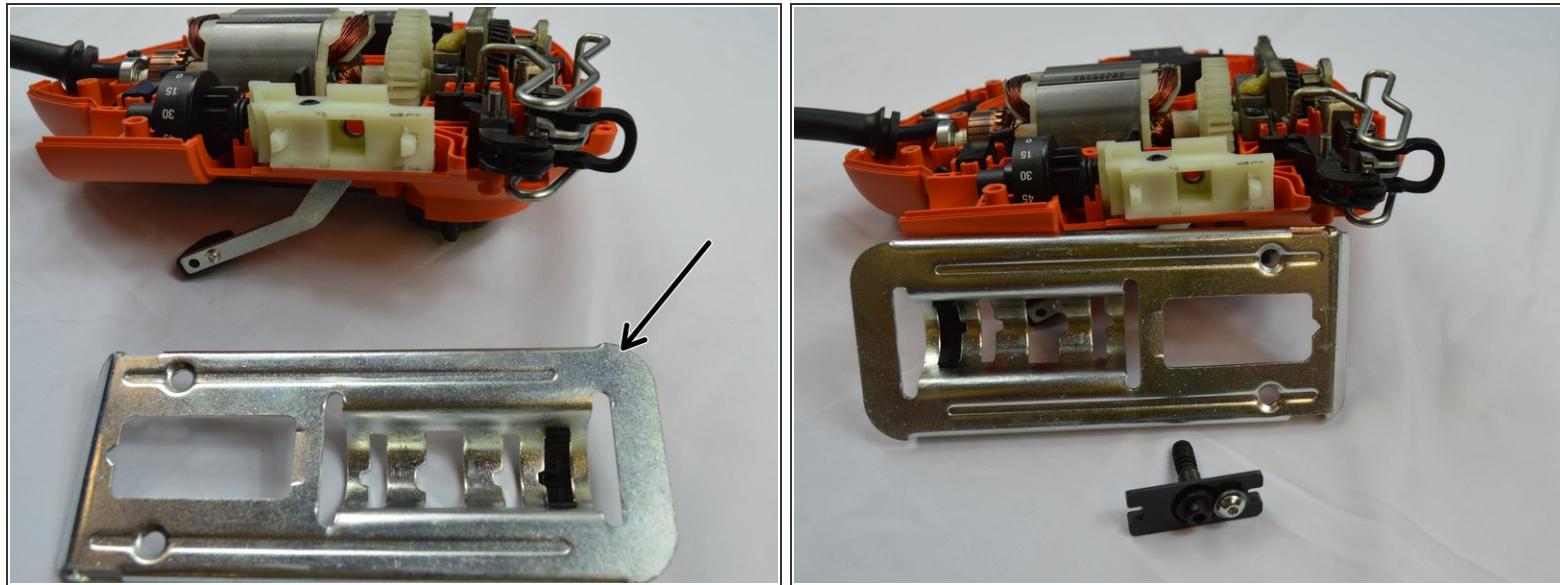

- The Jigsaw base will now be off. With the new base simply do the reverse order of steps.
- *i* Assemble the base on a steady surface.

Step 4 — Blade Holder

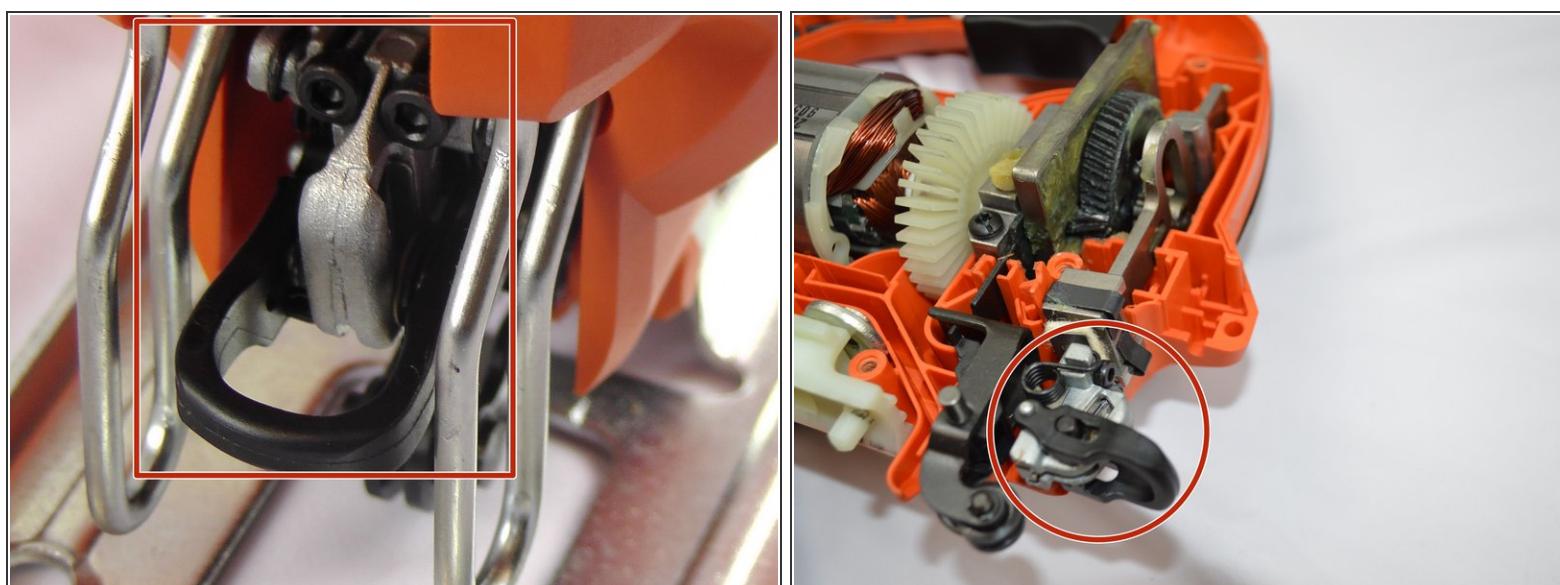

- You will need to take out the entire blade clamp shown.
- ⚠ The plastic part is fragile, easy to break

Step 5



- Showing the entire blade clamp removed from the device.

- ⓘ Apply some oil grease if dry/needed

To reassemble your device, follow these instructions in reverse order.