



Black and Decker PS1800 Transmission Replacement

This guide will show how to replace the transmission of Black and Decker PS-1800.

Written By: David Nawl



INTRODUCTION

This guide will show how to replace the transmission of Black and Decker PS-1800.

TOOLS:

- [Phillips Screwdriver](#) (1)

Step 1 — Open the Outer Drill Case




- Lay the drill on its side, assuring that the screw holes are facing upwards.
- Remove seven 12 mm screws using a Phillips #00 screwdriver.

Step 2



- Separate the outer drill case to expose the components and switch.

Step 3 — Disconnect Motor

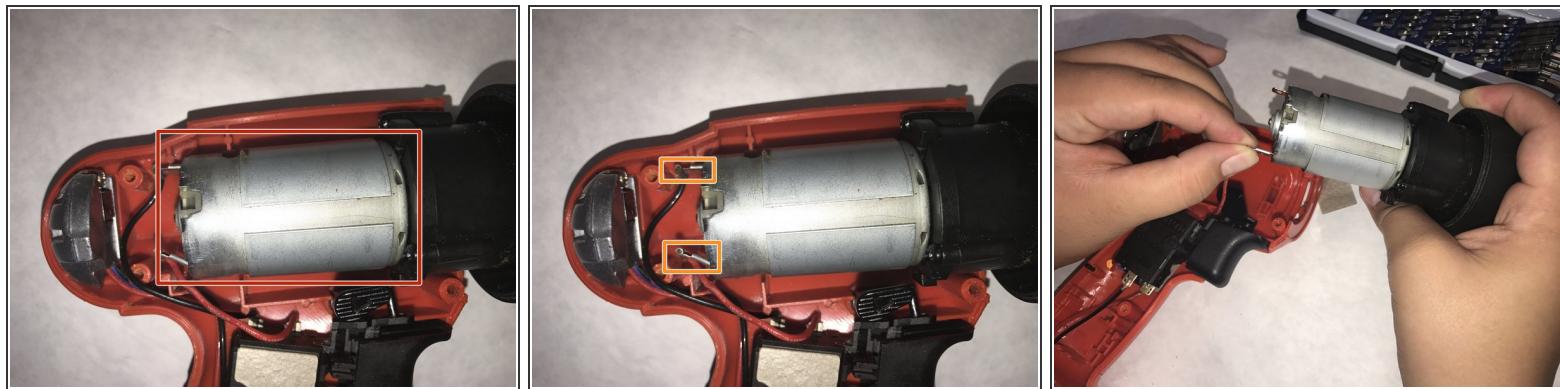

- Locate the motor at the top left hand corner.
- Carefully disconnect the red and black wires attached to the motor.


Step 4



- Unscrew the motor from the drill's transmission.

⚠️ Detach the transmission carefully, ensuring that the gears remain intact.

Step 5

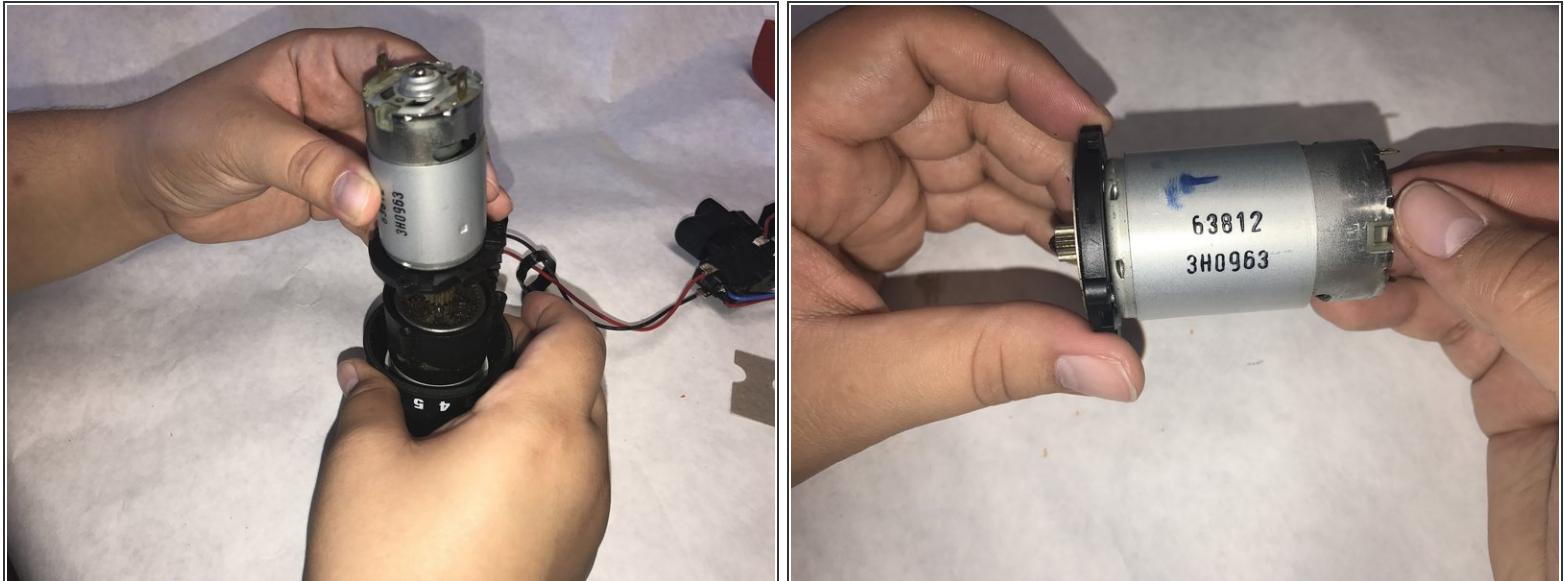

- Remove the motor from the transmission assembly, as pictured.

Step 6 — Transmission



- Unscrew the torque adjuster from the transmission by removing the screws highlighted in the lefthand picture.

Step 7



- Align the new transmission gears with the motor's gears.
- Reattach the transmission and motor by rescrewing the initial screws.

Step 8



- Reconnect the torque adjuster to the transmission by following the procedure seen in step 6.

Step 9



- Reconnect black and red wires onto the motor and place the motor, transmission and torque adjuster back onto their initial location.

Step 10



- Reconnect the clamshell.
- Press trigger to make sure the new transmission works.

⚠ Press and hold the clam-shell to assure it will not drop while testing.

To reassemble your device, follow these instructions in reverse order.