



Black and Decker Pivot MAX Pivot Lock Button Replacement

This guide is to replace the Pivot Lock Button located in the handle of the Black and Decker Pivot MAX.

Written By: Jesse Sipes



This document was generated on 2019-09-28 08:15:57 PM (MST).


INTRODUCTION

This guide is to replace the pivot lock button located in handle of the Black and Decker Pivot Max. No special tools are necessary, only a phillips screw driver is needed for this replacement.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery

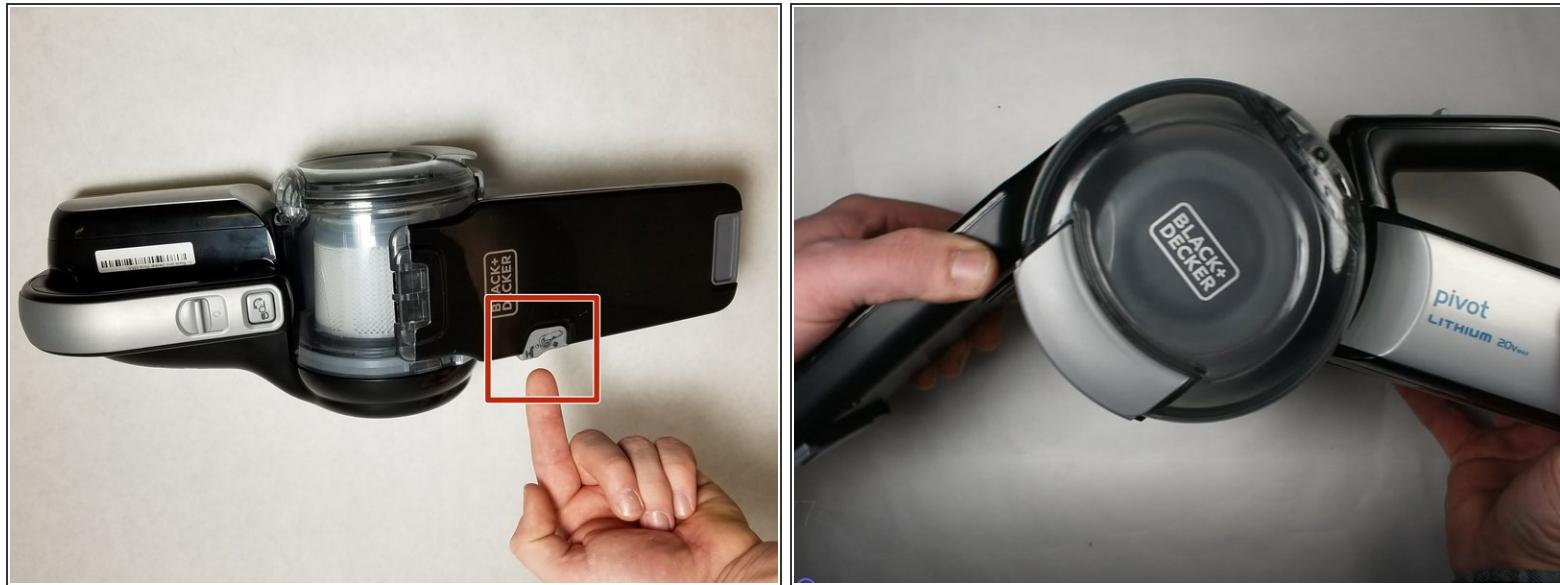

- Press in and hold the release button.
- Rotate the dust filter chamber counter-clockwise.
- Remove the dust filter chamber.

Step 2




- Remove the two 10 mm PH1 screws with the screw driver.

Step 3




- Pull the battery cover up and then slide away from the motor to remove.

Step 4

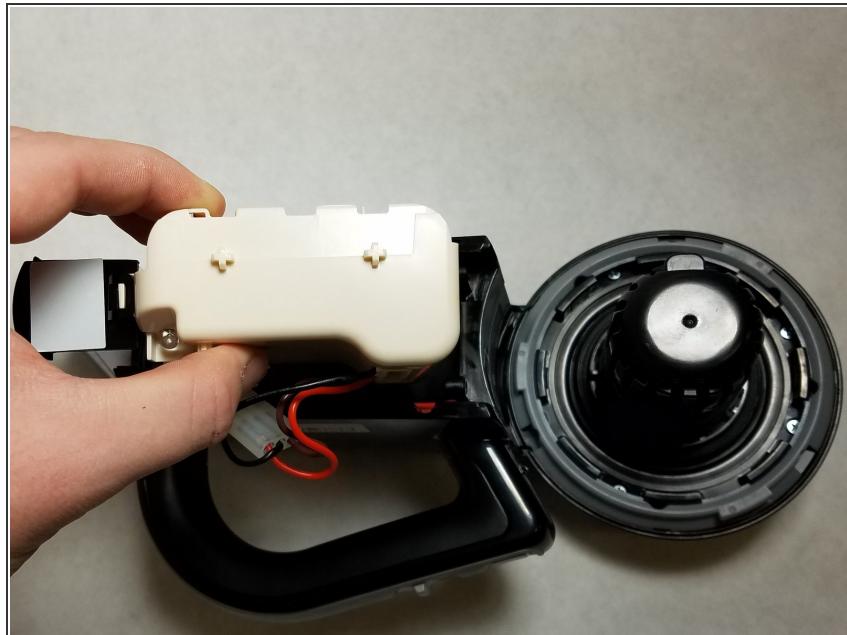

- Remove the battery unit by pulling it out of the main body.

Step 5

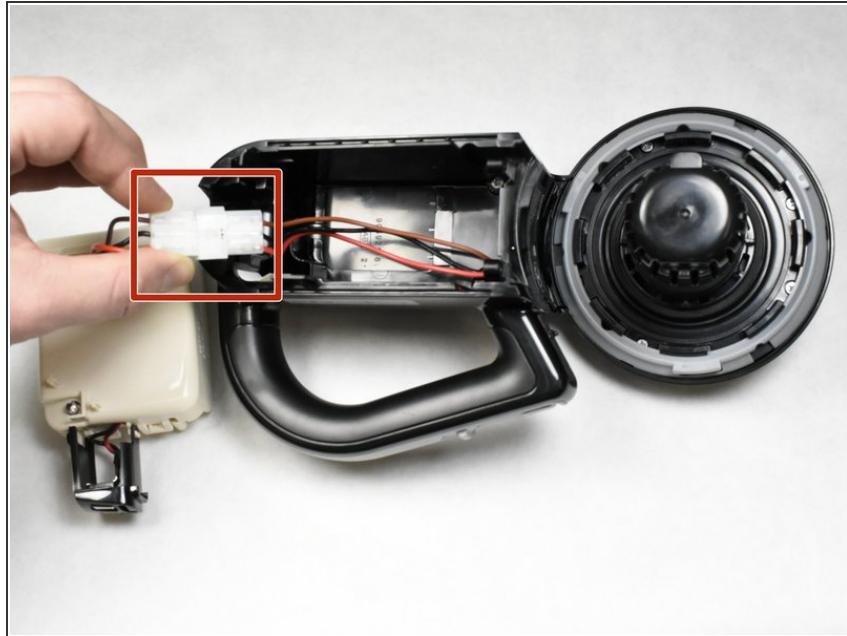

- Disconnect the quick connect

Step 6 — Pivot Lock Button



- Remove the handle cover by removing the three PH1 20mm screws

Step 7



- Pull out the pivot lock button

To reassemble your device, follow these instructions in reverse order.