



# Black and Decker TO1303SB Top Cover Replacement

To view the internals, you must first remove the thin metal cover. This is needed to most of the future replacements.

Written By: Barrett Lowe



This document was generated on 2019-10-01 03:18:40 PM (MST).


## INTRODUCTION

In order to complete the other repairs, except for the control knobs, you will need to do this prerequisite. This prerequisite lets you have easy access to the inside of the toaster oven. Ultimately, this guide is created to remove the top cover.

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [T15 Torx Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Top Cover

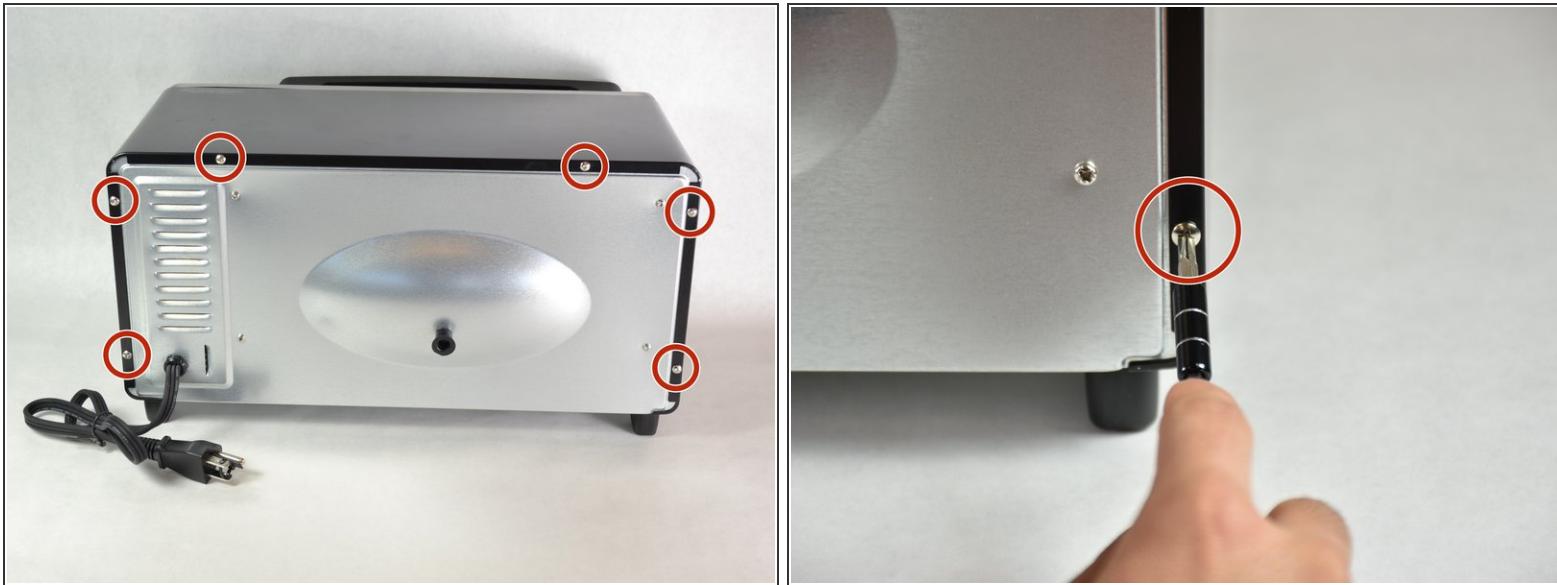


- Remove the six 9.5mm screws on the back panel using a #2 Phillips screwdriver.

## Step 2



- Remove the two 13mm screws, located between the feet on the bottom of the cover, using a Torx T15 screw driver.

## Step 3

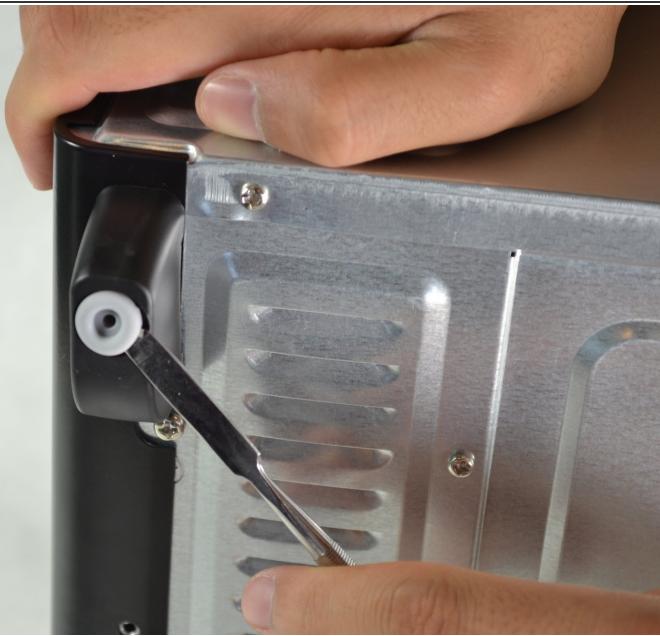


- Using the metal spudger, carefully pry out the rubber base on each foot to access the screws.

## Step 4



- Remove the 11.5 mm screws using a #2 Phillips screwdriver.

## Step 5

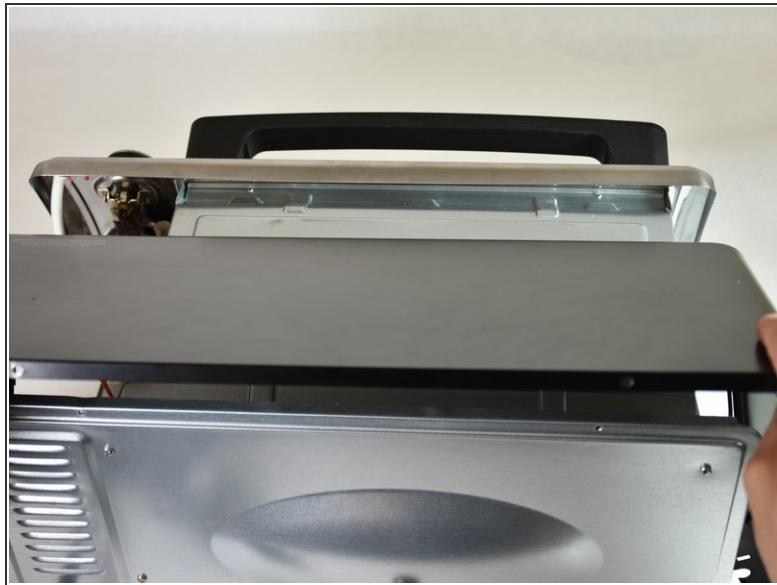

- Remove the back cover by gently pulling the sides of the cover apart from the rest of the oven. Then, tilt the cover towards the face and pull back at an upward angle. The cover should slide right off.

To reassemble your device, follow these instructions in reverse order.