



Blu Grand M Display Replacement

Replacement of the display on a BLU Grand M.

Written By: Liam Rollins



INTRODUCTION

If the phone screen, also called the digitizer, on your BLU Grand M is cracked, follow this guide to replace it. The smart phone screen, also known as the [digitizer](#), is adhered to the smartphone frame with an adhesive. The digitizer is easy to remove and does not require many but you will need a heat gun or hair dryer— use caution when applying heat to the device.

TOOLS:

- [Suction Handle \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Halberd Spudger \(1\)](#)
- [Heat Gun \(1\)](#)

Step 1 — Display



- Trace the outer black edge of the phone screen in a continuous circle with a hairdryer or heat gun to melt the adhesive.
- *i* Melting the adhesive can take between 2-3 minutes.

Step 2



- Insert an opening pick between the screen and the raised black plastic frame.
- *i* The black plastic frame is located inside and above the phone's silvery outer metal frame.
- Insert the flat blade of a nylon halberd spudger between the screen and the black plastic frame.
- Pull the spudger blade through the adhesive around the circumference of the screen.

Step 3



- Apply the suction cup to the phone screen, pressing lightly on the suction cup to remove air and form a tight seal.
- The adhesive may have cooled from the time since step 1 and rebonded to the phone screen. Reheat the adhesive if necessary to return to a liquid state.
- Pull on the handle to lift the screen free from the device.