


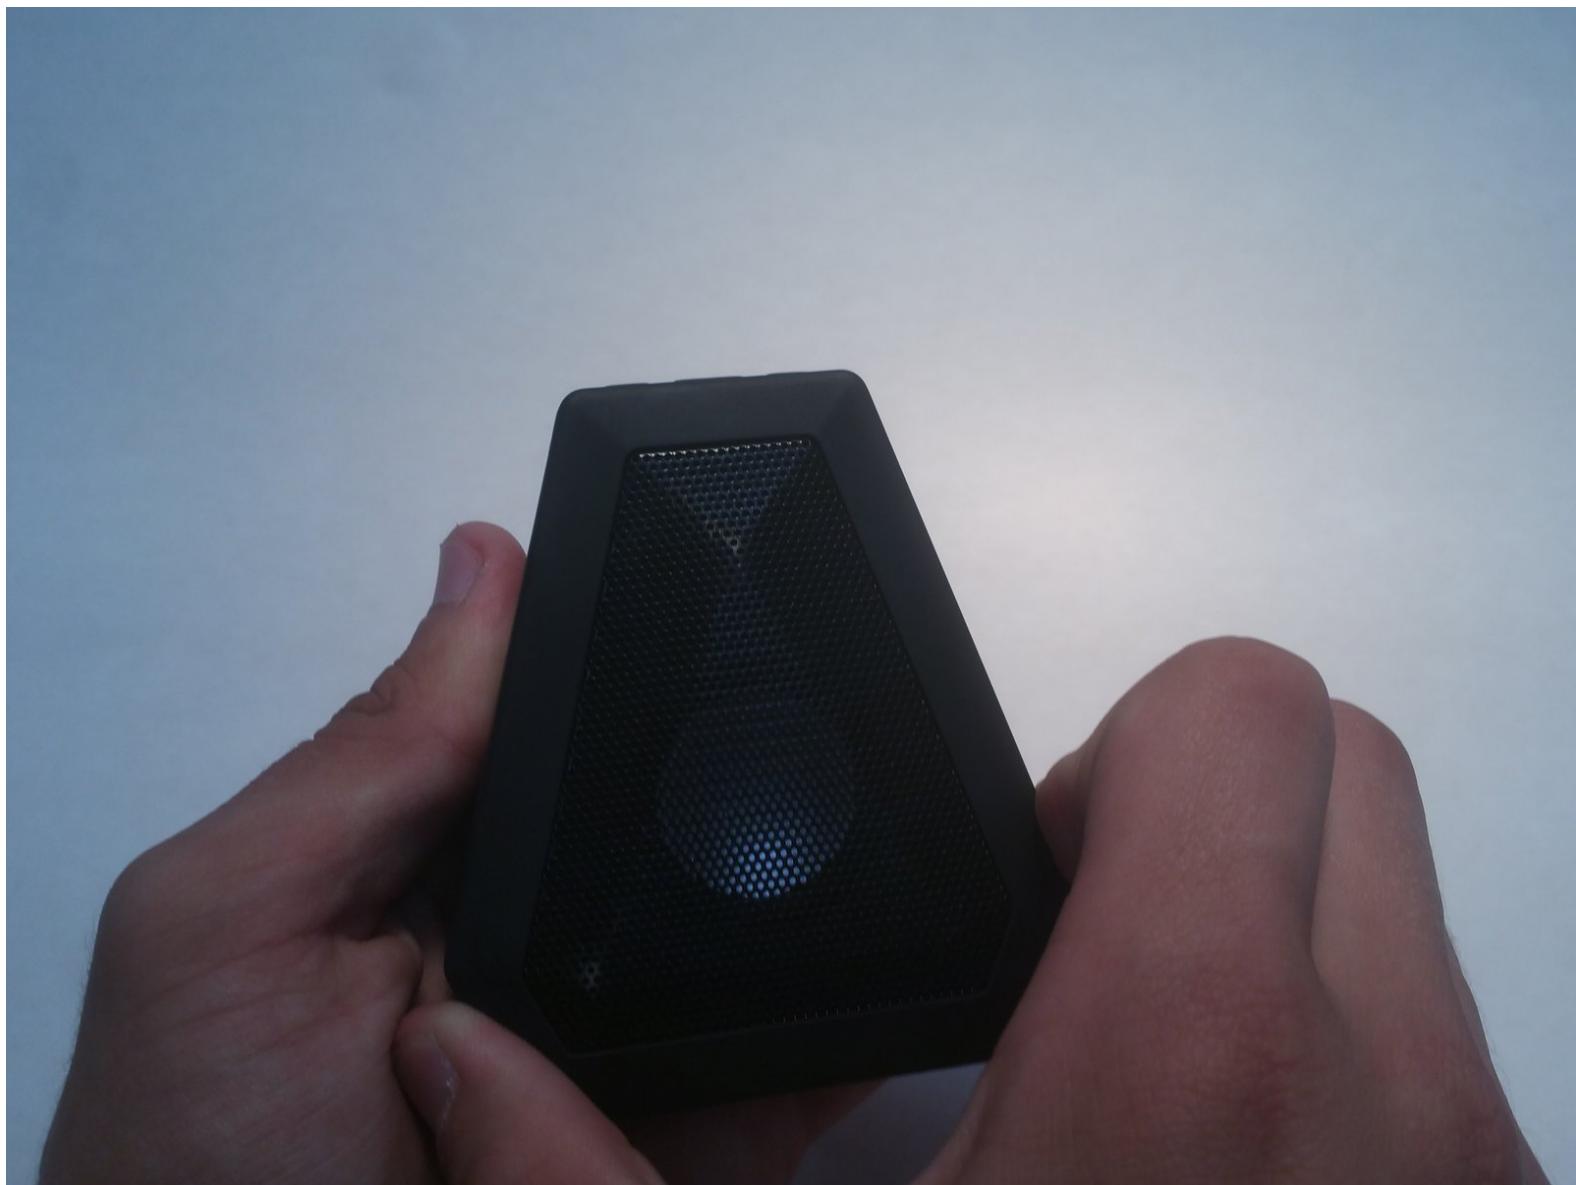

Boombotix Boombot Mini Speaker Replacement

Replace the speaker in your Boombotix Boombot Mini.

Written By: Riley Grogg



INTRODUCTION

Use this guide to replace a speaker in the Boombotix Boombot Mini.

TOOLS:

- Essential Electronics Toolkit (1)


Step 1 — Speaker



- Twist the front panel of the speaker to the left.

 Do not try to pry or pop off the front panel.

Step 2

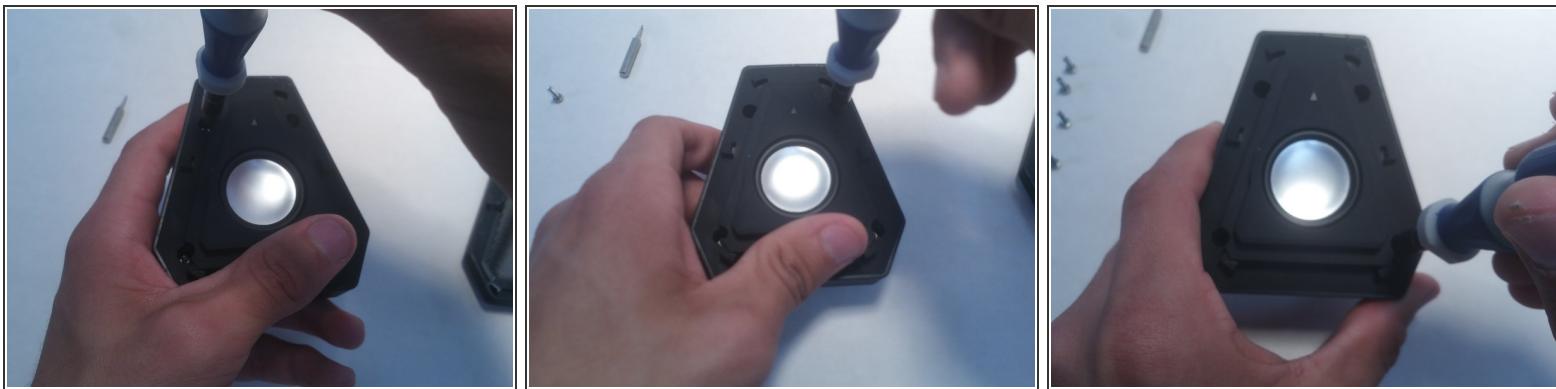

- Take out the four screws, then remove the panel that contains the speaker.

Step 3



- Take the speaker off of the base.
- Expose the motherboard and place the speaker next to it.

⚠ Be careful not to tangle or damage the wires connecting the speaker.

ⓘ This panel will be harder to get off. Use something small such as a card to create a lip for leverage.



Step 4



- Find the connection of the speaker by following the wires.


⚠ Do not damage the battery. Make sure not to use any metal object to poke around in the device because of possible shock.

Step 5

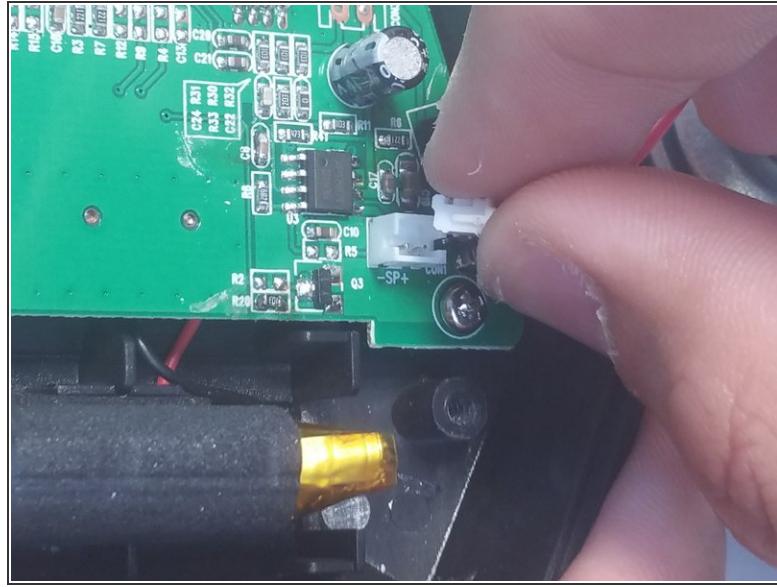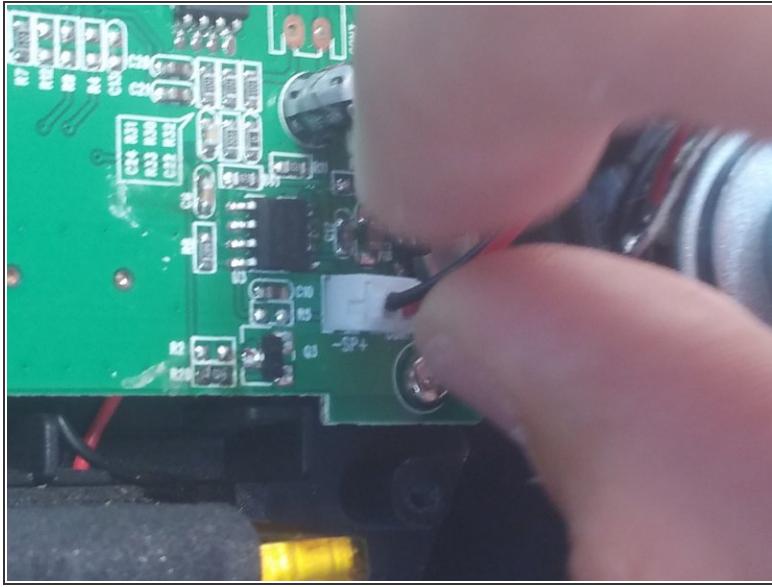

- Now that you have found the wire connection to the motherboard, disconnect it.
- *i* Pull the wire straight out.

Step 6

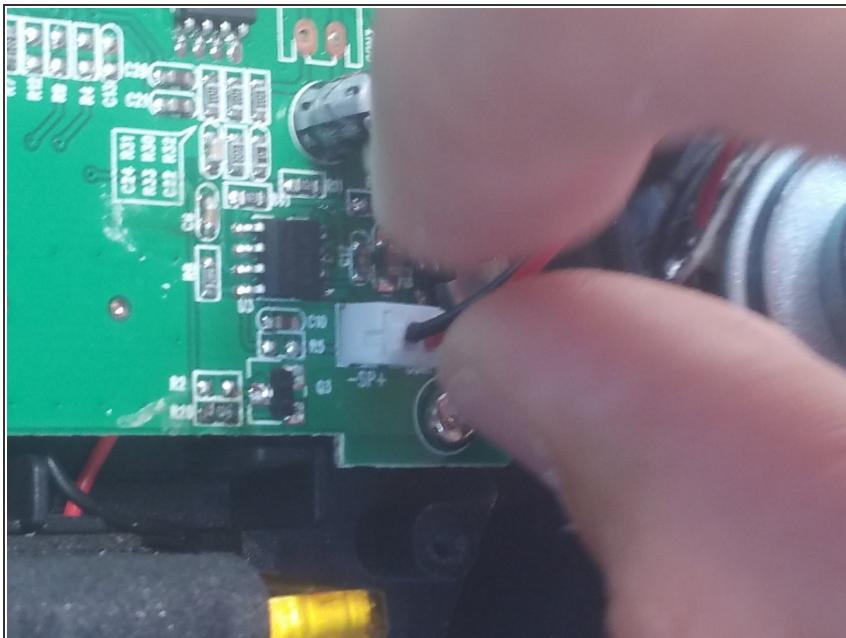

- Connect the white plug of the new speaker to the motherboard.

To reassemble your device, follow these instructions in reverse order.