



Bosch MFQ 36440 Disassembly

Disassembly of the Bosch MFQ36440 hand mixer

Written By: Stanky



 **TOOLS:**

- T10 Torx Screwdriver (1)

Step 1 — Remove screws





- Remove 2x Torx screws (size 10) on the front

Step 2 — Remove the grey front cover



- Remove the front cover
 - Gently push downwards the cover, then pull it through the holes
 - Once it is detached at the top, slide the entire gray cover down

Step 3 — Detach the two sides of the mixer's white case

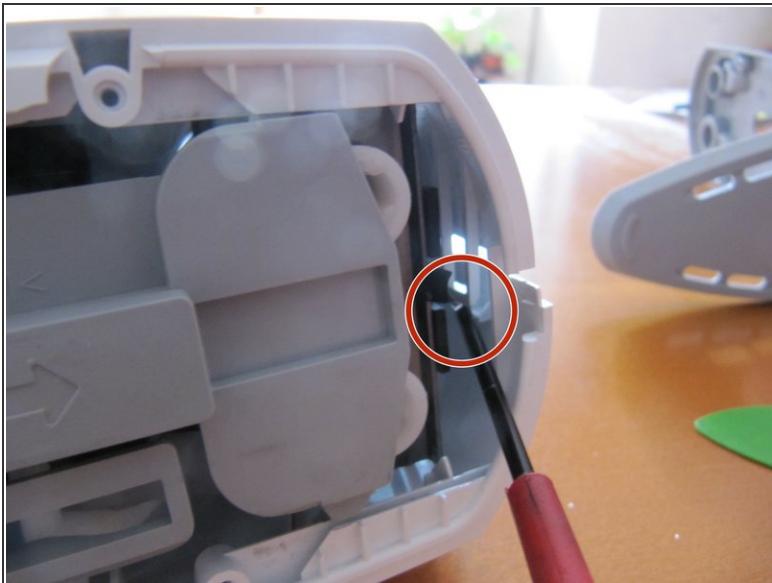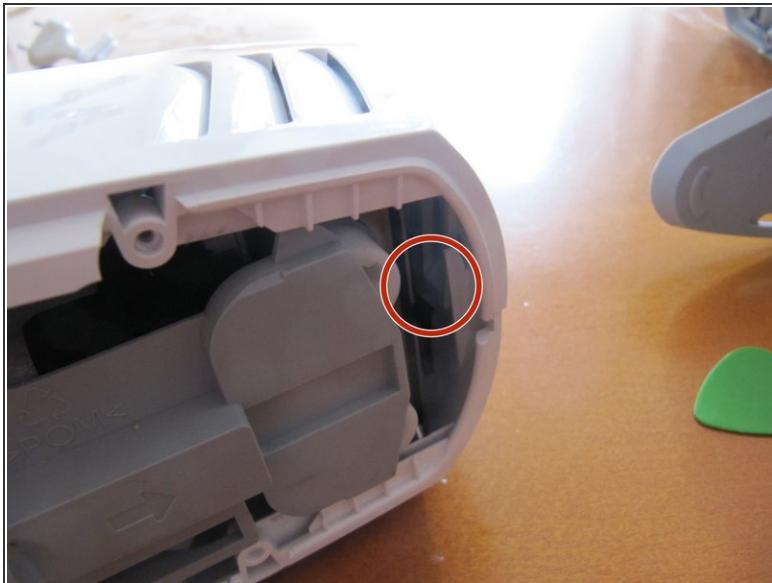

⚠ The first step is somewhat tricky. Use a long screwdriver to release the first part at the top.

- Continue your way all around the case

To reassemble your device, follow these instructions in reverse order.