



Bosch PS21 Battery Replacement

Replace the battery in your Bosch PS21.

Written By: Lillie Wolter



INTRODUCTION

Use this guide to replace the battery in the Bosch PS21.

TOOLS:

- T8 Torx Screwdriver (1)
- Small Needle Nose Pliers (1)
- Tweezers (1)
- iFixit Opening Picks set of 6 (1)
- 64 Bit Driver Kit (1)

Step 1 — Battery



! Remove the battery prior to working on the drill

- Pinch the two release tabs on the sides of the battery, and slide the battery out.

To reassemble your device, follow these instructions in reverse order.