



Bose Solo 5 Sound Bar Speaker Replacement

How to replace a Bose Solo 5 Sound Bar speaker.

Written By: Chase Cooper



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

Step 1 — Speaker




- Lay Bose Solo 5 on its top side with the speakers facing away from you.

Step 2



- Remove the two screws located at the outer edge of the backside with a Phillips head screwdriver.

Step 3

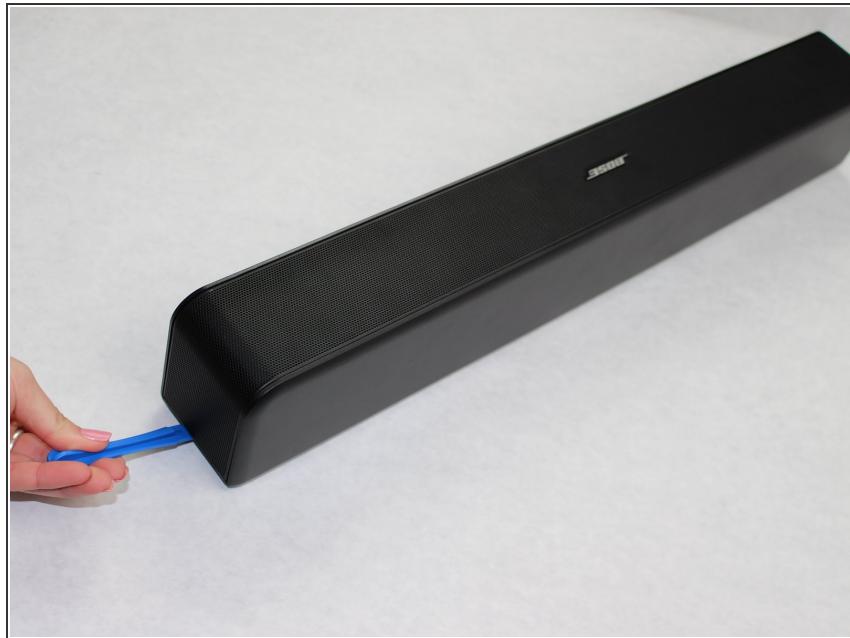

- Lay the speaker on its backside with the speakers facing up. Wedge the plastic opening tool into the crack where the protective wire screen meets the housing. Pry apart until you create enough room for your fingers.

Step 4



- Pull the screen gently away from the housing to reveal the two speakers with your fingers.

Step 5



- Remove the 4 screws in each corner of the speaker to remove it from the housing.

Step 6



- Peel back the styrofoam on the speaker & disconnect the yellow & brown wires by sliding them off the receptor.

To reassemble your device, follow these instructions in reverse order.