



Bose SoundLink Mini Front/Back Protective Grille Replacement

Guide to removing and replacing the front and back protective grilles on the Bose SoundLink Mini speakers.

Written By: Jordan Smith



This document was generated on 2019-09-23 05:04:28 AM (MST).

INTRODUCTION

Use this guide to replace the front or back mesh grilles. Make sure you have the required tools. The first time you remove a grille might be a little difficult due to some glue holding it in place. Be careful when removing, as the grille may bend easily.

TOOLS:

- Metal Spudger (1)


Step 1 — Front/Back Protective Grille



- Insert the Metal Spudger between the rubber edge on the grille and the aluminum casing.

i Place Metal Spudger in the location shown.


Step 2

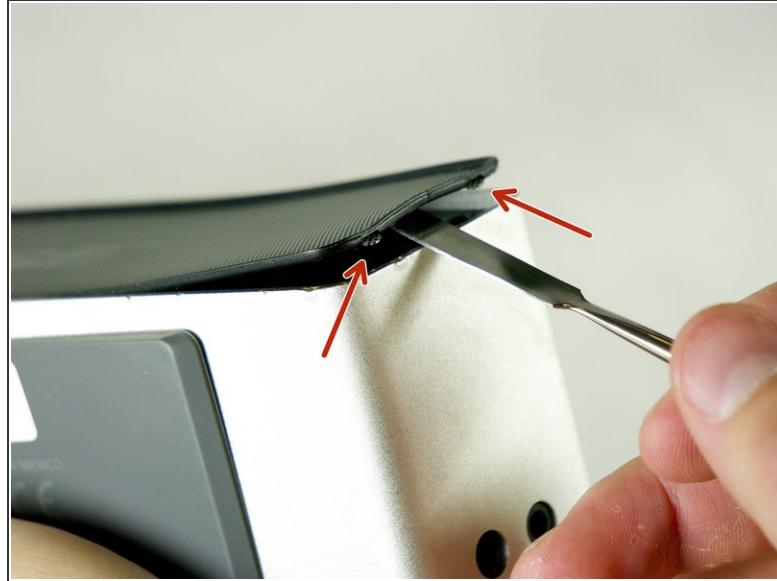

- Slowly pry up the grille until the two tabs shown pop out.

! Be very gentle, the grille will bend.

Step 3

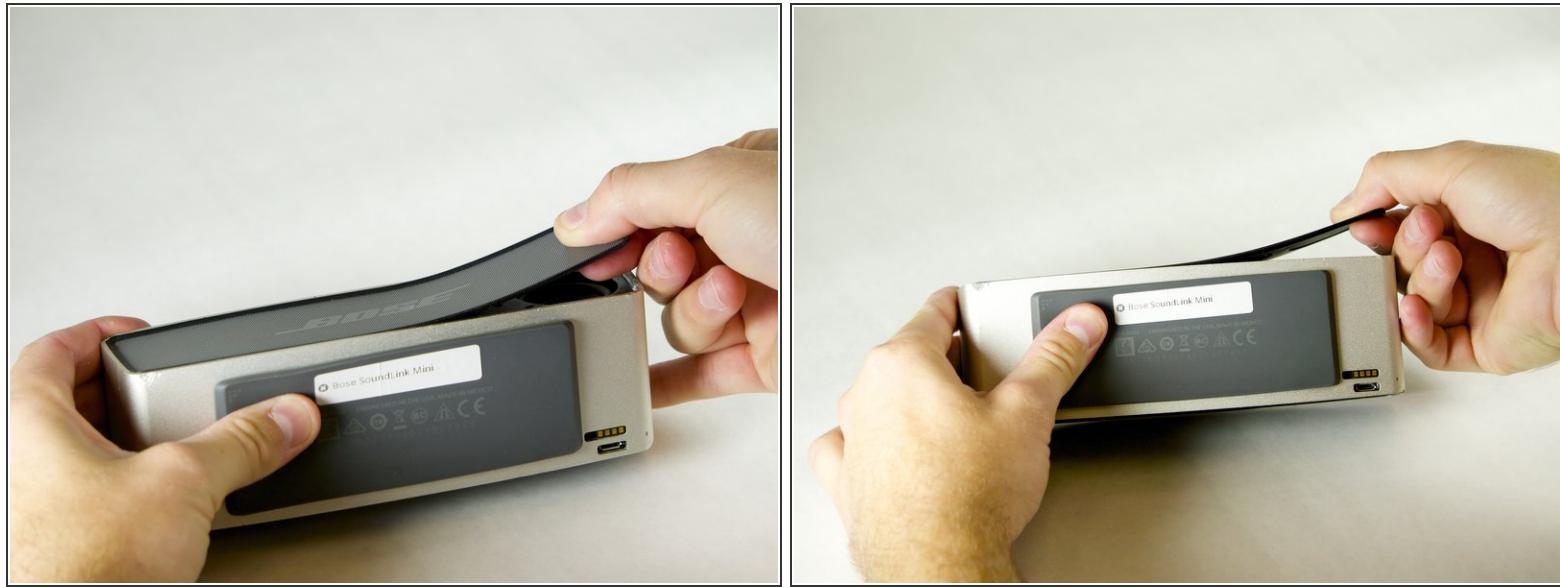

- The grille is attached to the speaker with double sided sticky tape. To remove the grill gently pull upward while keeping tension to the right.

 Be very gentle, the grille will bend.

Step 4



- Repeat steps to remove the back grille.

To reassemble your device, follow these instructions in reverse order.