



Bose SoundLink Mini II Battery Replacement

This guide will help users replace/disassemble the battery of the Bose Soundlink Mini II.

Written By: Devon



INTRODUCTION

Speaker not turning on? This guide will help you replace the battery of the Bose Soundlink Mini II.

Note: Removing and reinstalling the battery requires the use of a soldering iron and/or a lot of careful disassembly.

TOOLS:

- [T9 Torx Screwdriver](#) (1)
- [64 Bit Driver Kit](#) (1)
- [Soldering Iron](#) (1)
- [Desoldering Braid](#) (1)
- [Solder](#) (1)

PARTS:

- [Bose SoundLink Mini II Replacement Battery](#) (1)

Step 1 — Battery



- Flip the speaker over onto its back.

Step 2



- Gently remove the rubber base from speaker by pulling around the edges.

Step 3



- Remove the four 6mm T9 Torx bit screws from the corners of the battery.

Step 4



- Carefully lift the battery from the side nearest the four gold contact pins, but don't try to fully remove it yet.
 - At this point, the battery remains connected via two wires to the power supply board.
- Carefully desolder the two wires from the power supply board in order to completely detach the battery.
 - For help with soldering, see the [soldering guide](#).
- Alternatively, you may remove the battery and power supply board together, without any soldering, but access requires some [additional disassembly](#) while carefully leaving the battery connected via the two wires the entire time.

To reassemble your device, follow these instructions in reverse order.