



Bose SoundTouch 10 Front Panel Replacement

Removing the Bose SoundTouch 10 front panel allows for cleaning the mesh or for access to parts inside that may need to be replaced.

Written By: James Asbury



This document was generated on 2019-10-20 12:23:01 AM (MST).

INTRODUCTION

If the front mesh is dirty on your Bose SoundTouch 10, the front panel may need to be removed for cleaning with a fine bristle brush or compressed air.

You may also need to remove the front panel for access to parts inside the speaker that may need to be replaced.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #2 Screwdriver](#) (1)

Step 1 — Front Panel



- Turn the speaker over so that the rubber strips along the bottom are facing you.
- Use the iFixit Opening Tool to peel back the rubber strip on the bottom-front edge.

Step 2



- Use a #2 Phillips screwdriver to remove each of the three 20mm screws on the bottom front edge of the speaker.

Step 3



- Slide the front panel with the mesh covering downwards to disconnect it from the SoundTouch 10 body.
- Lift the panel away to reveal the speaker head.

To reassemble your device, follow these instructions in reverse order.