



Bose SoundTouch Portable Plastic Casing

How to remove the outer plastic casing of the Bose SoundTouch Portable speakers.


Written By: Alejandro Ruiz del Sol



 **TOOLS:**

- [T10 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Plastic Casing

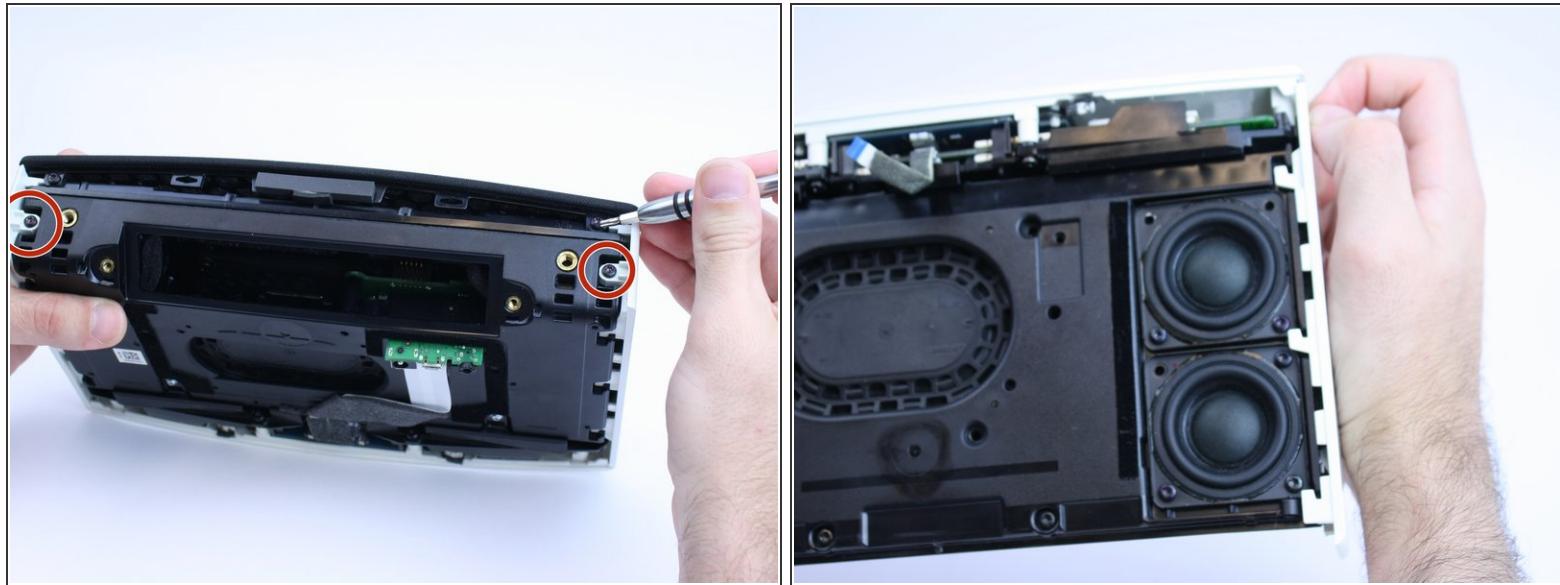

- Remove the two T-10 Torx screws that are holding the white plastic sidings in place.
- Grab and pry off the white plastic sidings.

Step 2



- Pry off and separate the black plastic casing.

To reassemble your device, follow these instructions in reverse order.