



Bose Soundlink II Side Cover Replacement

This guide will show how to remove the side covers of the Soundlink II to allow for access to the innards of the device.

Written By: John P Loughran



INTRODUCTION

The Bose Soundlink II is a compact Bluetooth speaker requiring substantial disassembly in order to access the components of the device. The side covers are easy to remove if the location of the necessary screws is known.

TOOLS:

- T10 Torx Screwdriver (1)

Step 1 — Bose Soundlink II Cover Removal



- Using a screwdriver with a T-star torque, remove the two 13 mm screws from the bottom of the speaker.

Step 2



- Pull on the black tab that says "BOSE" on the front cover.
- The back of the cover is latched on by two 13 mm screws. To remove the cover, you must move the back of the cover upwards to unlatch from the screws.

Step 3 — Side Cover



- Remove the black electrical tape in order to reveal the screws attaching the side cover to the main body of the speaker. These screws are on the base of the device.

Step 4



- Using the T-10 star tip screwdriver, remove the two 13 mm screws located on the bottom of the speaker on each side of the battery pack.

Step 5



- Slide the silver side cover down toward the base of the speaker. The silver cover will come off easily.

To reassemble your device, follow these instructions in reverse order.