



# Bose Soundlink II Speaker Replacement

This guide will show how to replace one of the 4 small speakers in the Bose Soundlink 2.

Written By: John P Loughran



## INTRODUCTION

The Bose Soundlink II has 4 small speakers on the front face of the speaker. These speakers require substantial disassembly to reach.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T10 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Bose Soundlink II Cover Removal



- Using a screwdriver with a T-star torque, remove the two 13 mm screws from the bottom of the speaker.

## Step 2



- Pull on the black tab that says "BOSE" on the front cover.
- The back of the cover is latched on by two 13 mm screws. To remove the cover, you must move the back of the cover upwards to unlatch from the screws.

## Step 3 — Side Cover



- Remove the black electrical tape in order to reveal the screws attaching the side cover to the main body of the speaker. These screws are on the base of the device.

## Step 4




- Using the T-10 star tip screwdriver, remove the two 13 mm screws located on the bottom of the speaker on each side of the battery pack.

## Step 5



- Slide the silver side cover down toward the base of the speaker. The silver cover will come off easily.

## Step 6 — Button Cover

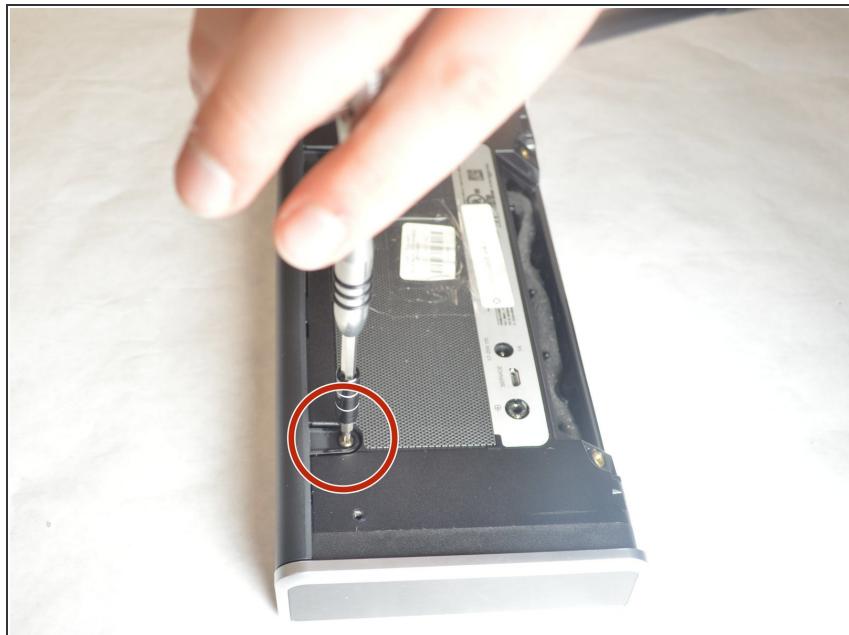

- Once the Bose Soundlink II Side Covers Removal has been completed, remove the two screws (13 mm) an inch below the buttons on the back of the speaker using the T-10 star tip screwdriver.

## Step 7



- Using a tool such as a spudger or plastic opening tool, insert the end into one of the small indentations located on the back of the speaker. Start either on the indentation farthest to the right or to the left.
- Pry up with the spudger or plastic opening tool so that the cover is pushed up slightly.

## Step 8




- Repeat this process with each of the indentations, working your way left or right (depending on where you start).

## Step 9



- Pull the cover around the buttons off. If you'd like, you can remove the button cover as well.

## Step 10 — Speaker

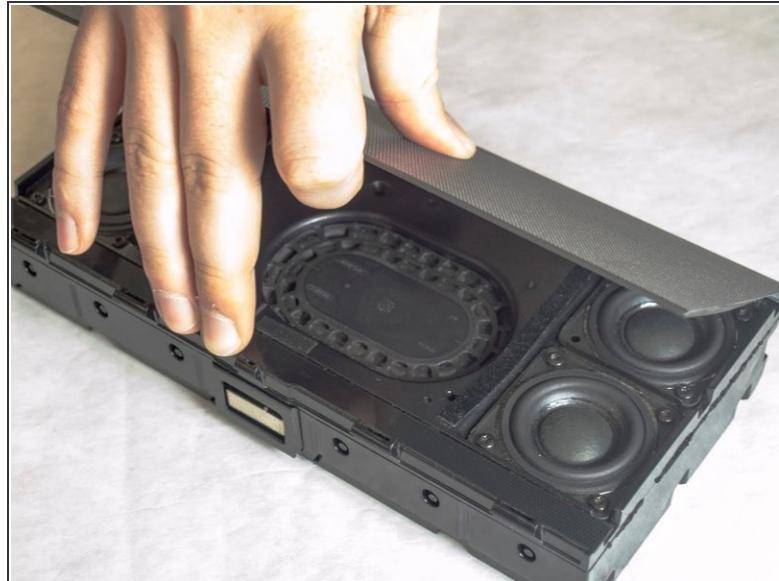


- Pull the metal grill off of the speaker.

## Step 11




- Using the T-10 star tip screwdriver, unscrew the four 13 mm screws around each of the speakers.

## Step 12

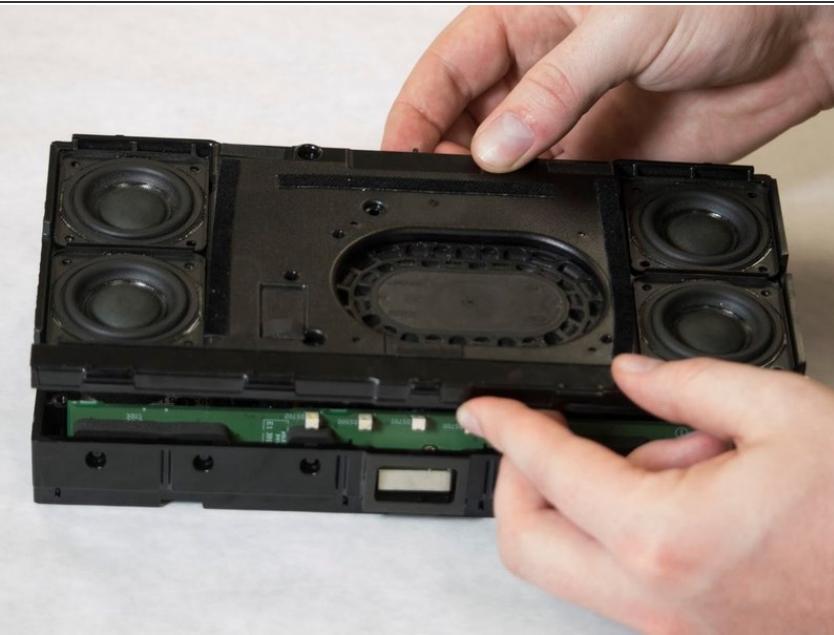


- Lift off the cover. (You may need to pry it open)

## Step 13

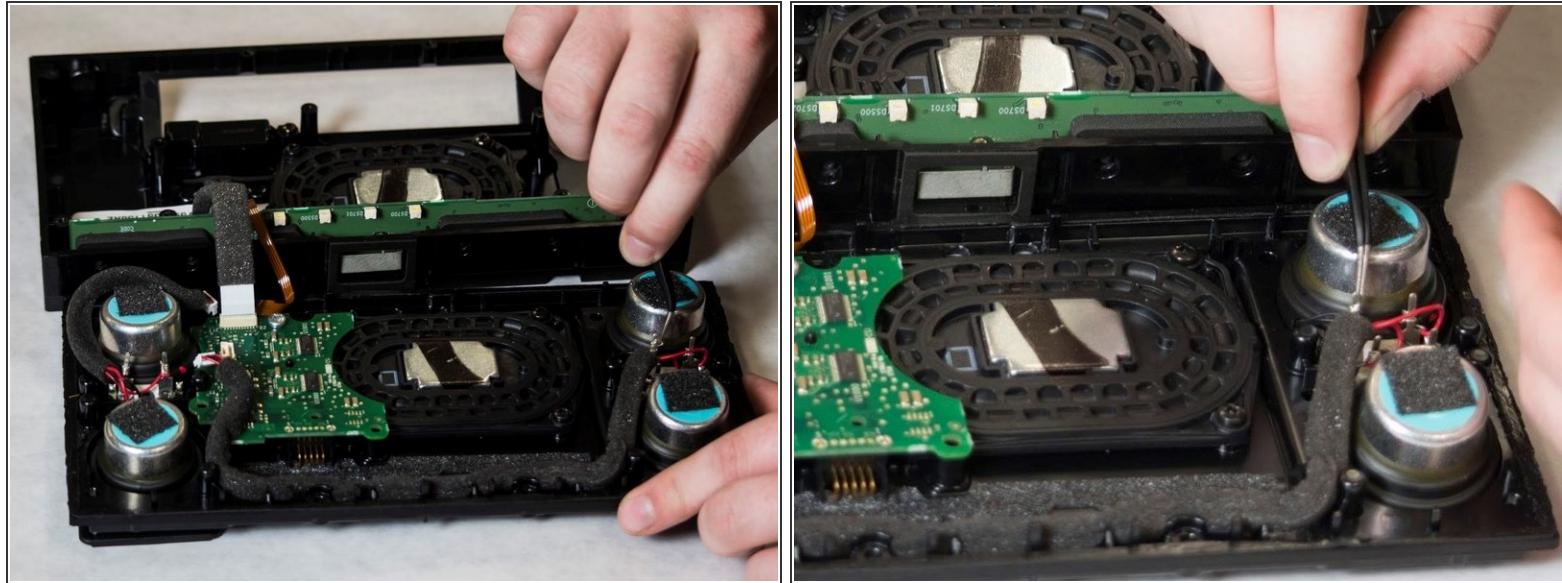

- Unwind the wires corresponding to the speaker you want to remove (our photo shows the removal of the top right speaker).

## Step 14

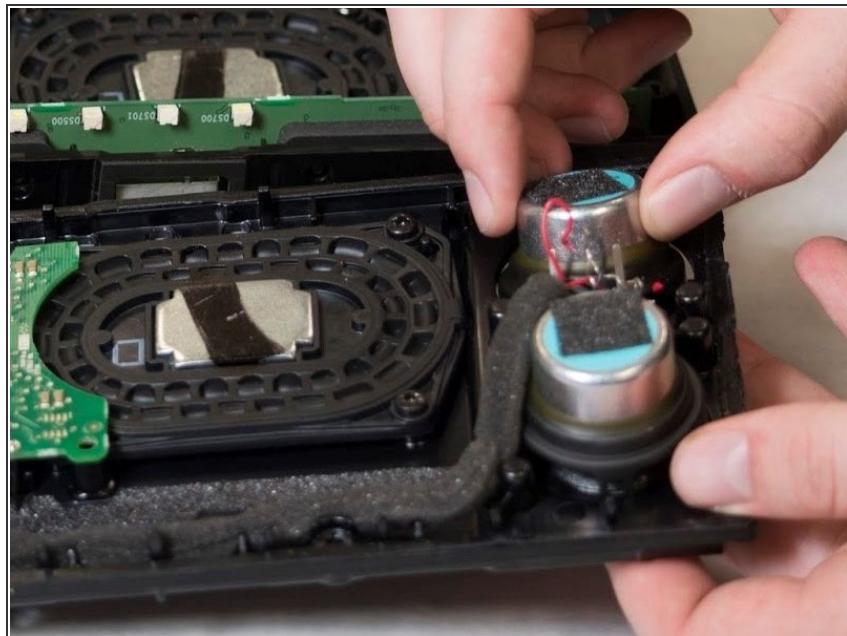

- Carefully pop out the speaker after the wires have been unwound.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-24 07:38:34 PM (MST).

