



Braun 5514 Battery Replacement

This guide covers how to disassemble the Braun 5514 trimmer for the purpose of replacing the rechargeable battery within it.

Written By: Andrew Kluckhuhn



INTRODUCTION

Over time, rechargeable batteries lose their ability to recharge. This guide shows you how to replace the battery in a Braun trimmer.

TOOLS:

- [iFixit Opening Picks set of 6 \(1\)](#)
- [Soldering Iron \(1\)](#)
- [1.5 mm Flathead Screwdriver \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)
- [Screw Extracting Pliers \(1\)](#)

Step 1 — Battery



- Remove any attached trimmer heads by gripping and pulling away from the body.

Step 2



- Insert an opening pick between the top plate and the grey separator.
- Slide the opening pick around the perimeter of the plate to release the hidden clips.

Step 3




- Remove the four 7.0mm Torx T6 screws attaching the grey plastic frame to the black plastic casing.

Step 4



- Use the opening pick to lift the grey frame from the black casing.

Step 5

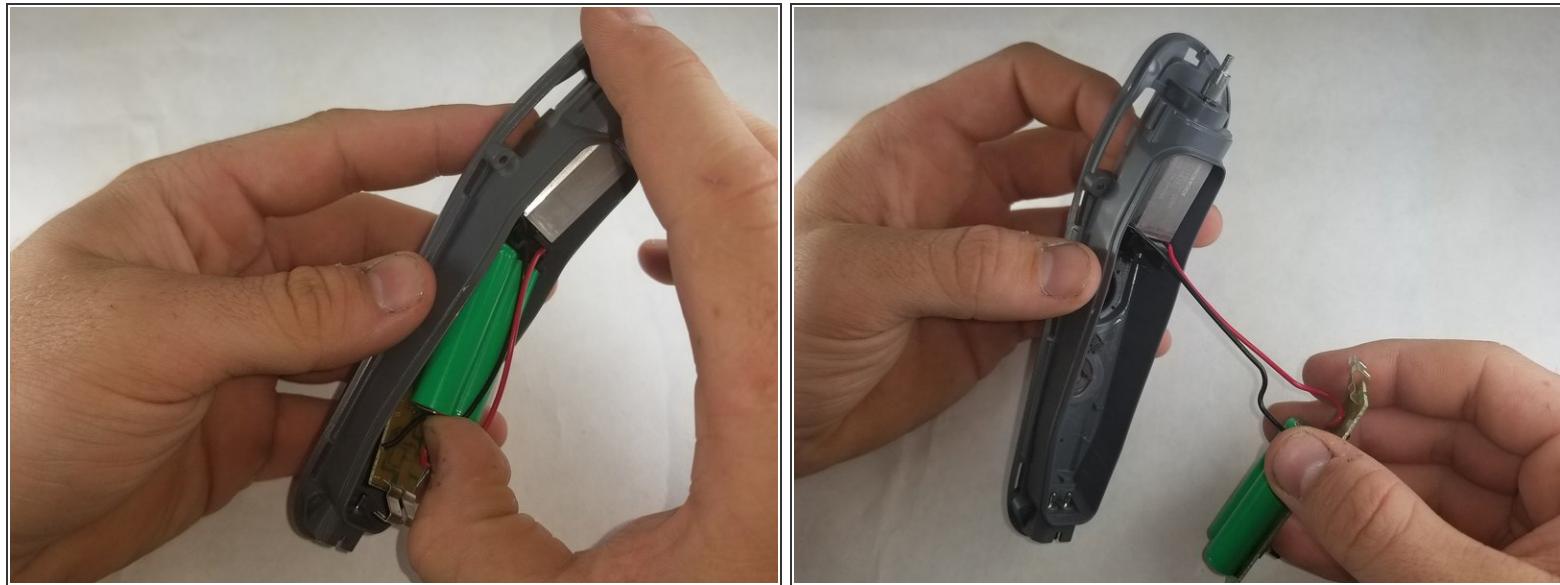



- Remove the circuit board assembly from the frame.

Step 6



- Pull the small black plastic piece out of the frame.

Step 7

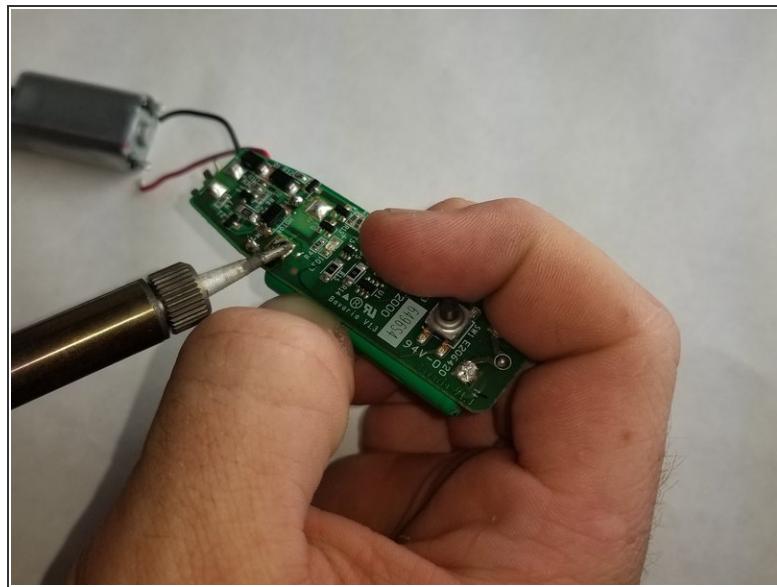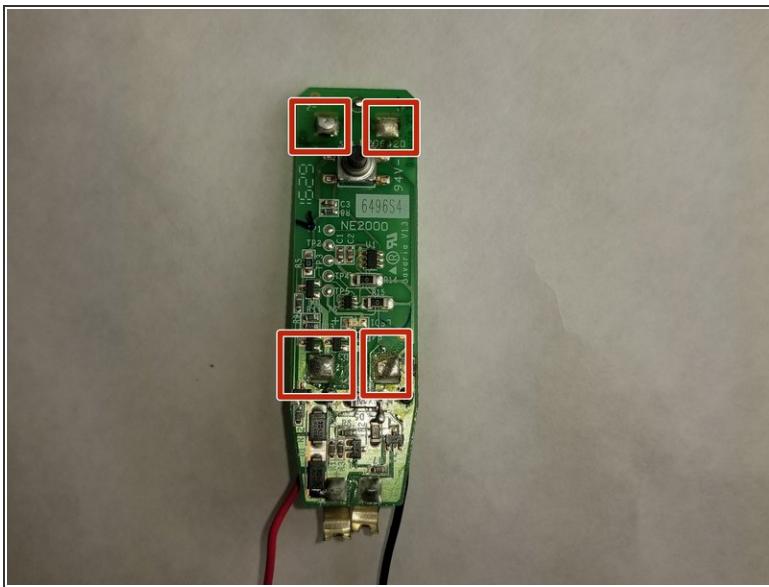

- Desolder the four tabs connecting the batteries to the circuit board.
- Repeat for the other side of the battery.

To reassemble your device, follow these instructions in reverse order.