



# Braven BRV-X Front Speaker Panel Replacement

This guide will go through a disassembly of the Braven BRV-X's front speaker and buttons panels.

Written By: Trey Peterson



## INTRODUCTION

Use this guide to remove the front speaker panel in your device. You'll need to know how to solder to fully replace the speaker panel in your Braven BRV-X. The [How to Solder and Desolder Connections](#) guide may help you with this guide.

### TOOLS:

- Metal Spudger (1)
- 1.5mm Hex Screwdriver (1)
- Phillips #00 Screwdriver (1)

## Step 1 — Front Speaker Panel




- Remove four 1.1 cm outer screws in the outer shell using the Phillips #00 screwdriver.

## Step 2




- Remove four 1.3 cm inner screws in the outer shell using the 1.5mm Hex screwdriver.

## Step 3

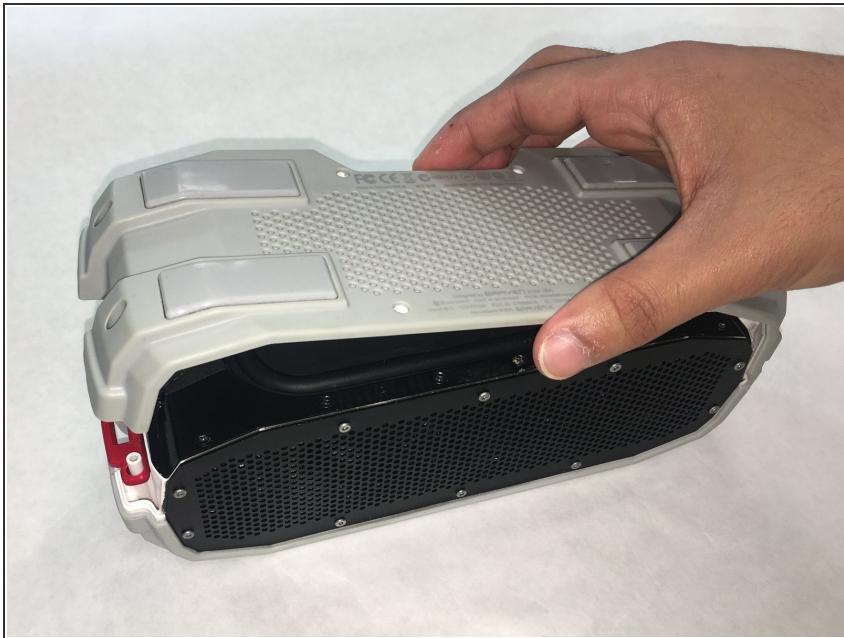


- Gently remove the outer shell.

## Step 4

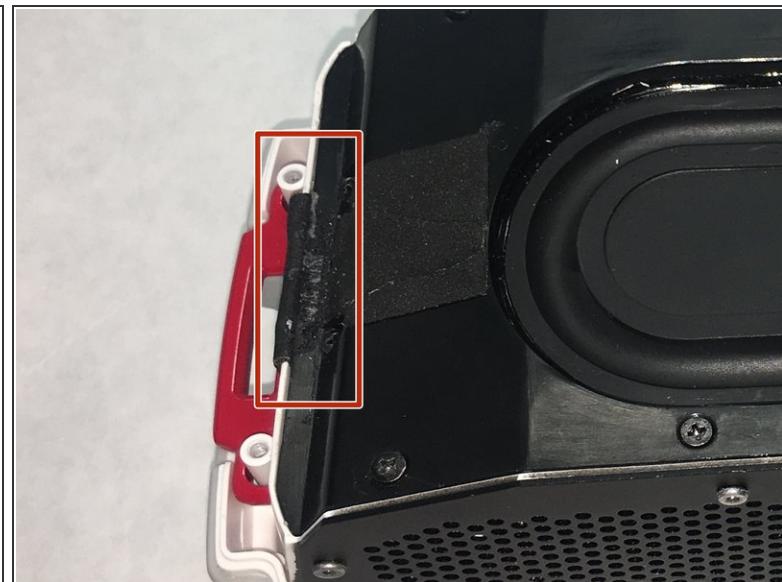

- Cut adhesive tape on both sides.

## Step 5

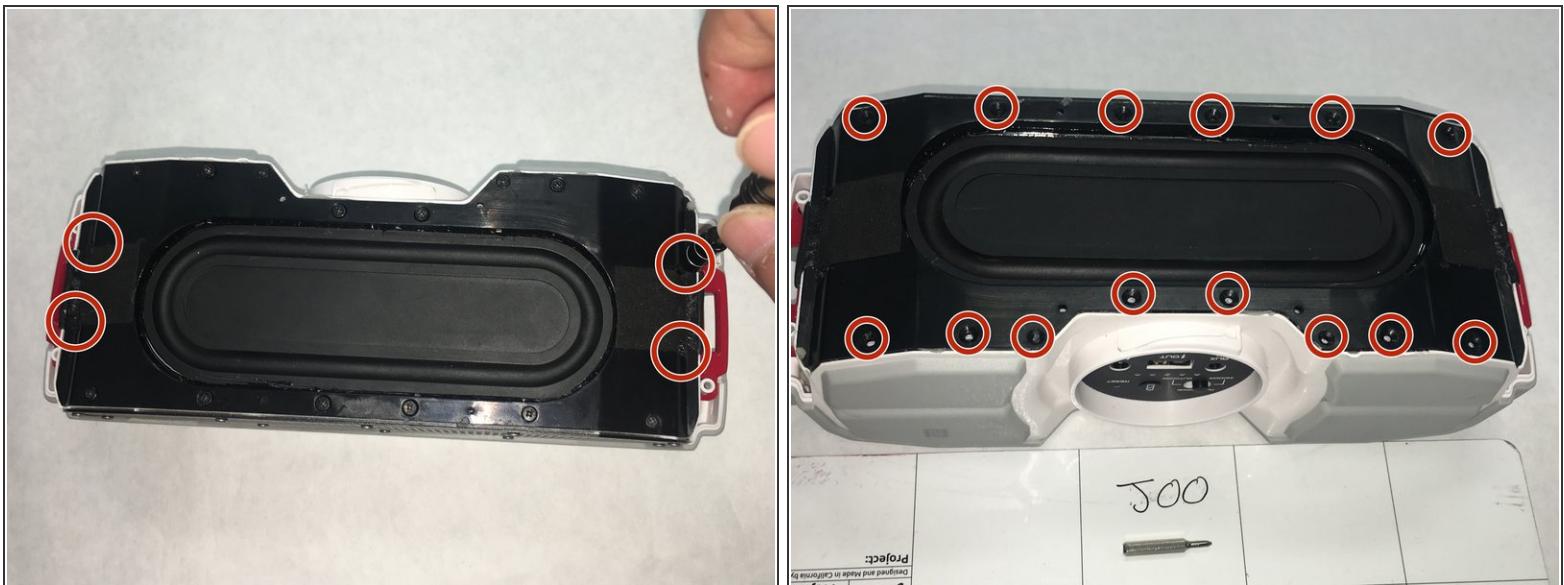

- Remove eighteen 0.9cm screws in the inner shell using the Phillips #00 screwdriver.

## Step 6



- Pry open the glued inner shell using a spudger around all sides of the shell.

**⚠** Don't use too much pressure as that could cause damage to the plastic.

## Step 7




- Remove ten 0.7 cm screws in the front plate using the 1.5 mm Hex screwdriver.

## Step 8





- Use a spudger to open the front speaker plate.

## Step 9

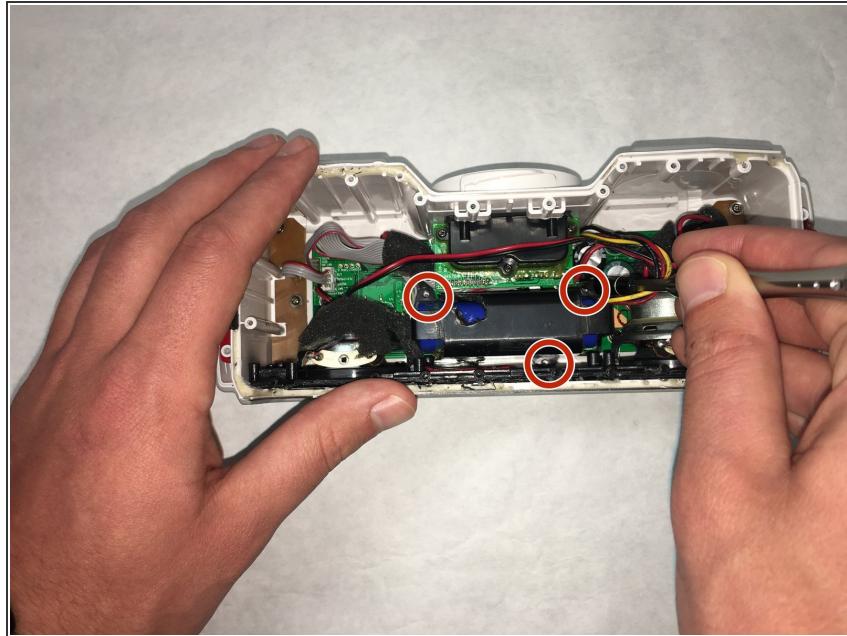

- Remove three 1.0 cm screws from the battery unit.
- *i* It is recommended (but not required) to remove the battery.

## Step 10

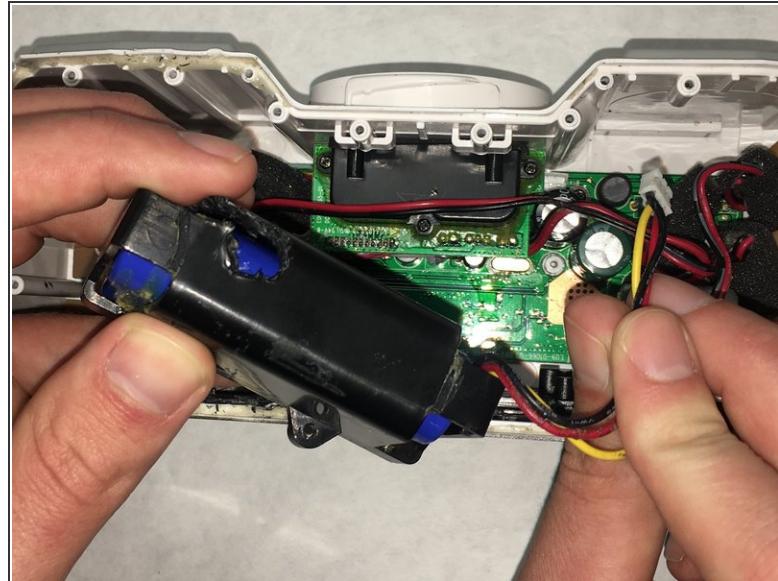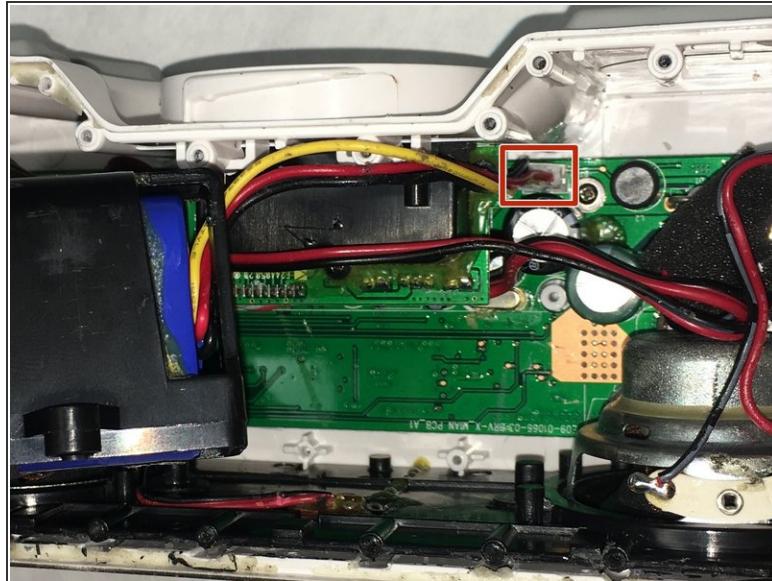

- Disconnect the ribbon cable attached the main board.


## Step 11



- Pry open the second plate holding in the speaker using a spudger around all sides.
  - It is recommended to use a spudger to remove the heavily glued areas between the plates before prying.

 Don't use too much pressure as that could cause damage to the plastic.

## Step 12

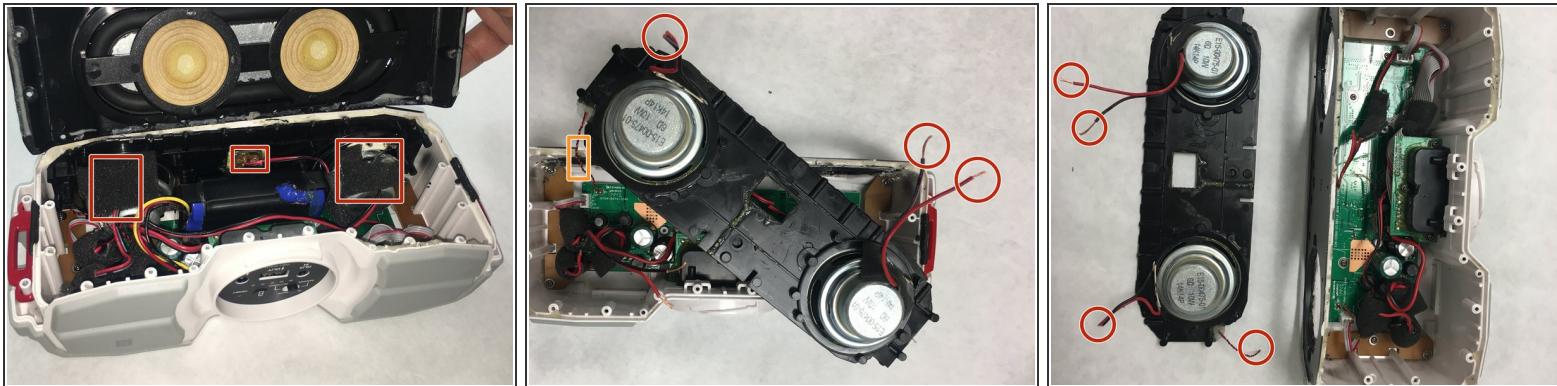

- Cut the 20 gauge wires attached to the front IR sensor and two speaker wires.
  - Leave enough length on the wire to work with it afterwards.
- Cut the 22 gauge wire attached in the corner.
- Solder the new speaker plate during reassembly.

● To properly solder and desolder connections, visit the [How to Solder and Desolder Connections](#) guide.

To reassemble your device, follow these instructions in reverse order.