



Brother PT-1010 Cassette Tape Replacement

This replacement guide will walk you through the process of replacing the tape cassette on your PT-1010.

Written By: Haley Sweet



Step 1 — Remove Back Cover



- Remove the back cover of the device by simultaneously pressing down on the indication arrows on the top center, then pulling toward you.

Step 2 — Insert Tape Cassette



i Brother TZ tape is required for this replacement process. We don't have the tape cassette but you should be

able to insert tape cassette into the red marked area as shown in the picture.

- Insert tape cassette into the red marked area as shown in the picture.
- Make sure the cassette snaps into place by applying a small amount of pressure.

To reassemble your device, follow these instructions in reverse order.