


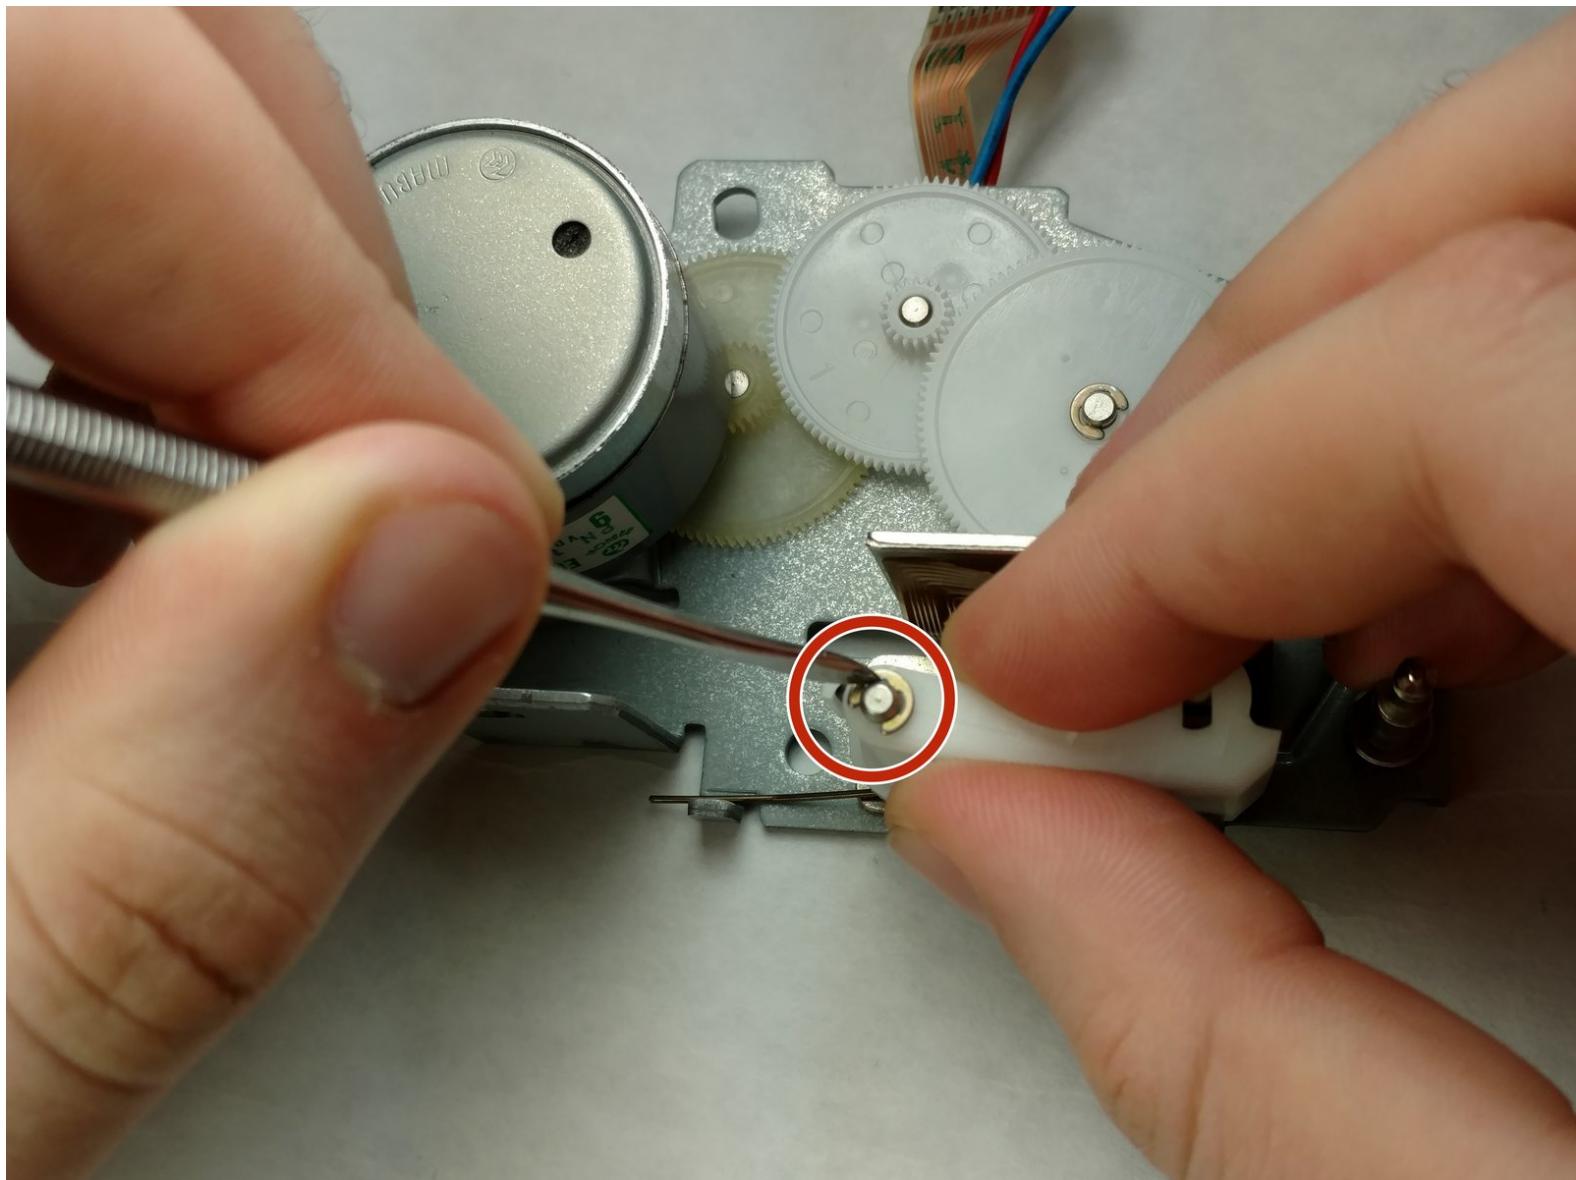

# Brother PT-110 Print Roller Lever Replacement

This guide will show you how to replace the plastic print roller lever.

Written By: Kimberly Larsen



## INTRODUCTION

The entire motor/gear assembly housing should be removed before starting.

### TOOLS:


- Phillips #1 Screwdriver (1)
- Metal Spudger (1)

## Step 1 — Batteries




- Push on the side of the cover, and remove it.

## Step 2

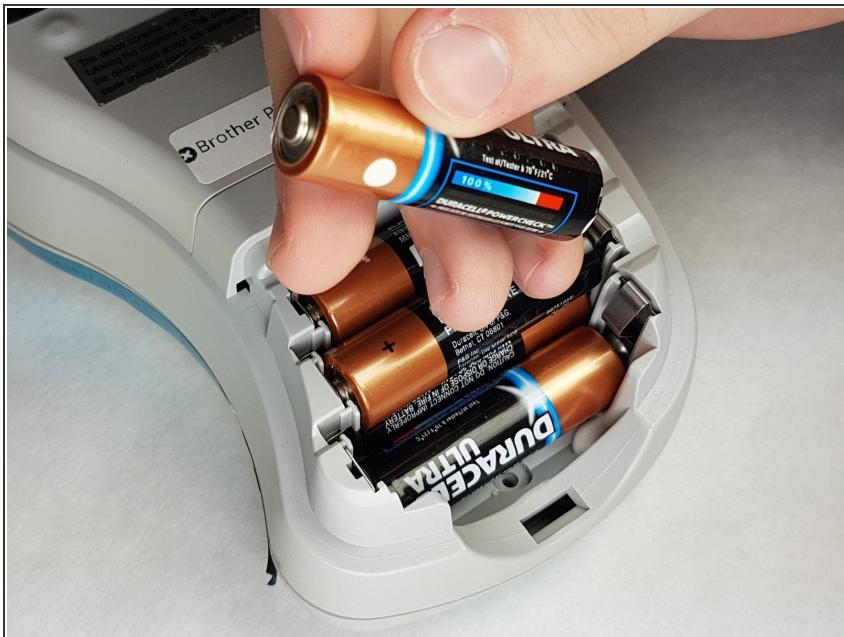

- Remove the batteries.


## Step 3 — Back Plate

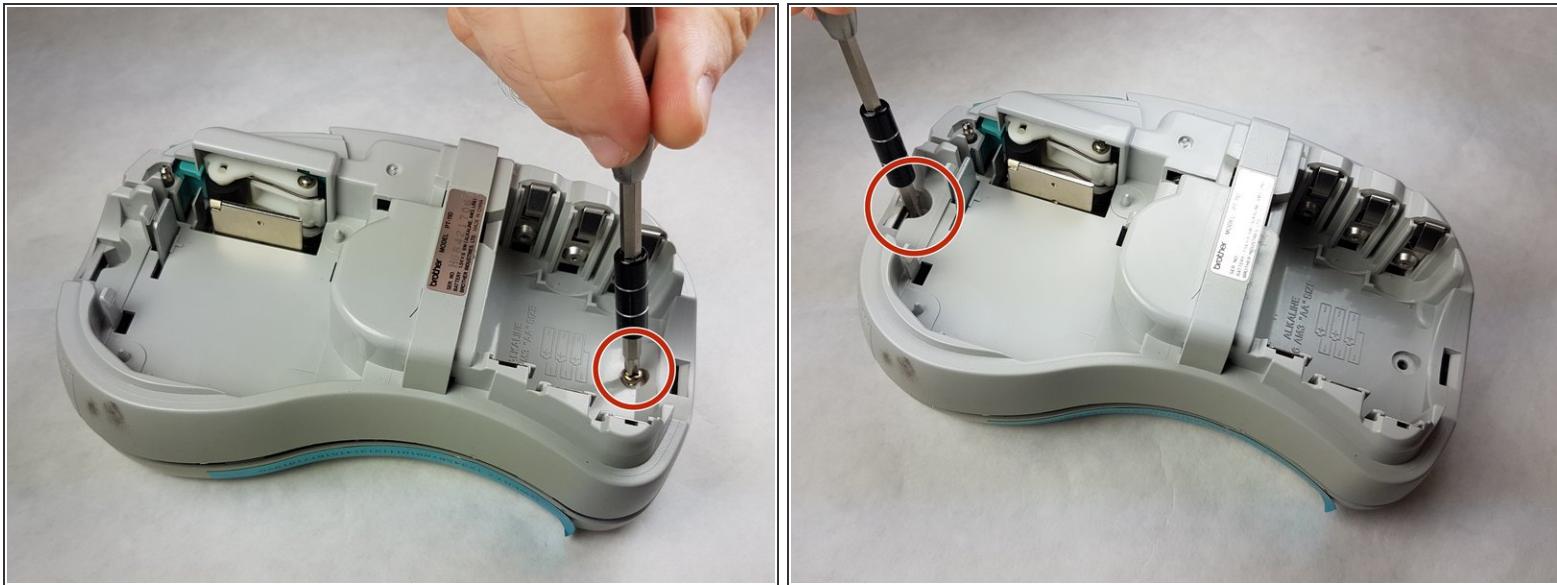

- Unscrew the two 9 mm Phillips #1 screws from the top and bottom.

*(i)* Total: 2 x Screws

## Step 4

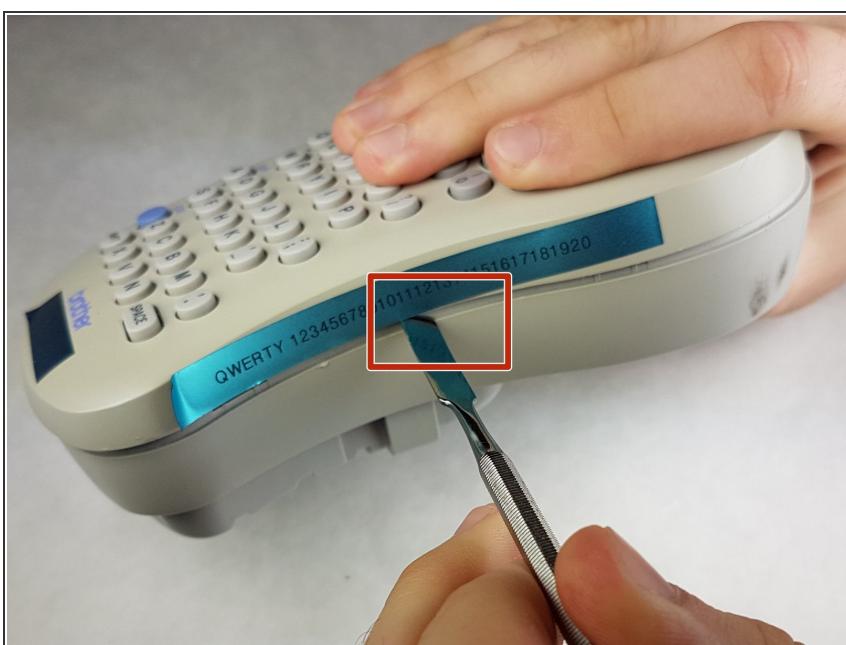


- First: To separate the top cover from the body, insert a spudger between the two halves.
- Gently twist the spudger until the two halves separate. Do this in multiple spots around the perimeter of the cover to distribute the pressure.

**DO NOT PULL HALVES APART.**


There are wired connections inside that must be disconnected before halves can be fully separated.

## Step 5

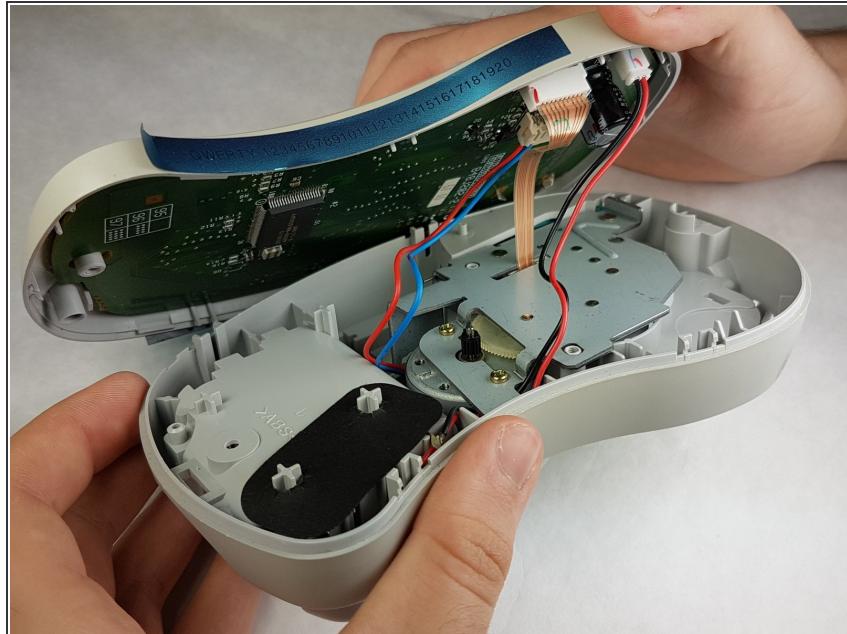


Gently separate the two covers, ensuring wires are not taut.

## Step 6

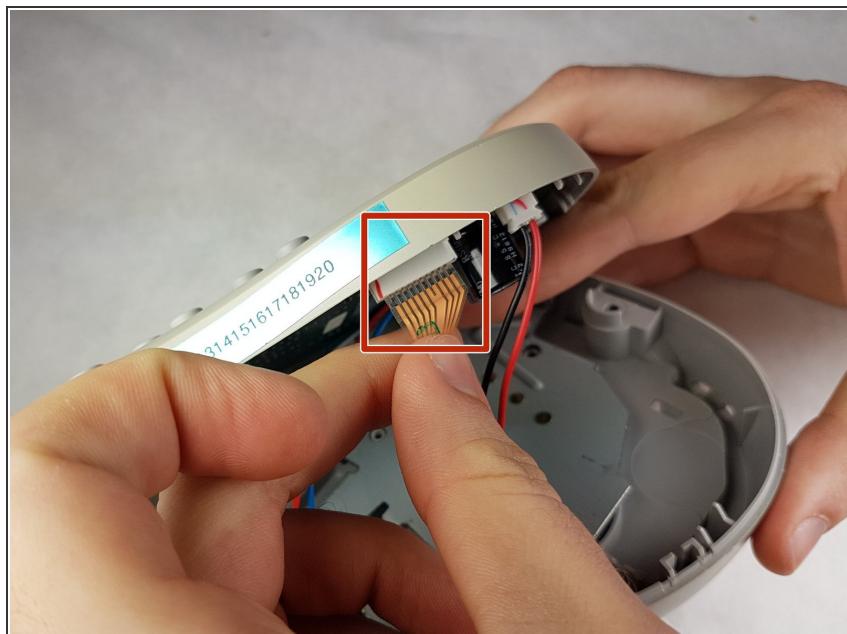

- Gently grasp the ribbon wire and top cover, then gently pull the ribbon wire out of its connection.


## Step 7

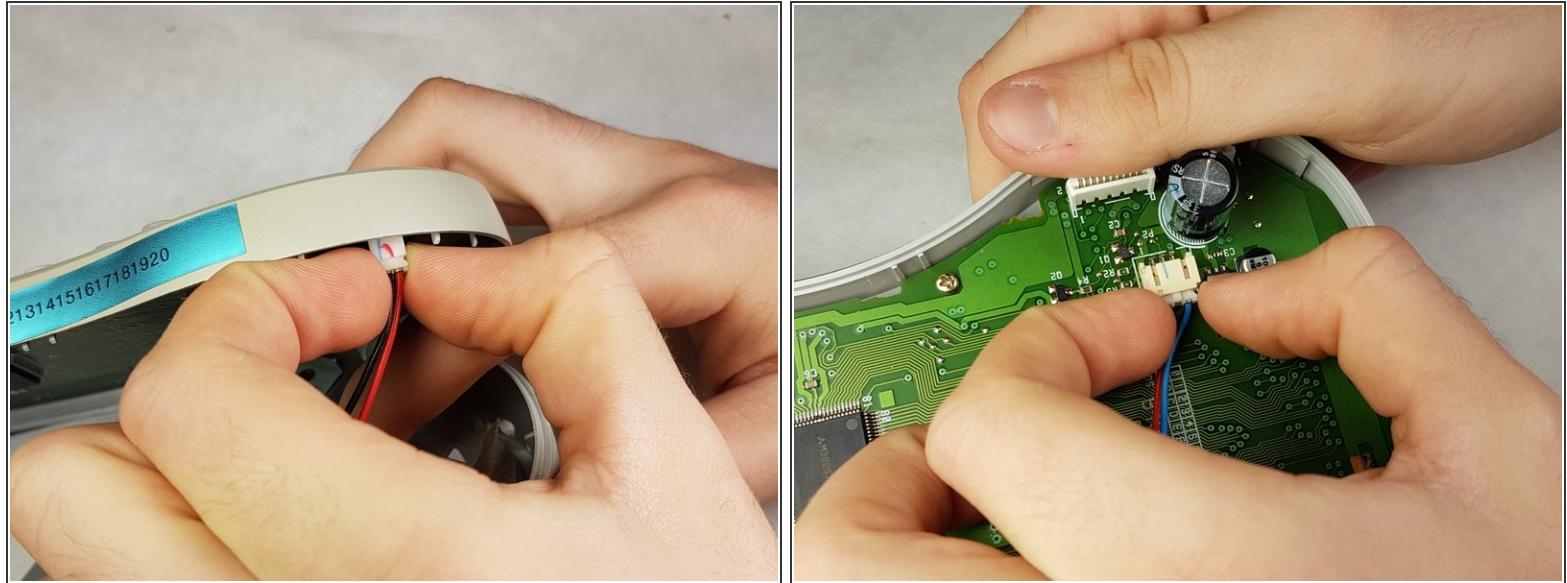

- Carefully pinch the top of the connector.
- Pull perpendicular to the device until the wire is disconnected.

*(i)* It may require more force than expected to disconnect the wires.


## Step 8

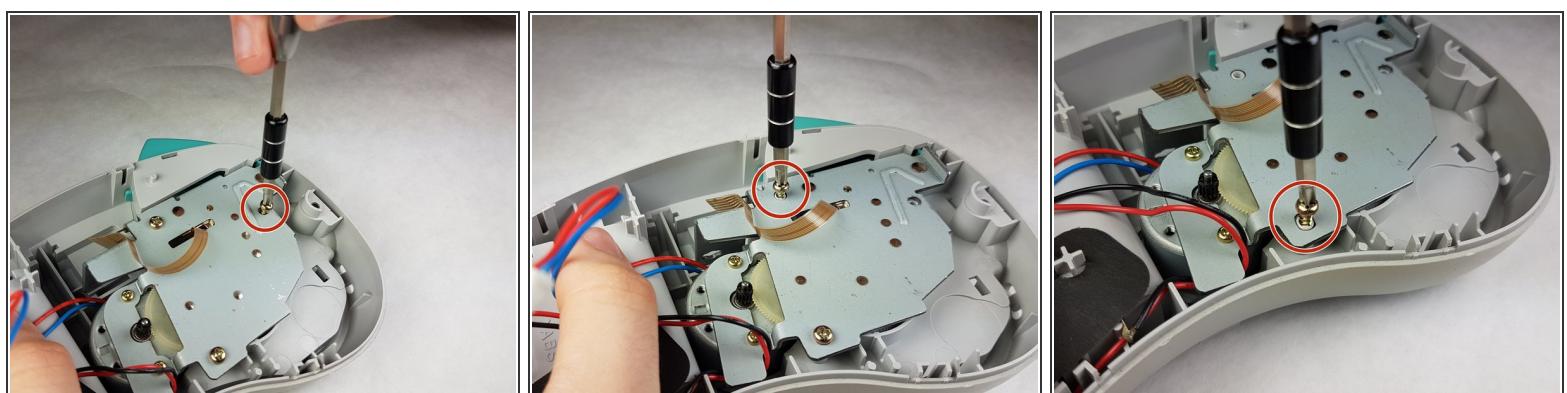

- Unscrew the three 9 mm Phillips #1 screws shown.


*(i)* Total: 3 x Screws

## Step 9 — Print Roller Lever

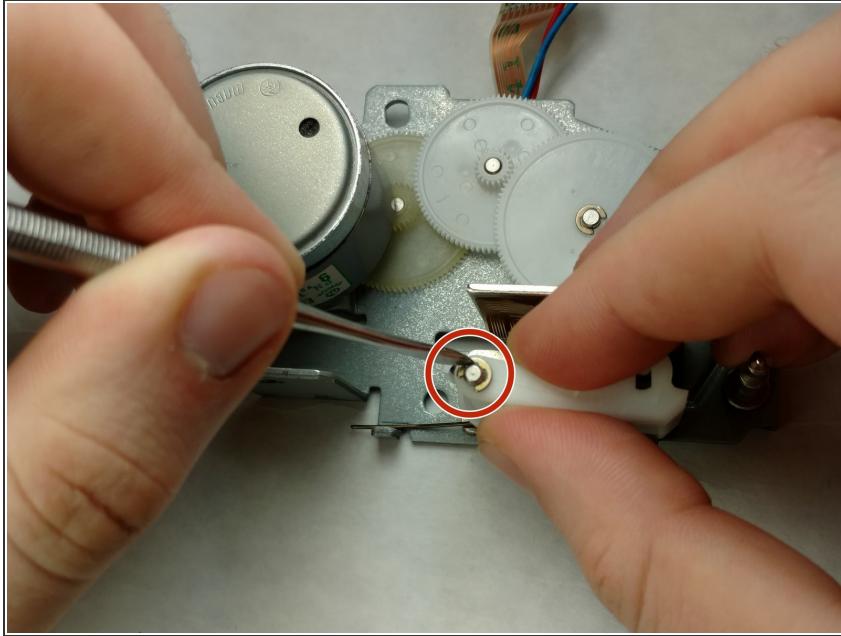

- Using the metal spudger, swivel the pin so that the print roller lever loosens.

## Step 10

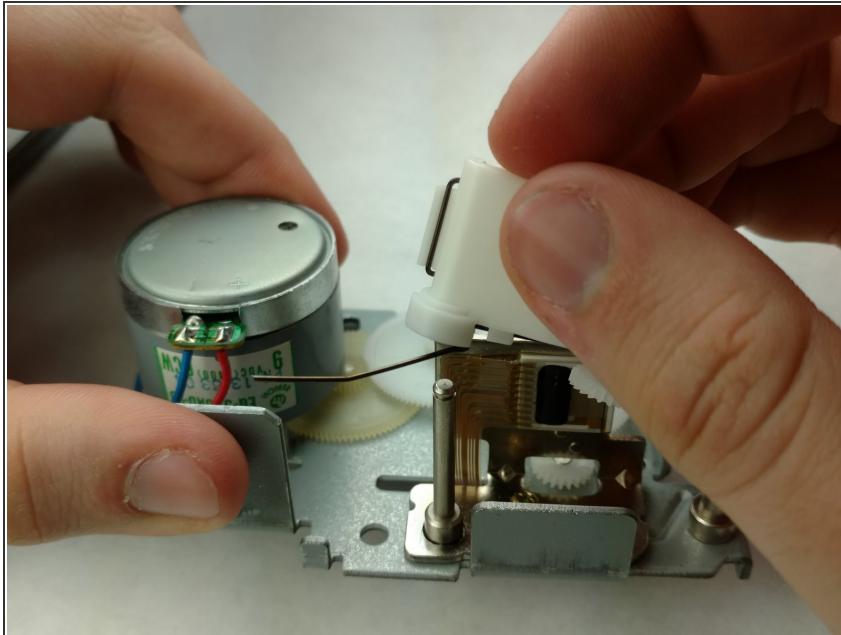

- Gently pull the print roller lever out.

To reassemble your device, follow these instructions in reverse order.