




Brother XR-40 Stitch Select Knob Replacement

This guide demonstrates the replacement of the stitch select knob.

Written By: Kevin Bickers

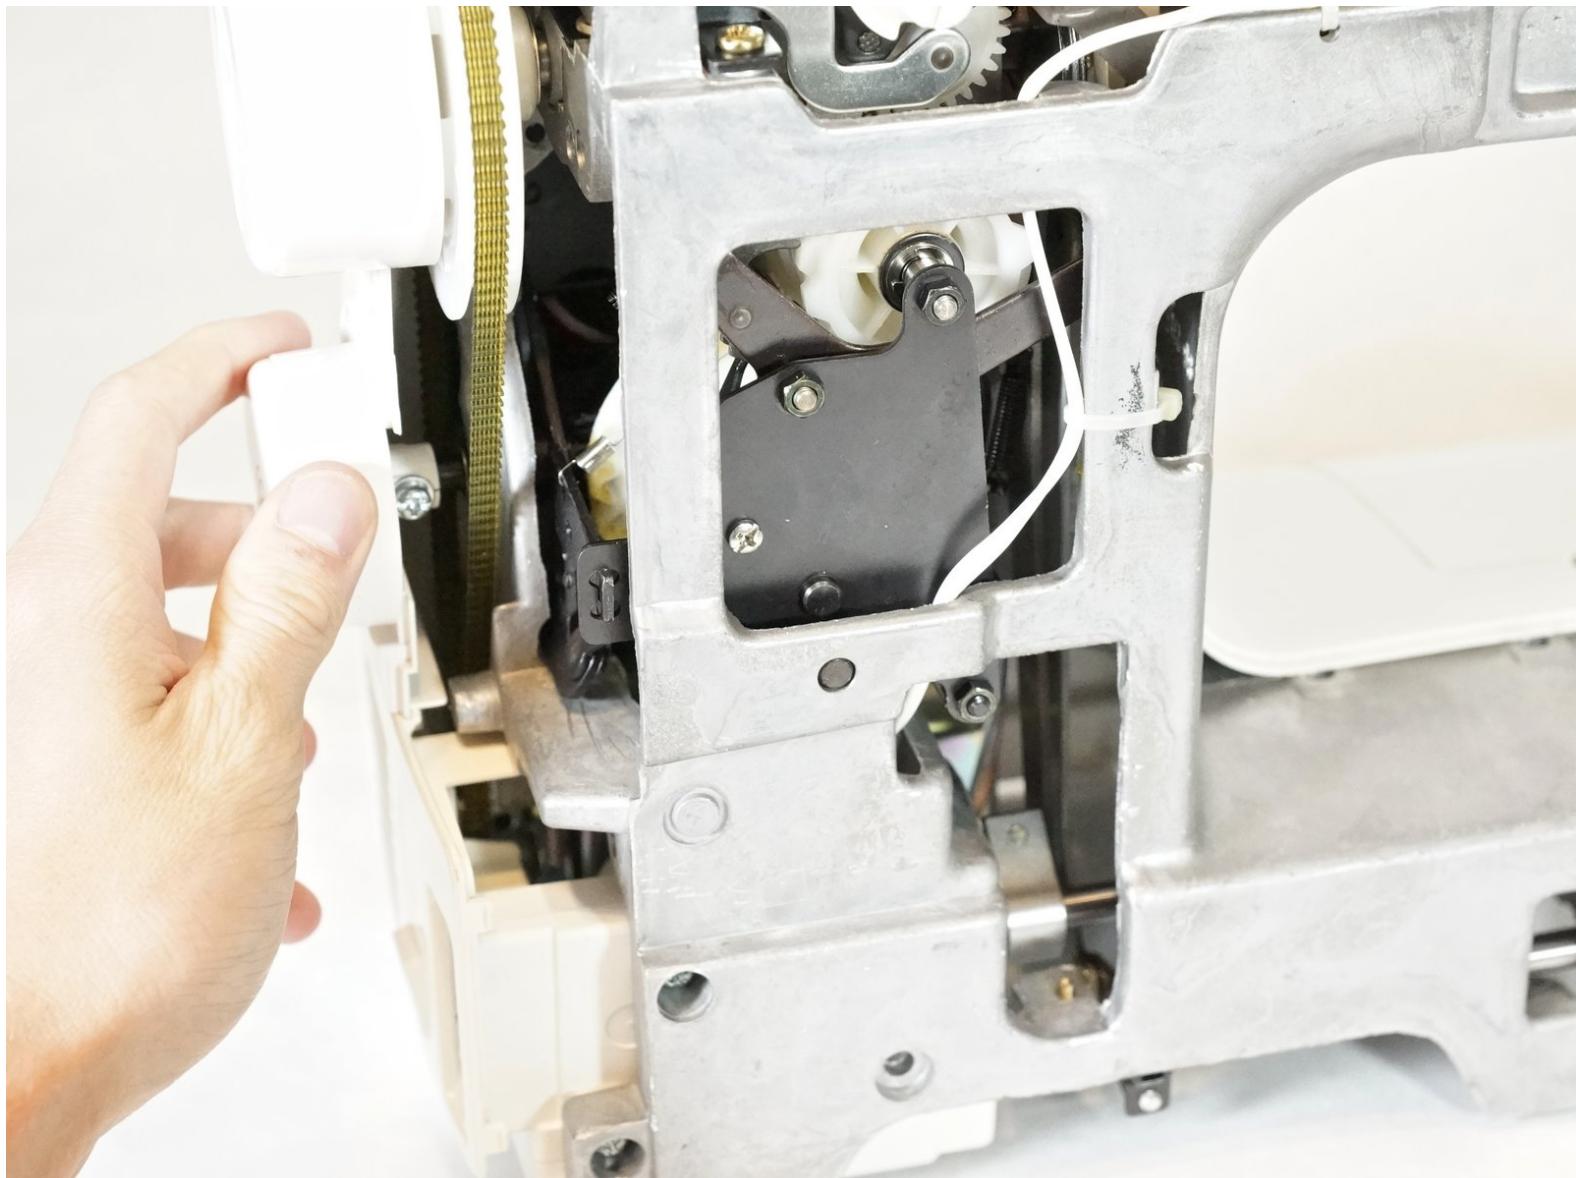

INTRODUCTION

In order to switch the stitching styles of your sewing machine, the stitch select knob must be properly functioning. This guide will show the steps for replacement.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)

Step 1 — Back Panel




- Place the machine on a solid surface.
- Remove the 14mm Phillips #2 screw holding on the face cover.

Step 2



- Remove the two 14mm Phillips #2 screws and two 22mm Phillips #2 screws that secure the rear casing.

Step 3

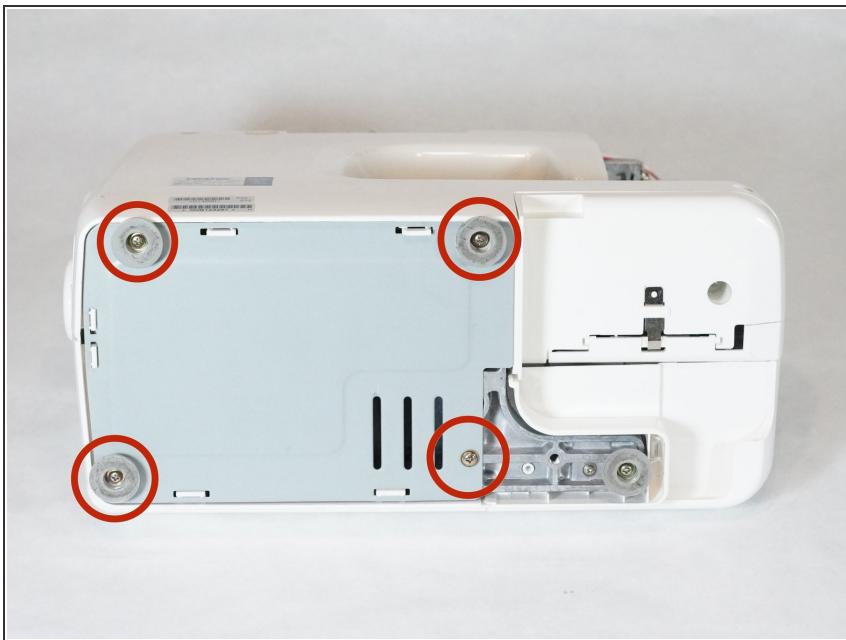

- Lay the machine on its side.
- Remove the four 10mm Phillips #2 screws that hold the bottom panel in place.


i The feet will come off with the screws.

Step 4



- Remove the bottom panel.


Step 5

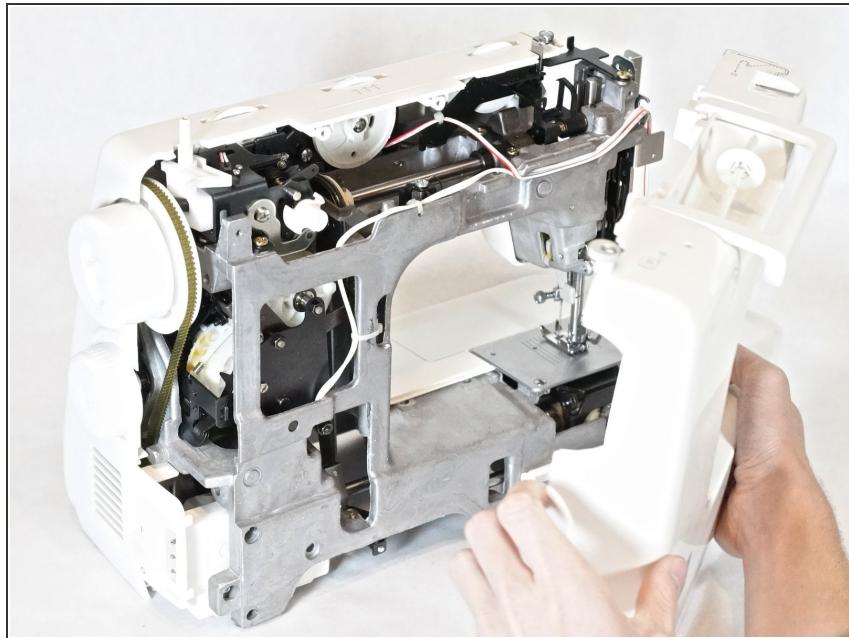

- Place the machine upright.
- Remove the rear casing.


i You may have to wiggle the panel and pull at the same time.

Step 6 — Stitch Select Knob

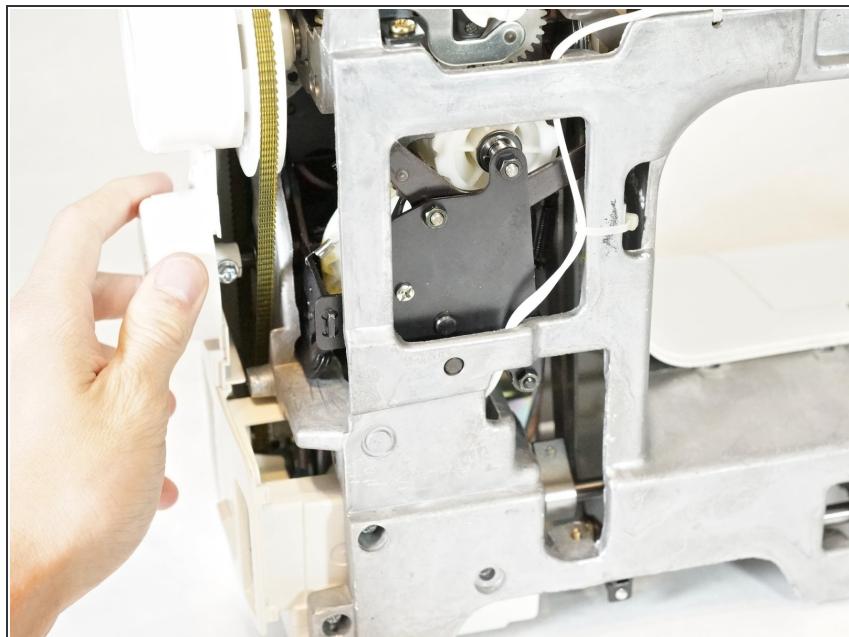


- Adjust the knob to gain access to the phillips head screw.

Step 7

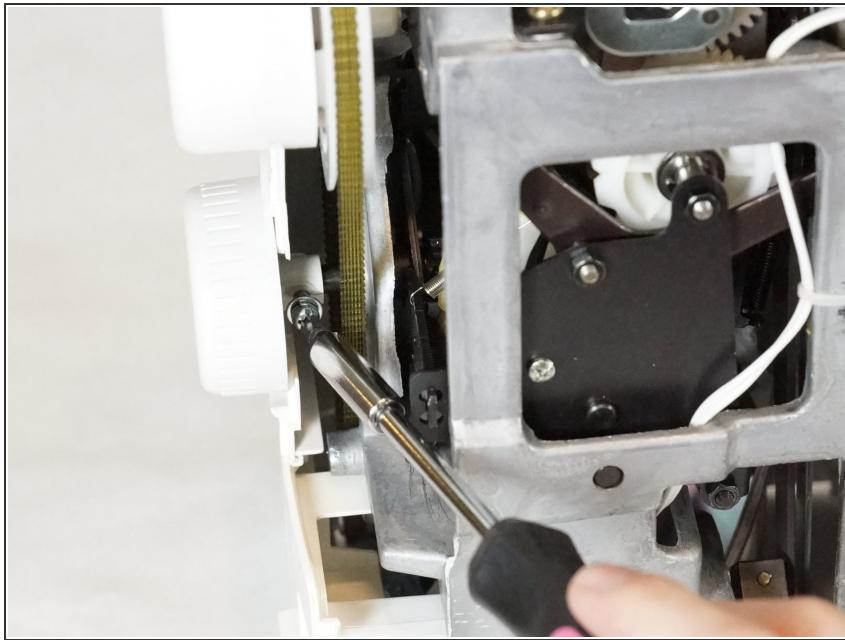

- Remove the 14mm Phillips #2 screw.

Step 8

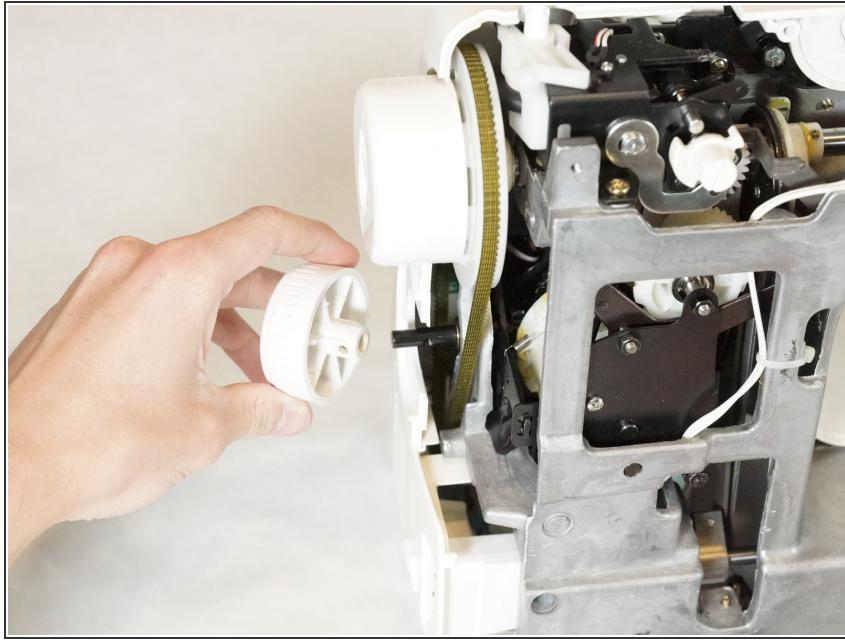

- Remove the knob.

To reassemble your device, follow these instructions in reverse order.