



CD/DVD Drive Replacement

Replacement guide for the CD/DVD/Blu Ray Drive of the HP dv7-4065x laptop. Part of the pavilion series.

Written By: Shahzeb



INTRODUCTION

Use the guide to help you replace the CD/DVD/Blu Ray Drive of the HP Pavilion dv7-4065 laptop.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)


Step 1 — CD/DVD Drive

- Remove the battery from the laptop.



Step 2

- Remove the five Philips #1 screws on the panel located underneath the laptop battery.
- Remove the panel.

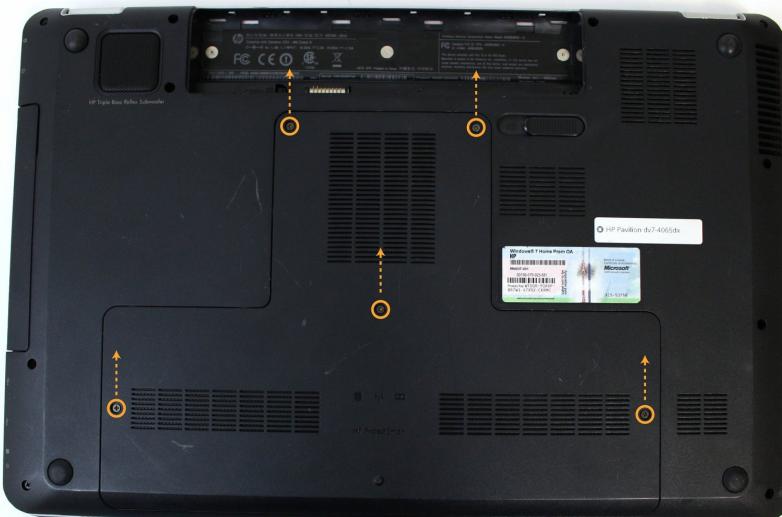

Step 3



- Remove the single screw underneath the black cable.

Step 4



- Gently slide the drive out of the laptop.

Step 5



- Remove the drive from laptop.

To reassemble your device, follow these instructions in reverse order.