



Cambridge SoundWorks OontZ Angle Plus Lower Casing Replacement

Remove the rubber casing from the bottom of your Cambridge SoundWorks OontZ Angle Plus.

Written By: Farshad Mohebban



INTRODUCTION

Use this guide to access the lower plate screws of the Cambridge SoundWorks OontZ Angle Plus.

Step 1 — Lower Casing



- Pull back the six screw covers on the bottom of the device.
- Starting from the screw covers, peel the casing away from the bottom plate.

To reassemble your device, follow these instructions in reverse order.