



Camera Reset

This is a step-by-step guide to resetting the Sony Cyber-shot camera.

Written By: Katie McCraw



 **TOOLS:**

- Paper Clip (1)

Step 1 — Camera Reset



- Pull the battery cover in a downward motion, following the arrow on the cover, until it is released.

Step 2



- Locate the reset button near the battery compartment and push the button with a pointed object such as a paper clip or pry tool.

Step 3



- Close the battery cover.