




Canon AE-1 Film Rewind Crank Replacement

How to replace a Canon AE-1 film rewind crank.

Written By: Ben Barber

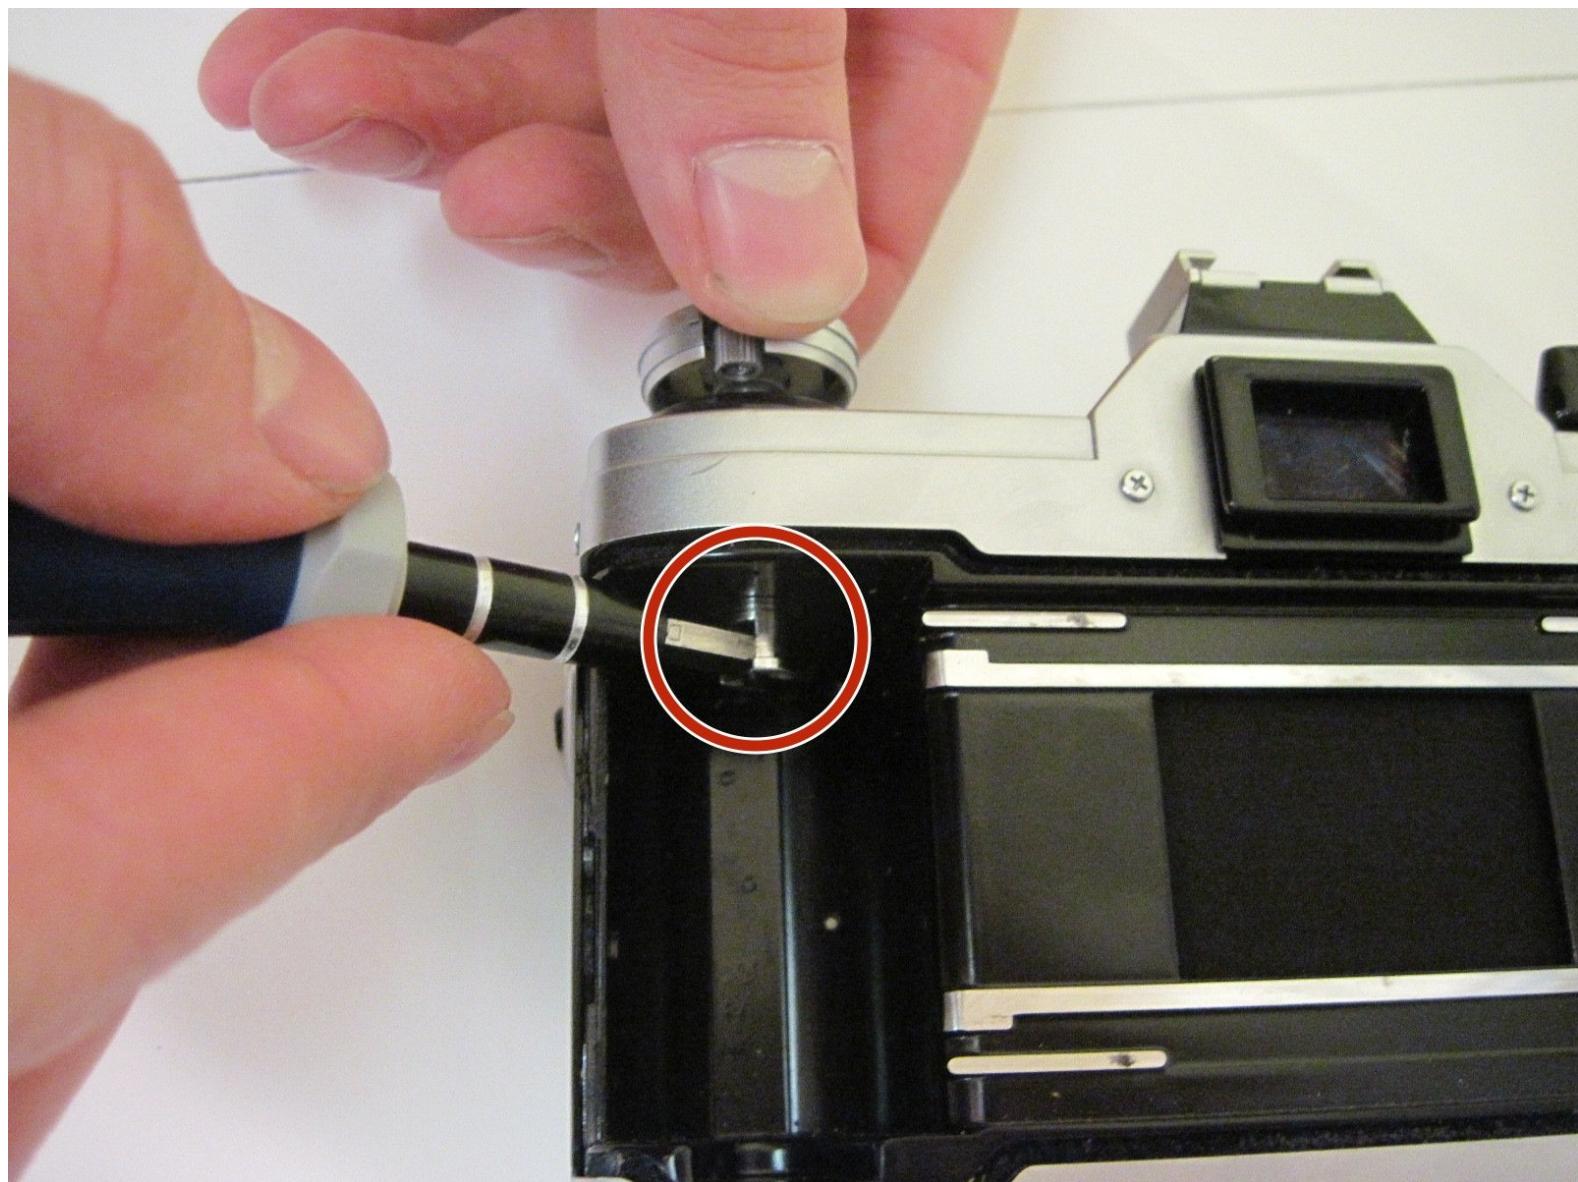


 **TOOLS:**

- Phillips #00 Screwdriver (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)

 **PARTS:**

- Replacement film rewind crank (1)


Step 1 — Film Rewind Crank

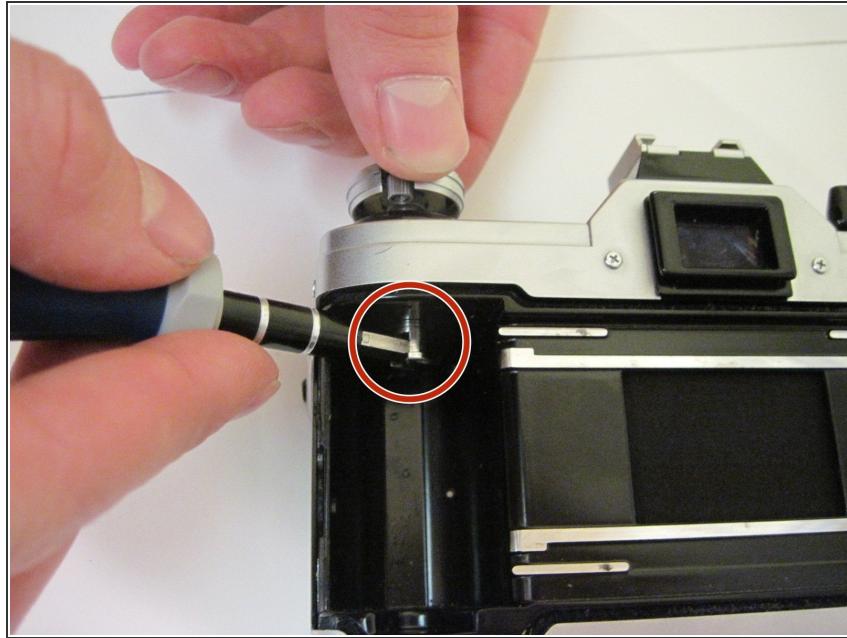

ⓘ Open film door


- Place screwdriver in slot as shown to prevent the shaft from moving

Step 2

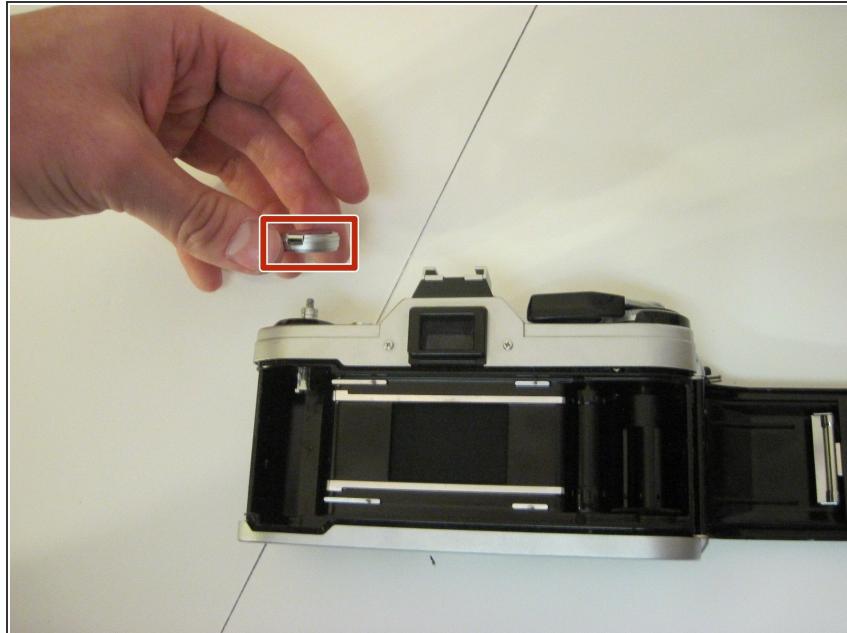


- Rotate crank counter clockwise to remove it

Step 3

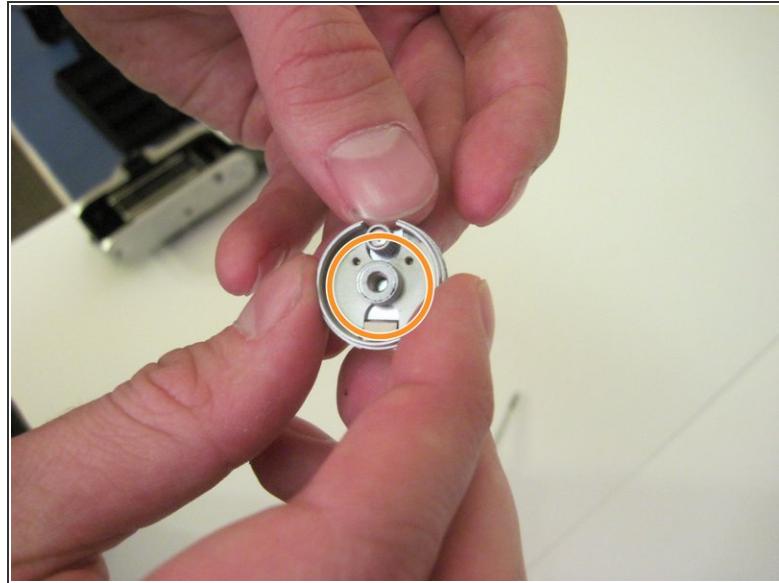

- Remove the two screws
- Remove silver pate held in place by the two screws

Step 4

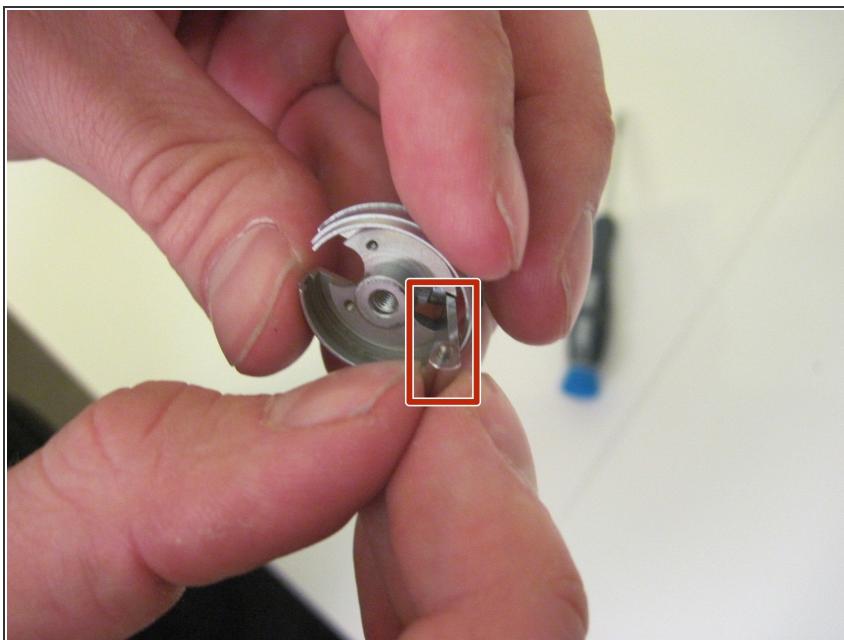

- Remove film rewind crank

To reassemble your device, follow these instructions in reverse order.