



Canon EOS 30 Battery Door Replacement

How to replace battery door.

Written By: Jackie



INTRODUCTION

This fix is safe and only requires a screwdriver.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Front Panel



- Remove the two 4.8 mm black screws above the lens on the front of the camera.

Step 2



- Remove the 4.3 mm black screw under the lens ring, and the 4.8 mm black screw under the camera.

Step 3



- Remove the 4.8 mm black screw on the left side of the camera.

Step 4



- Remove the front panel by lifting it away from the camera's body.

Step 5 — Bottom Panel



- Remove seven 4.25 mm black screws on the bottom panel.

Step 6



- Remove the bottom panel.

Step 7 — Side Panel With Remote Control Socket




- Remove two 6.5 mm black screws from the panel.

Step 8



- Remove the plastic remote control socket cap by pulling it straight out.

Step 9

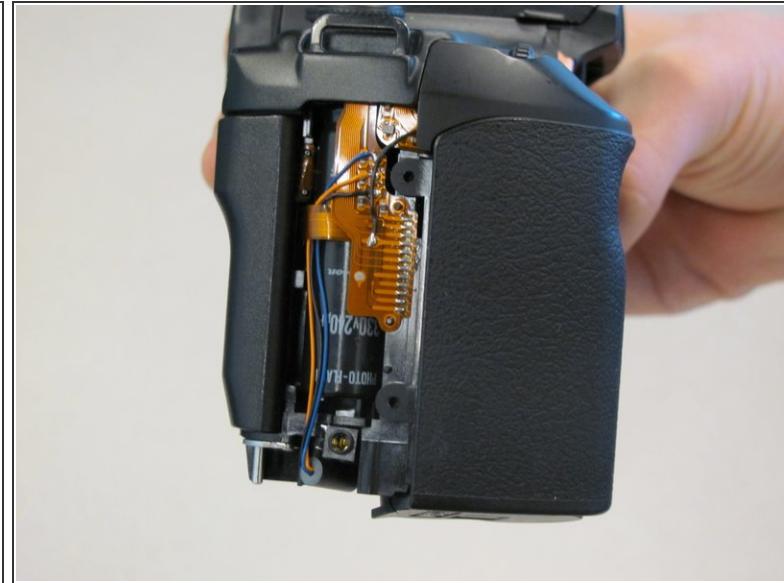

- Slide panel toward bottom of camera to remove.

Step 10 — Top Panel



- Slide the outer eyepiece upward to remove it.

Step 11



- Remove the two 4.75 mm black screws located on the top of the camera.

Step 12



- Remove the four 4.3 mm black screws near the bottom corners of the eyepiece at the back of the camera.


Step 13



- Slowly separate the top panel from the camera by pushing it upward.


⚠ Separating the top panel too far or quickly can damage the ribbon cable and connecting wires that are still attached to the top panel of the camera.

Step 14 — Grip

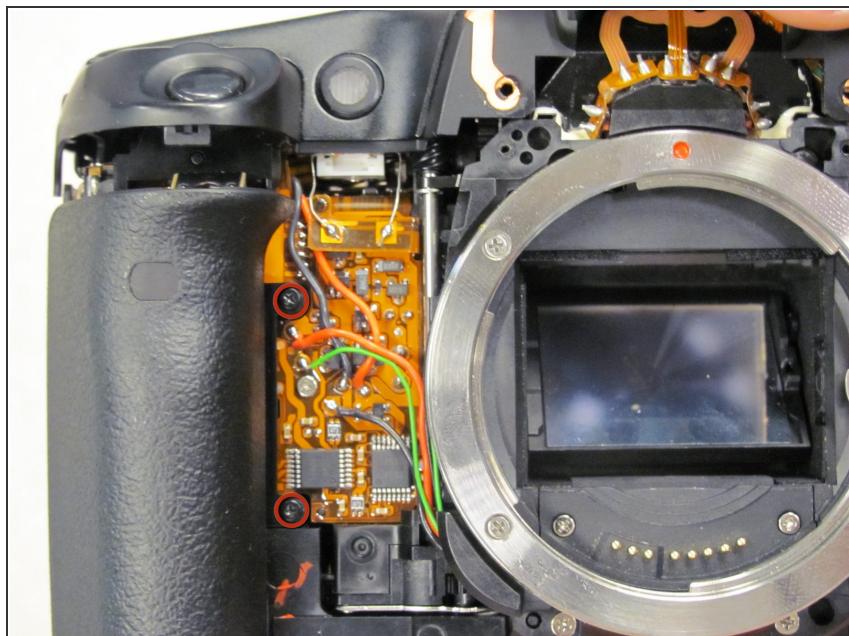

- Remove the two 5.5 mm screws from front of camera.

Step 15

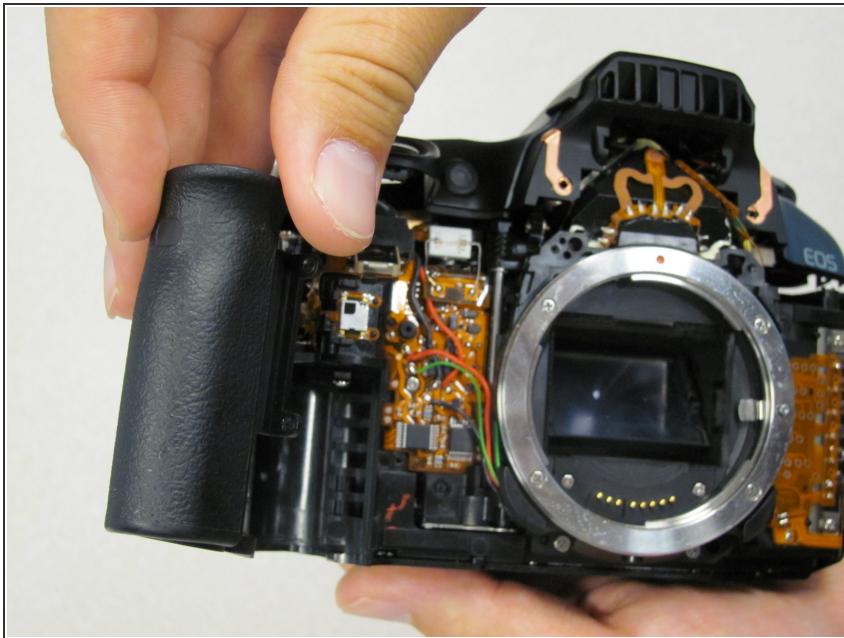

- Remove grip panel.

Step 16 — Battery Door



- Remove one black screw from battery door on underside of grip.

Step 17



- Remove battery door.

To reassemble your device, follow these instructions in reverse order.