




# Canon EOS 30 LCD Screen Replacement

How to remove and replace the LCD screen.

Written By: Sterling Vinson

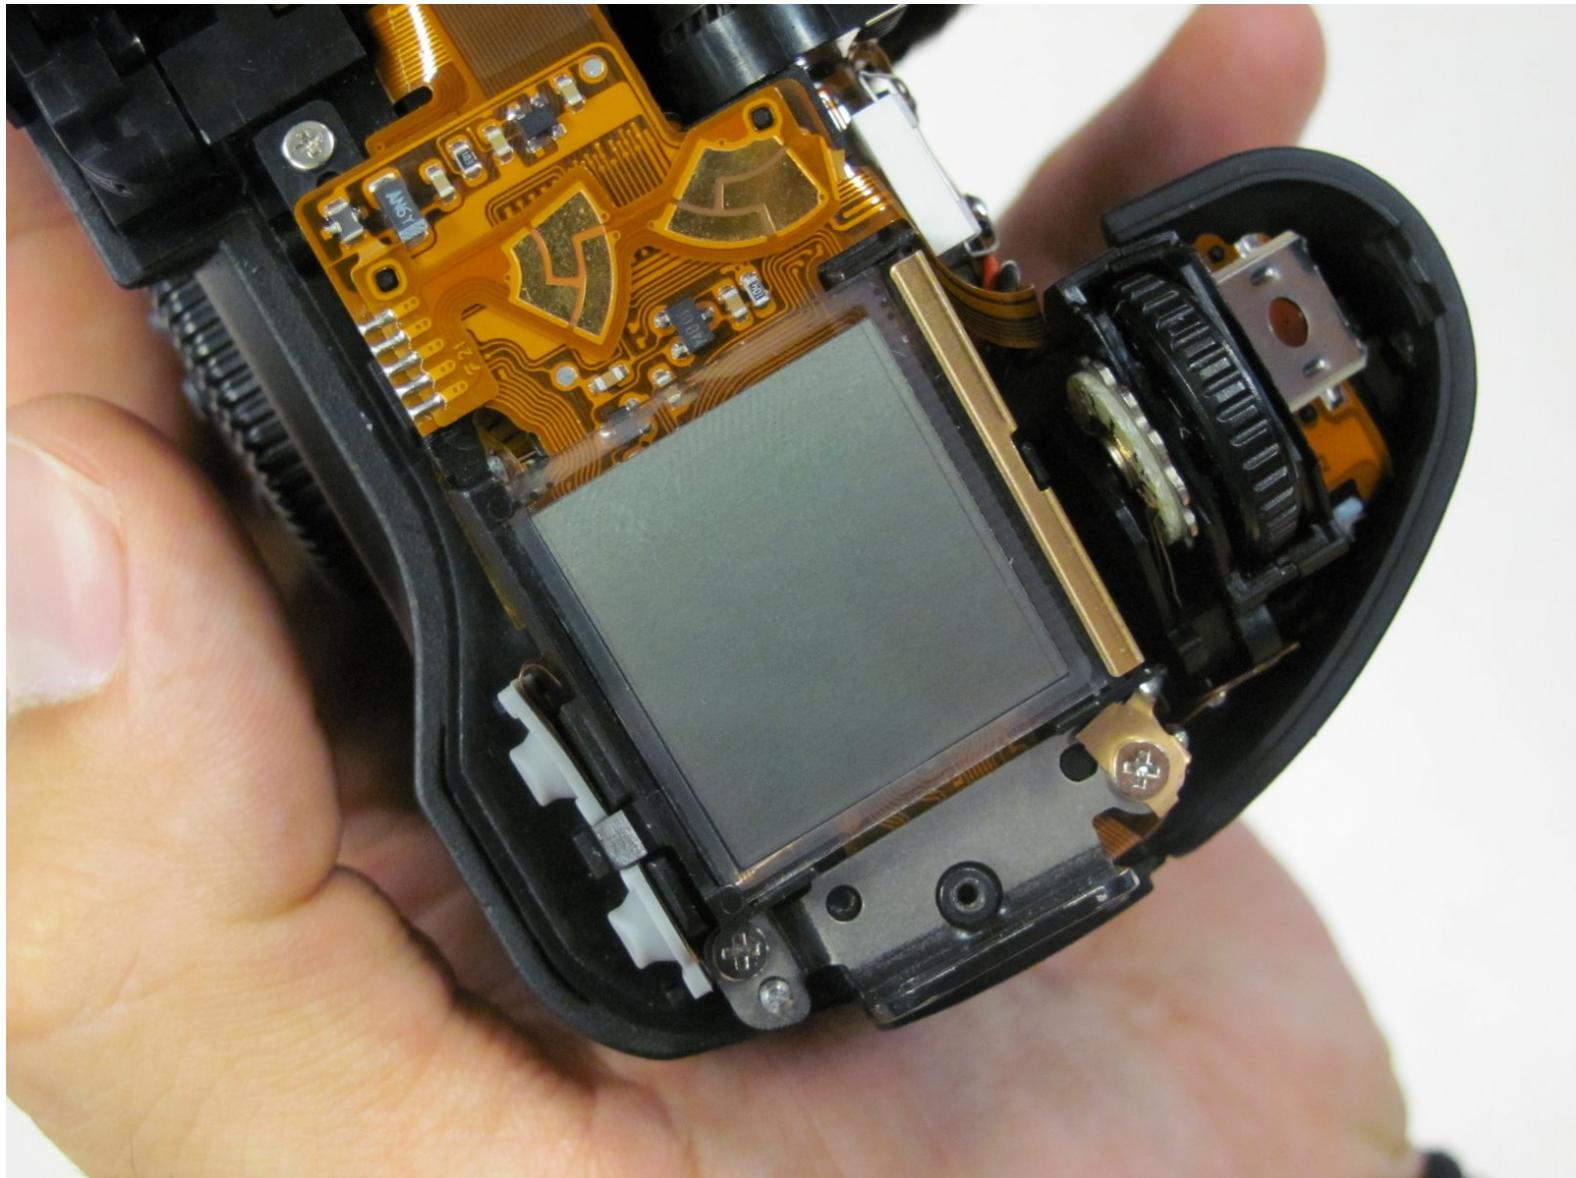

## INTRODUCTION

This guide will show you how to access, remove, and replace the LCD screen. The process is safe and uncomplicated.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Front Panel



- Remove the two 4.8 mm black screws above the lens on the front of the camera.

## Step 2



- Remove the 4.3 mm black screw under the lens ring, and the 4.8 mm black screw under the camera.

## Step 3



- Remove the 4.8 mm black screw on the left side of the camera.

## Step 4



- Remove the front panel by lifting it away from the camera's body.

## Step 5 — Top Panel



- Slide the outer eyepiece upward to remove it.

## Step 6



- Remove the two 4.75 mm black screws located on the top of the camera.

## Step 7



- Remove the four 4.3 mm black screws near the bottom corners of the eyepiece at the back of the camera.


## Step 8



- Slowly separate the top panel from the camera by pushing it upward.


**⚠** Separating the top panel too far or quickly can damage the ribbon cable and connecting wires that are still attached to the top panel of the camera.

## Step 9 — LCD Screen

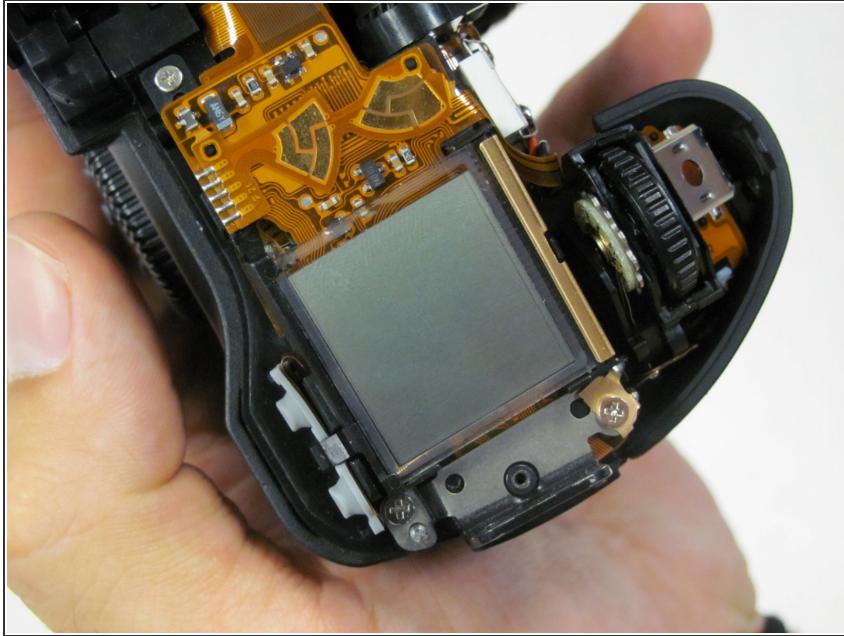

- To unclip gold connector push the edge up and away from the lcd screen. A plastic opening tool is recommended.
- The gold connector can fall into the camera, but it will remain attached and can be pulled back up.

## Step 10

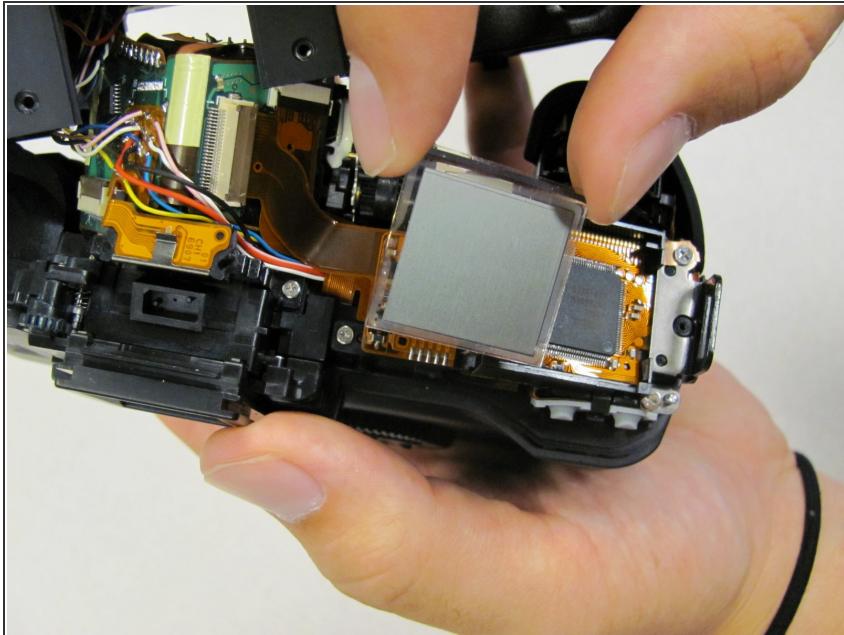

- Lift LCD screen out of mount.

To reassemble your device, follow these instructions in reverse order.