



Canon EOS 30 Lens Mount Rings

How to remove the lens mount rings.

Written By: Antonia



INTRODUCTION

The three stacked rings in the lens mount ring can be safely and easily removed.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Front Panel



- Remove the two 4.8 mm black screws above the lens on the front of the camera.

Step 2



- Remove the 4.3 mm black screw under the lens ring, and the 4.8 mm black screw under the camera.

Step 3



- Remove the 4.8 mm black screw on the left side of the camera.

Step 4




- Remove the front panel by lifting it away from the camera's body.

Step 5 — Lens Mount Rings



- Remove four 7.1 mm silver screws from lens mount ring.

Step 6

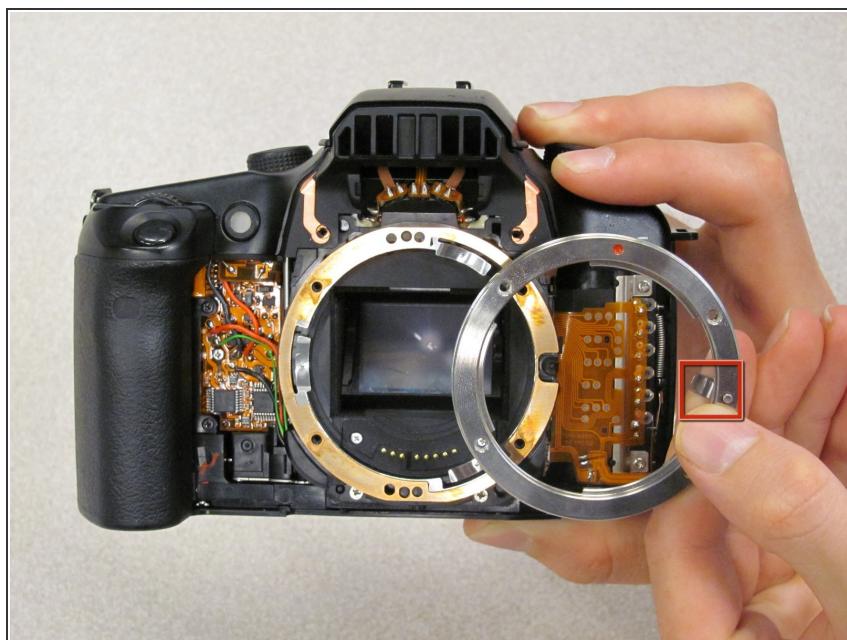

- Remove outer mount ring.
- The silver button may detach.

Step 7



- Remove thin gold ring.
- Correct orientation is pictured.

Step 8



- Remove thin silver ring.
- Correct orientation is pictured.

To reassemble your device, follow these instructions in reverse order.