




# Canon EOS 30 Strap Loops Replacement

How to remove strap loops.

Written By: Alexander Gonzalez

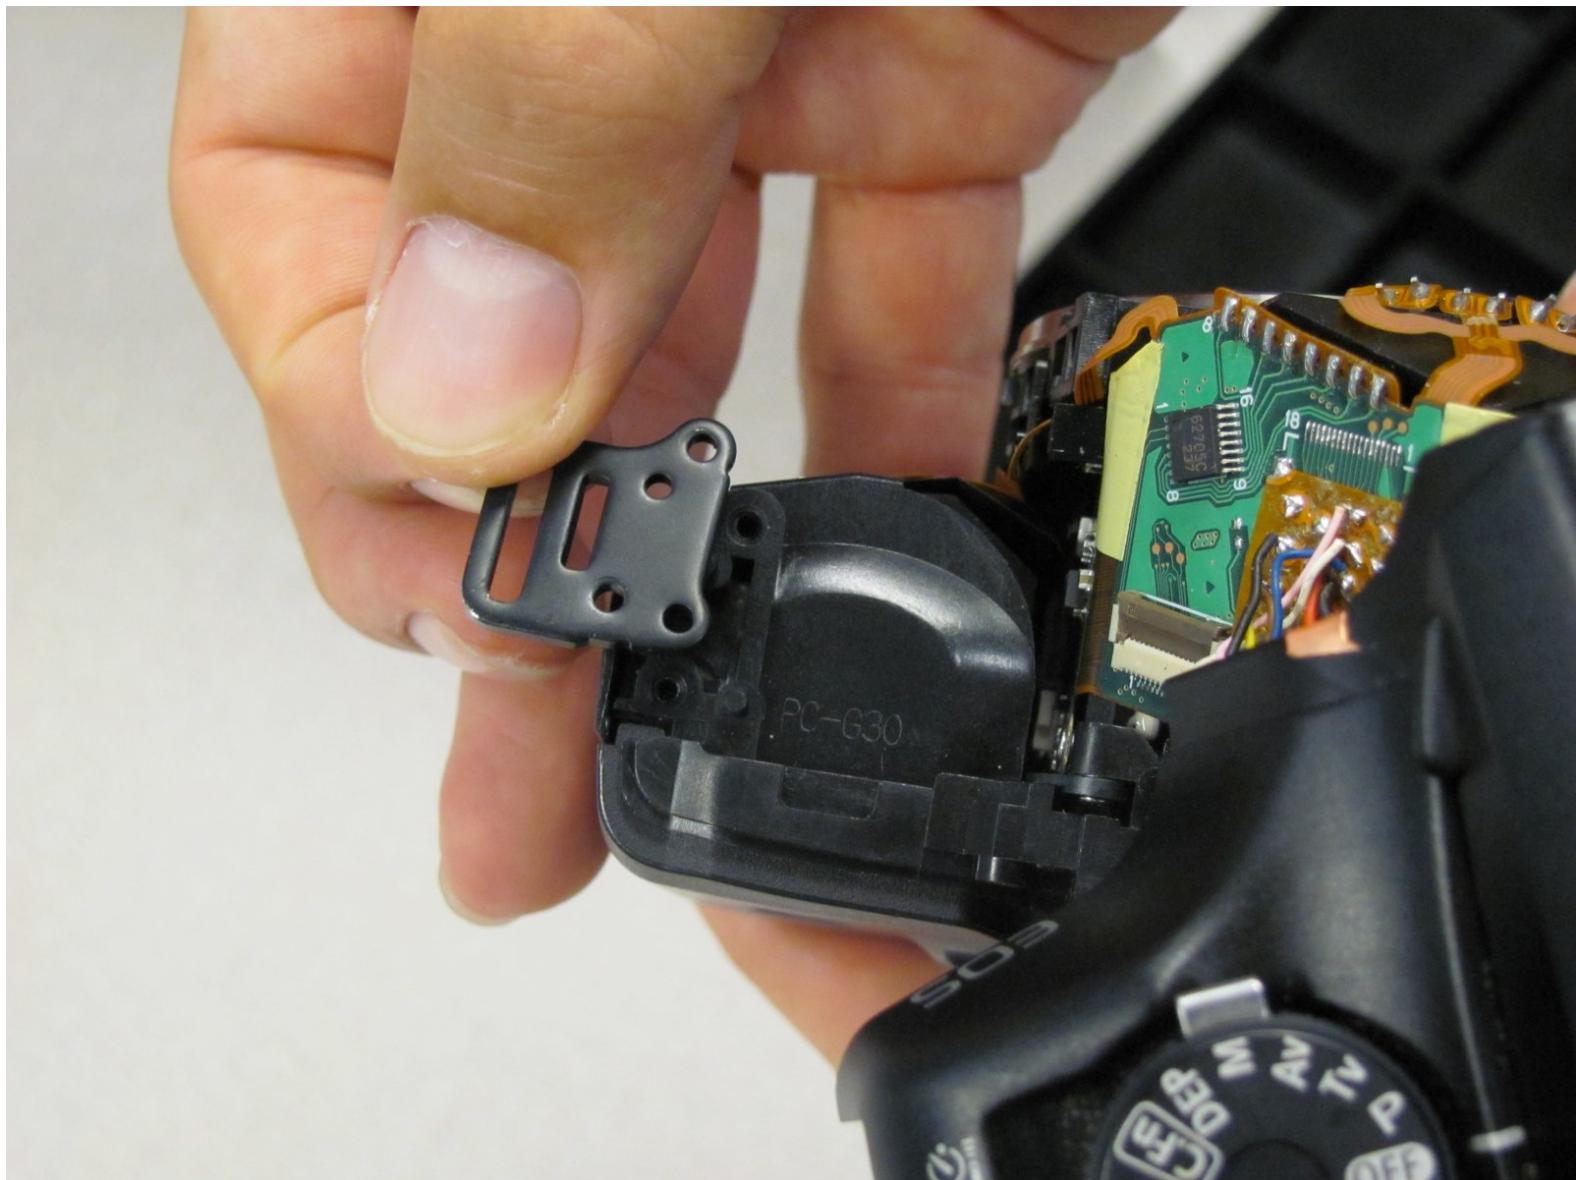

## INTRODUCTION

The strap loops can be safely accessed and removed.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Top Panel



- Slide the outer eyepiece upward to remove it.

## Step 2



- Remove the two 4.75 mm black screws located on the top of the camera.

## Step 3



- Remove the four 4.3 mm black screws near the bottom corners of the eyepiece at the back of the camera.



## Step 4



- Slowly separate the top panel from the camera by pushing it upward.

**⚠** Separating the top panel too far or quickly can damage the ribbon cable and connecting wires that are still attached to the top panel of the camera.

## Step 5 — Strap Loops

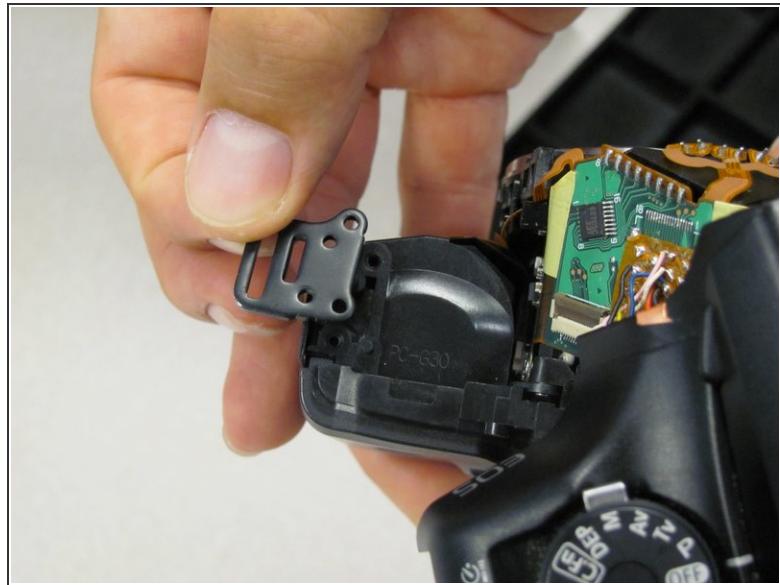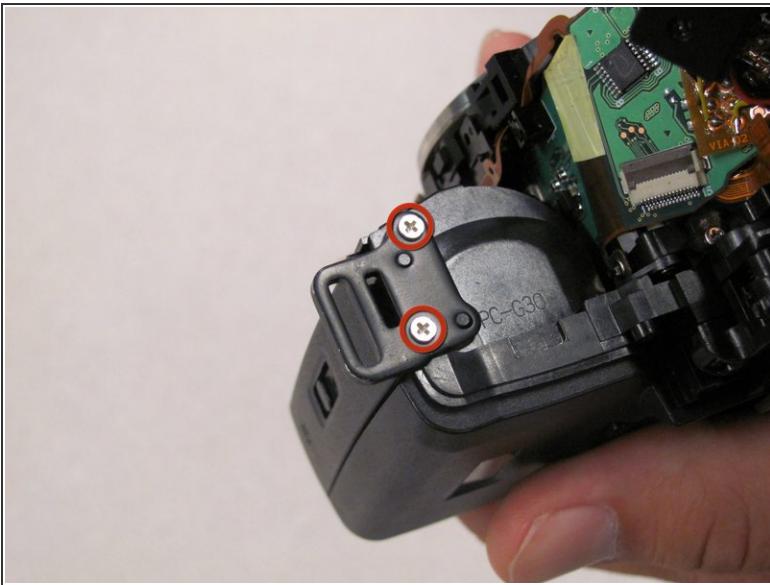

- Remove two 5.9 mm silver screws on top of camera to detach left strap loop (opposite grip).

## Step 6



- Remove one 8.5 mm silver screw (front) and one 5.45 mm silver screw (back) to remove strap loop near LCD screen.

To reassemble your device, follow these instructions in reverse order.