




Canon EOS 300 Bottom Panel Replacement

Use this guide to remove the bottom panel of the Canon EOS 300.

Written By: Tammy Kong

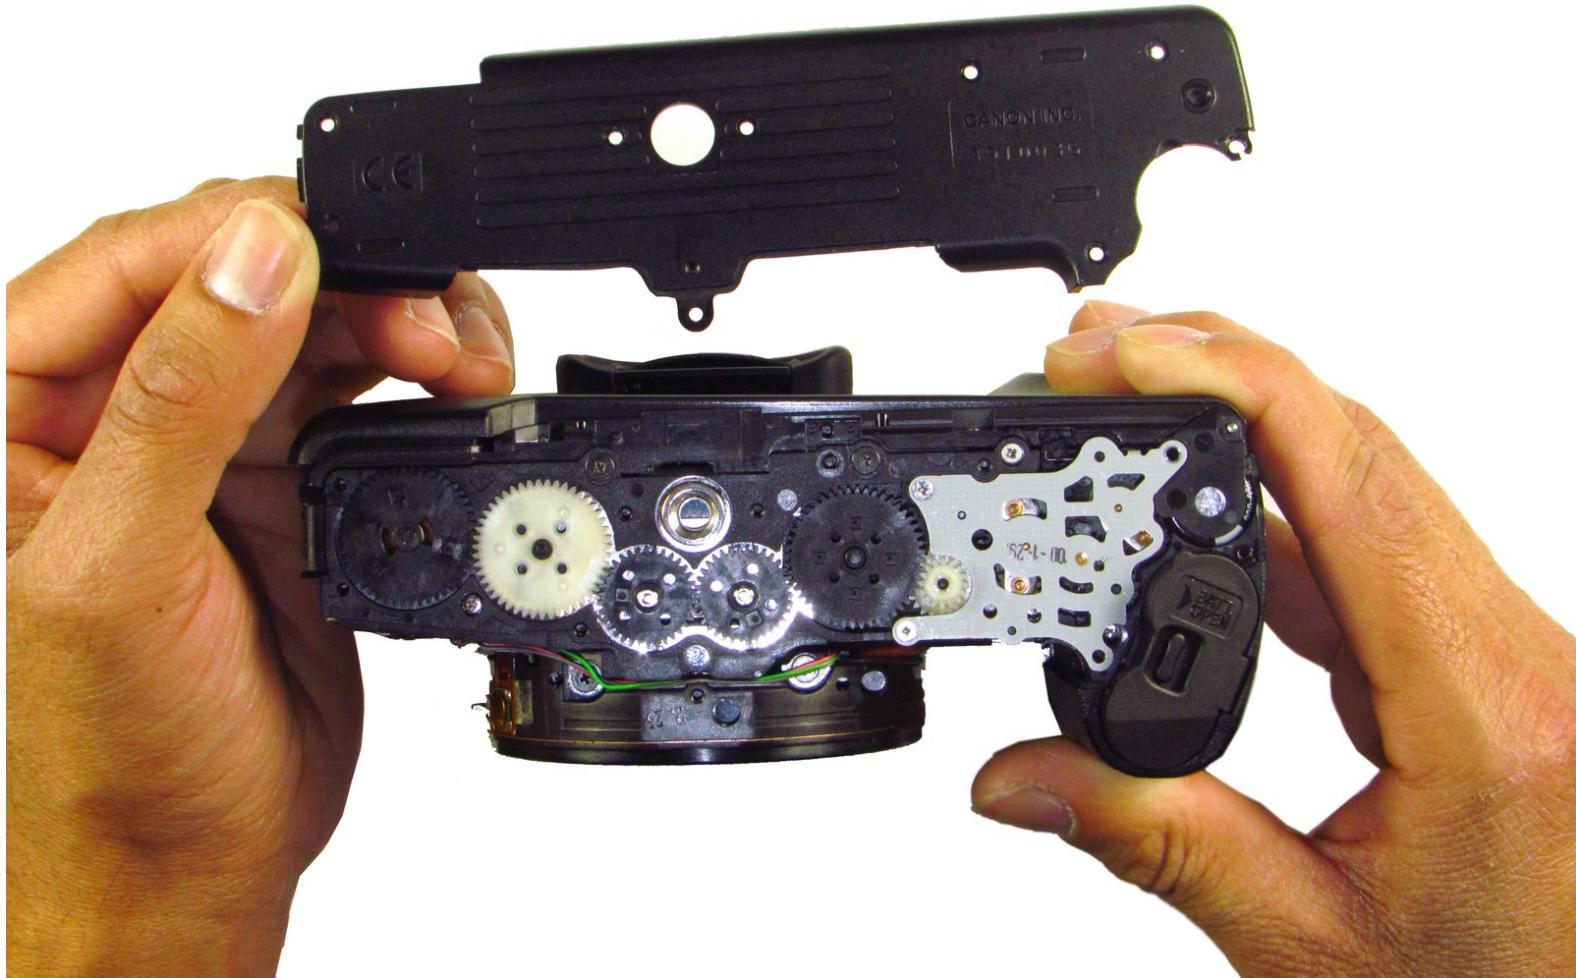

INTRODUCTION

The bottom panel can be easily removed, and allows access for replacement on other parts of the camera.

TOOLS:

- **Phillips #00 Screwdriver (1)**

Step 1 — Batteries



- Open up the battery door.

Step 2



- Remove the batteries from the camera by sliding them out into your palm.

Step 3 — Side Panel with Lever




- Release the side latch to open the back panel.

Step 4



- Remove the two black 4.5mm screws above and below the latch.

Step 5

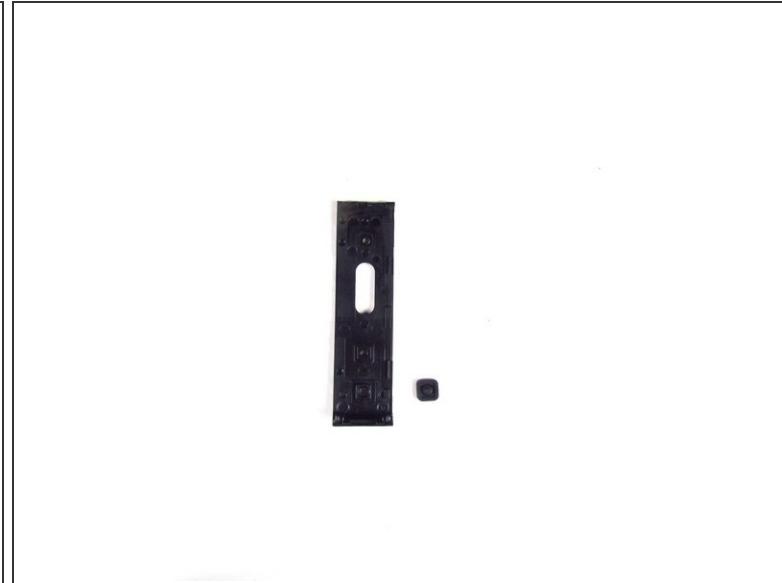

- Using your finger, carefully pry open the side panel from the top of camera.
- Pull panel downwards to remove.

(i) Make sure to keep track of the small black piece of rubber under the latch.

Step 6 — Front Panel



- Remove the two silver 6mm Phillips #1 screws.

This document was generated on 2019-09-20 12:35:31 AM (MST).

Step 7




- Flip camera over to the bottom.
- Remove the one 5mm Phillips #1 silver screw.

Step 8



- Remove the front panel by pulling away from the side with the lever.

Step 9 — Bottom Panel

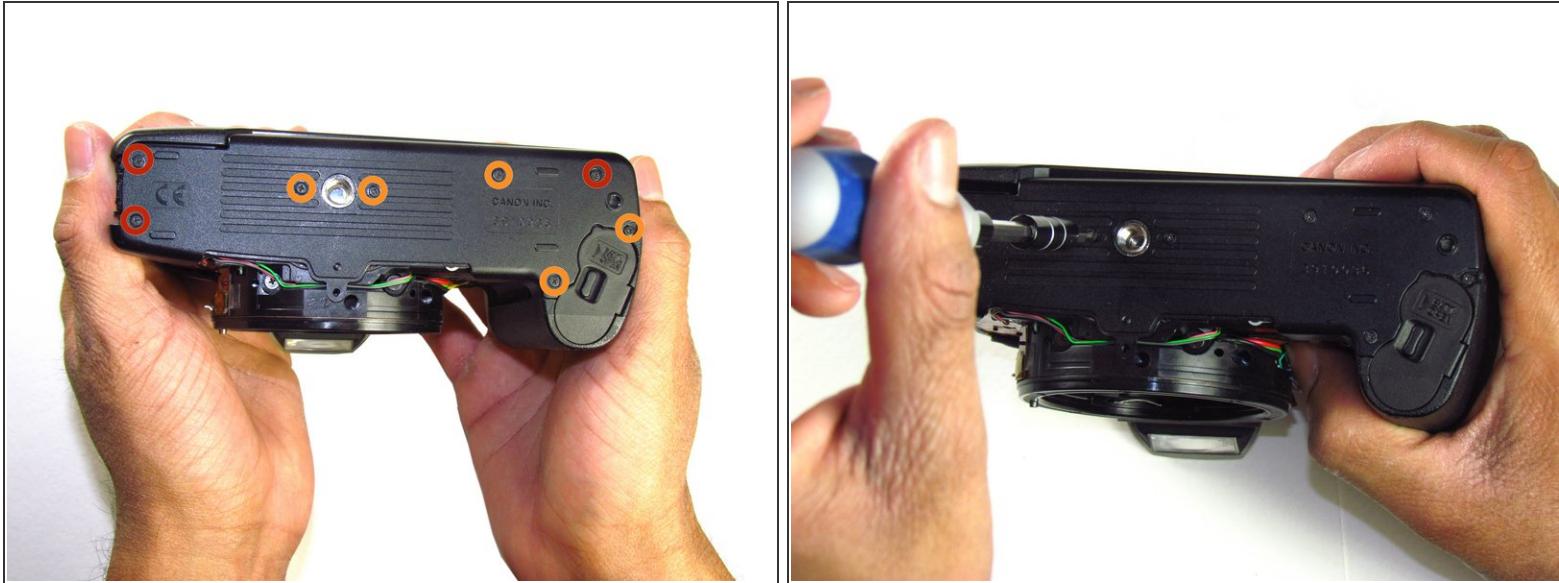

- Remove three black 7.3mm Phillips #1 screws located on the corners of the camera.
- Remove five black 4.8mm Phillips #1 screws.

Step 10



- Simply remove the bottom panel by prying it off with your finger.

⚠ When removing the panel, be sure the bottom of the camera is facing upright. There are loose gears that may fall out.

- Be wary of a loose piece of foam attached to the bottom panel.

To reassemble your device, follow these instructions in reverse order.