



Canon EOS 300 Side Panel with Lever Replacement

Removing the side panel with the lever that locks the film door.

Written By: Jordan Tang



INTRODUCTION

This guide removes the side panel of the camera, allowing for repairs on the side lever.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Batteries



- Open up the battery door.

Step 2



- Remove the batteries from the camera by sliding them out into your palm.

Step 3 — Side Panel with Lever




- Release the side latch to open the back panel.

Step 4



- Remove the two black 4.5mm screws above and below the latch.

Step 5

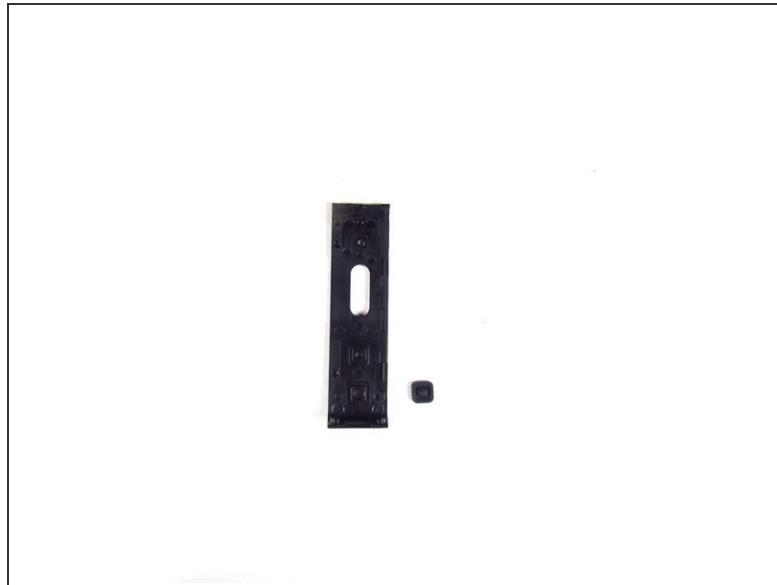

- Using your finger, carefully pry open the side panel from the top of camera.
- Pull panel downwards to remove.

(i) Make sure to keep track of the small black piece of rubber under the latch.

To reassemble your device, follow these instructions in reverse order.