



Canon EOS 5D Mark III Internal Battery Replacement

Written By: Haris Pylarinos



 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Internal Battery



- Lift both I/O rubber flaps.

Step 2



- Remove bottom Phillips screw.

Step 3



- Pull internal battery door.

Step 4



- Replace battery and reassemble.

To reassemble your device, follow these instructions in reverse order.