



Canon EOS 60D Top Digital Display Clear Plastic Cover Replacement

Replace a cracked or broken top digital display clear plastic cover that protects the top LCD screen.

Written By: Nazmi Bargouthi



This document was generated on 2019-09-27 11:45:49 PM (MST).

INTRODUCTION

The top digital display clear plastic cover provides protection to the sensitive LCD display screen beneath it. The replacement of the top plastic cover should be handled with caution in order not to damage the LCD screen.

TOOLS:

- Tweezers (1)

Step 1 — Top Digital Display Clear Plastic Cover



- Hold the camera in a top view position allowing for a clear display of the broken top cover.
- Observe and identify all the pieces of the shattered cover.

Step 2



- Slowly slide the tip of the tweezers under a piece of the broken cover and lift up to remove the broken piece.
- Use the tweezers to remove another piece of the broken cover.
- Repeat until all the pieces of the shattered cover are removed.

i If you begin by removing a piece that is located at an edge of the broken cover, it would facilitate the removal of the rest of the pieces.

! Use the tweezers carefully while removing the plastic pieces in order to avoid damaging the LCD screen beneath.

To reassemble your device, follow these instructions in reverse order.