



# Canon EOS 70D Battery Replacement

This guide will show you how to remove and replace the battery in your Canon EOS 70D camera.

Written By: Paul



## INTRODUCTION

The LP-E6 lithium battery is crucial to the operation of the Canon EOS 70D camera. Without the battery, the camera will not turn on. This guide will ensure you're able to properly replace the battery.

## Step 1 — Battery



- Hold the camera with the lens pointing down. Press the highlighted button with your finger to release the cover.
- Pull cover over to expose the battery.

## Step 2



- Press the white button with your finger to release the battery.
- Once released, the battery will eject out about two inches

## Step 3

- Pull battery out of the camera.



To reassemble your device, follow these instructions in reverse order.