



Canon EOS M6 Touch LCD Display Replacement

This guide is to replace a broken LCD screen from a Canon EOS M6 mirror less camera

Written By: Jonathan Mifsud



 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Lift Touch LCD screen



- Lift LCD screen upwards

Step 2 — Removing Screws



- Remove the X3 screws from the back with PH00
- Remove X2 screws from the top filped of the screen as shown in image 2

Step 3 — Camera will open



- Camera will open as shown

To reassemble your device, follow these instructions in reverse order.