


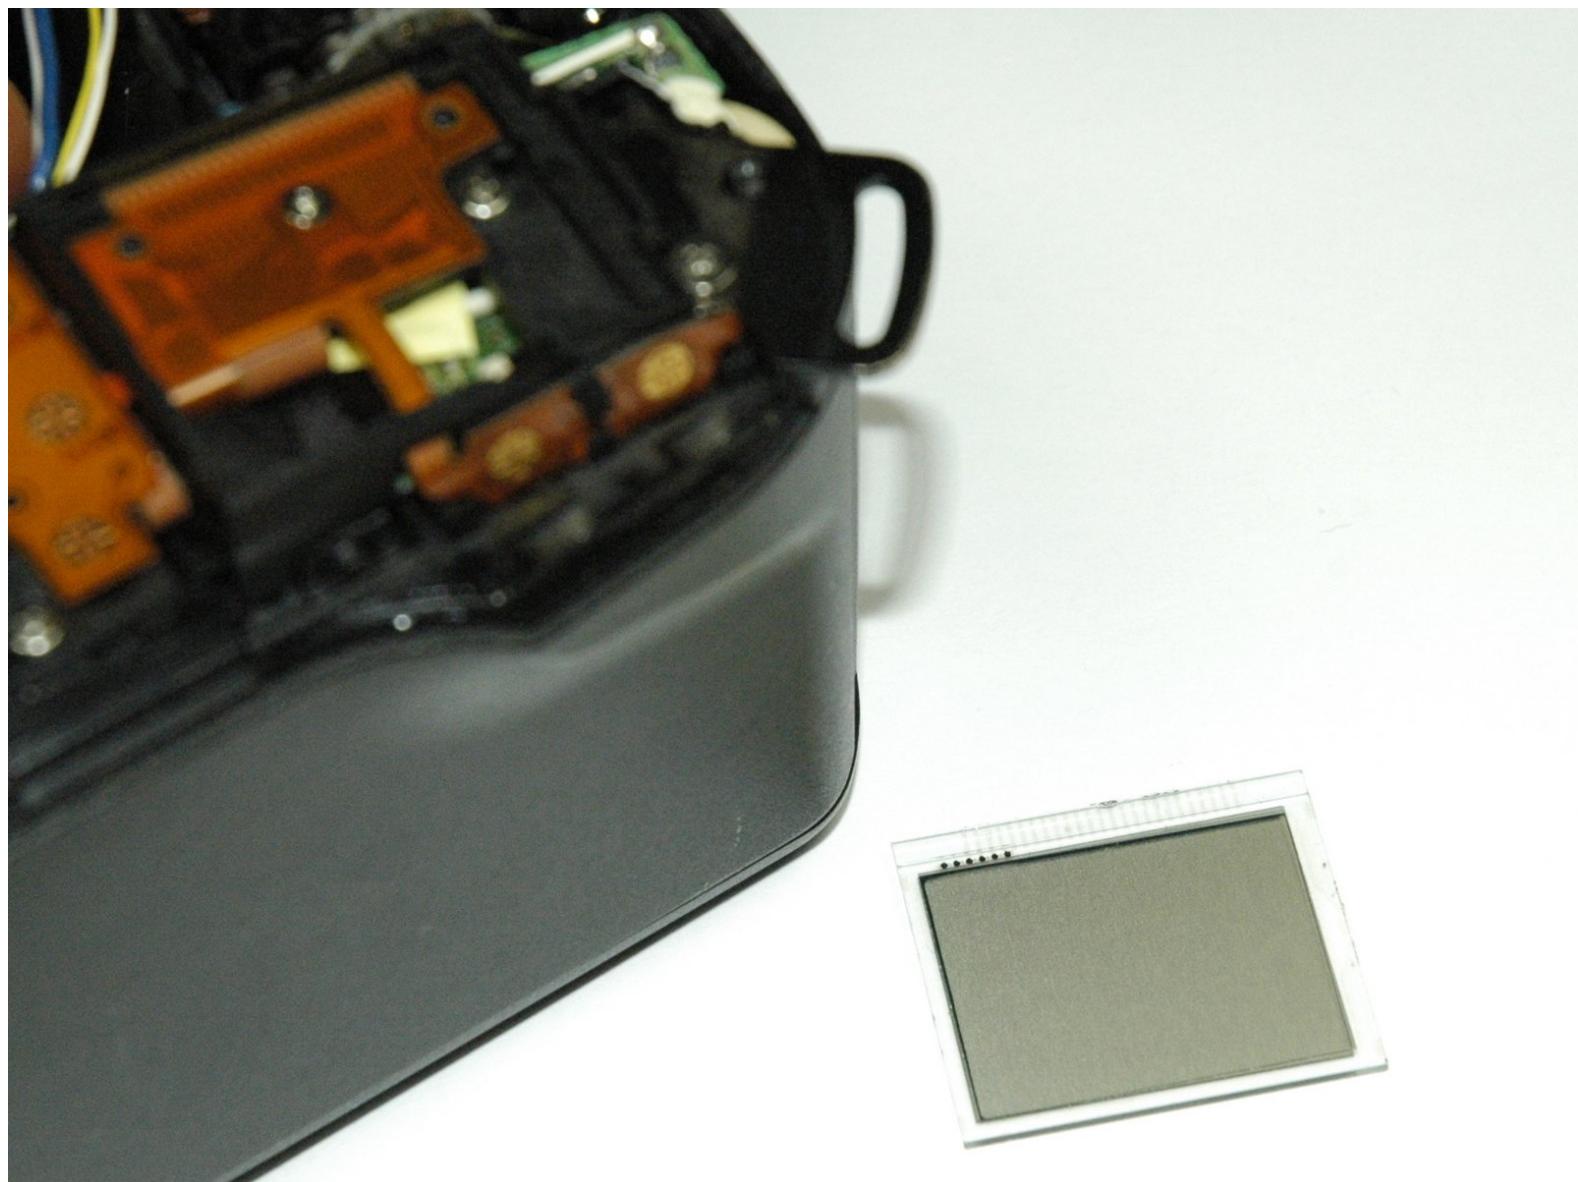

Canon EOS Rebel G LCD Screen Replacement

Replace the LCD screen in your Canon EOS Rebel G.

Written By: Zach



INTRODUCTION

This guide shows you how to install a new LCD screen.

TOOLS:

- [Soldering Workstation](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Front Panel



- Using a #00 Phillips screw driver, remove three 4.4 mm Phillips screws as indicated by the red circles.

Step 2



- Using your finger, peel back the textured grip so the components are separated.

Step 3



- Using the flat end of a spudger, loosen the connection between the front panel and the device.
- Remove the front panel using your hands.

Step 4 — Top Panel




- Turn Camera over.
- Using a #00 Phillips screw driver, unscrew the two 4.9 mm Phillips screws located on either side of the viewfinder.

Step 5



- Using a #00 Phillips screw driver, unscrew the one 5.7 mm Phillips screw located next to the LCD screen.

Step 6

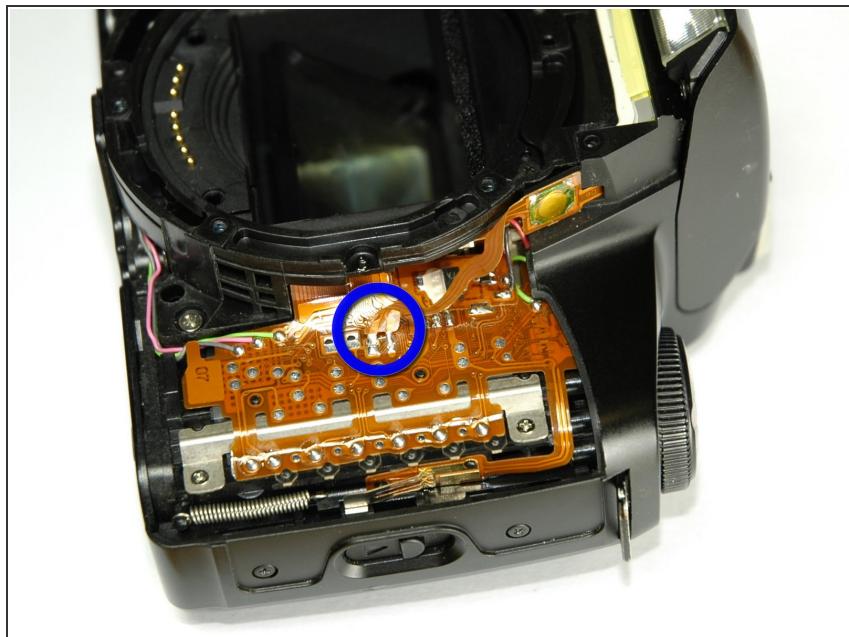


- Lay the camera on its back.
- Unsolder the flash connection from the motherboard as noted by the blue circle.

Step 7



- Remove the top panel by lifting it from the back, pushing it forward over the camera and letting it rotate down in front of the camera.

Step 8 — LCD Screen

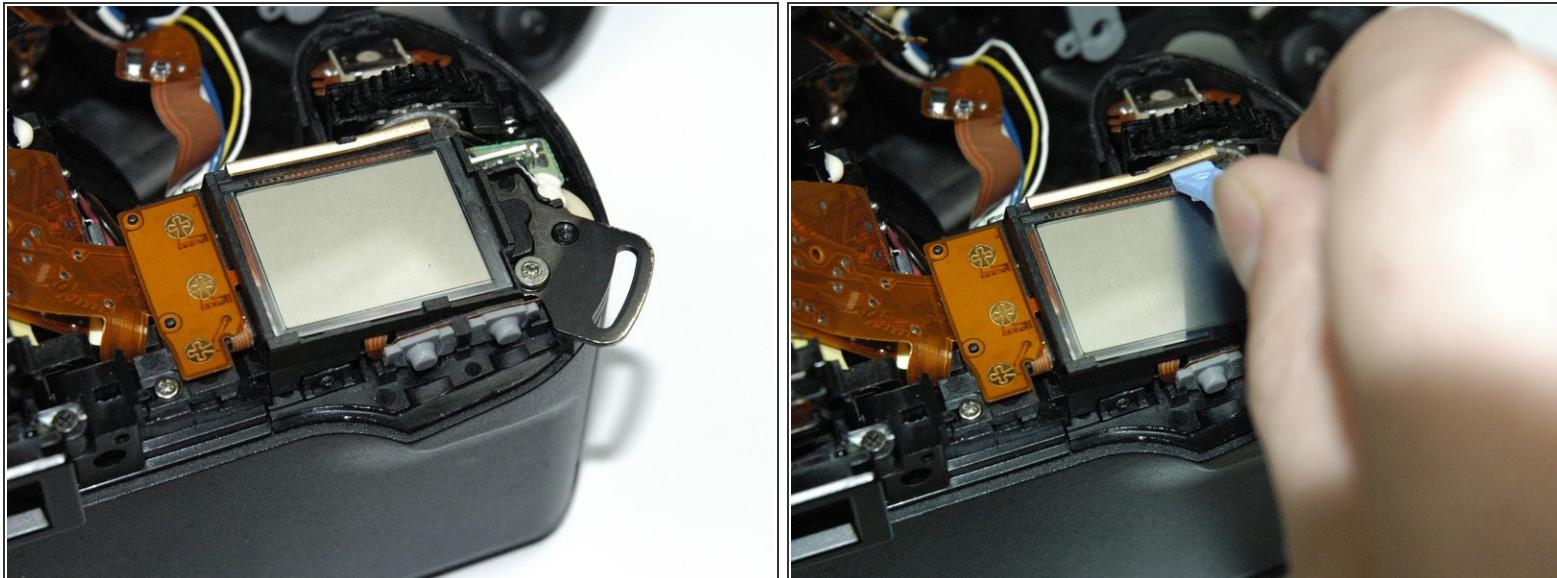

- Pry off the small metal brace holding the LCD screen. (Push forward and slide toward the center)

Step 9



- Lift out the LCD screen.

To reassemble your device, follow these instructions in reverse order.