



Canon EOS Rebel T1i Rubber Grip Replacement

If the rubber grip on the camera is dirty or has fallen off, follow these instructions to remove the grip.

Written By: Jonathan Lin



This document was generated on 2019-09-18 03:37:36 PM (MST).

INTRODUCTION

If the rubber grip on the camera is dirty or has fallen off, follow these instructions to remove the grip.



TOOLS:

- Pry Bar (1)



PARTS:

- Canon T1i Rubber Grip (1)

Step 1 — Rubber Grip



- Use a plastic prying tool to slowly pry the rubber grip from the top right corner, and slowly work the tool down the rubber grip.
- Gently remove the rubber grip by pulling the adhesive side up and away from the camera.

To reassemble your device, follow these instructions in reverse order.